

The Soil and Water Integrated Model (SWIM) User Manual

Valentina Krysanova, Frank Wechsung and the SWIM development team

Saturday 28th March, 2026

Abstract

Development of integrated tools for hydrological/vegetation/water quality modelling at the river basin scale is motivated by water resources management in densely populated agricultural areas (water pollution problem), arid and semi-arid regions (water scarcity), and mountainous and loess regions (erosion problem). The other motivation is an ongoing climate change and land use/land cover change. Development of water resources in the conditions of global change requires an understanding and adequate representation in models of basic hydrologic and related processes at mesoscale and large scale, i.e. in river basins of hundreds, thousands or tens of thousands of square kilometers.

The model SWIM (**S**oil and **W**ater **I**ntegrated **M**odel) was developed in order to provide a comprehensive GIS-based tool for hydrological and water quality modelling in mesoscale and large river basins (from 100 to 10,000 km²), which can be parameterised using regionally available information. The model was developed for the use mainly in Europe and temperate zone, though its application in other regions is possible as well. SWIM is based on two previously developed tools - SWAT and MATSALU (see more explanations in Section 1.1).

The model integrates hydrology, vegetation, erosion, and nutrient dynamics at the watershed scale. SWIM has a three-level disaggregation scheme 'basin – sub-basins – hydrotopes' and is coupled to the Geographic Information System GRASS (GRASS, 1993). A robust approach is suggested for the nitrogen and phosphorus modelling in mesoscale watersheds. SWIM runs under the UNIX environment.

Model test and validation were performed sequentially for hydrology, crop growth, nitrogen and erosion in a number of mesoscale watersheds in the German part of the Elbe drainage basin. A comprehensive scheme of spatial disaggregation into sub-basins and hydrotopes combined with reasonable restriction on a sub-basin area allows performing the assessment of water resources and water quality with SWIM in mesoscale river basins. The modest data requirements represent an important advantage of the model. Direct connection to land use and climate data provides a possibility to use the model for analysis of climate change and land use change impacts on hydrology, agricultural production, and water quality.

However, the model is quite complicated, and it cannot be used as a black box. Understanding of the model code is a prerequisite for successful applications.

Contents

1	Model Description	7
1.1	Model History	7
1.2	General Description	11
1.2.1	Model Objectives	11
1.2.2	Processes Described in the Model	11
1.2.3	Spatial Disaggregation	12
1.2.4	GIS Interface	15
1.2.5	Modelling Procedure	16
1.3	Overview of the Model Components	16
1.3.1	Hydrological Processes	16
1.3.2	Crop / Vegetation Growth	17
1.3.3	Nutrient Dynamics	18
1.3.4	Erosion	20
1.3.5	River Routing	20
2	Mathematical Description of the Model Components	23
2.1	Hydrological Processes	23
2.1.1	Snow Melt	24
2.1.2	Surface Runoff	24
2.1.3	Peak Runoff Rate	29
2.1.4	Percolation	32
2.1.5	Lateral Subsurface Flow	34
2.1.6	Potential Evaporation	35
2.1.7	Soil Evaporation and Plant Transpiration	38
2.1.8	Groundwater Flow	39
2.1.9	Transmission Losses	41
2.2	Crop / Vegetation Growth	43
2.2.1	Crop Growth	43
2.2.2	Growth Constraint: Water Stress	46

2.2.3	Growth Constraint: Temperature Stress	47
2.2.4	Growth Constraints: Nutrient Stress	48
2.2.5	Crop Yield and Residue	49
2.2.6	Adjustment of Net Photosynthesis to Altered CO ₂	51
2.2.7	Adjustment of Evapotranspiration to Altered CO ₂	54
2.3	Nutrient Dynamics	57
2.3.1	Soil Temperature	57
2.3.2	Fertilization and Input with Precipitation	60
2.3.3	Nitrogen Mineralisation	60
2.3.4	Phosphorus Mineralisation	63
2.3.5	Phosphorus Sorption / Adsorption	63
2.3.6	Denitrification	64
2.3.7	Nutrient Uptake by Crops	65
2.3.8	Nitrate Loss in Surface Runoff and Leaching to Groundwater	66
2.3.9	Soluble Phosphorus Loss in Surface Runoff	67
2.4	Erosion	70
2.4.1	Sediment Yield	70
2.4.2	Organic Nitrogen Transport by Sediment	72
2.4.3	Phosphorus Transport by Sediment	73
2.5	River Routing	74
2.5.1	Flow Routing	74
2.5.2	Sediment Routing	76
2.5.3	Nutrient Routing	77
3	SWIM Code Structure and Input Parameters	79
3.1	Structure of the SWIM/GRASS Interface	79
3.2	Structure of the SWIM Simulation Part	89
3.2.1	Files and their Functions	89
3.2.2	Subroutines and their Functions	94
3.2.3	Main Administrative Subroutines and the Parameter Read Part	99
3.3	Input and Output Files	105
3.3.1	catchment	106
3.3.2	climate	106
3.3.3	crop	107
3.3.4	crop_management	109
3.3.5	discharge	110
3.3.6	hydrotope	110

3.3.7	landuse	110
3.3.8	management	111
3.3.9	reservoir	112
3.3.10	reservoir_monthly	113
3.3.11	reservoir_storage	113
3.3.12	soil	113
3.3.13	subbasin	114
3.3.14	subbasin_climate_grid	114
3.3.15	subbasin_routing	114
3.4	Input Parameters	123
3.4.1	catchment_parameters	124
3.4.2	crop_parameters	124
3.4.3	erosion_parameters	124
3.4.4	evapotranspiration_parameters	125
3.4.5	groundwater_parameters	125
3.4.6	input_parameters	125
3.4.7	landuse_parameters	125
3.4.8	management_parameters	126
3.4.9	nutrient_parameters	126
3.4.10	output_parameters	127
3.4.11	reservoir_parameters	127
3.4.12	river_parameters	128
3.4.13	snow_parameters	128
3.4.14	soil_parameters	129
3.4.15	subbasin_parameters	129
3.4.16	time_parameters	130
3.4.17	vegetation_parameters	130
3.4.18	INPUT FILE - .cod	130
3.4.19	INPUT FILE - .fig	135
3.4.20	INPUT FILE - .bsn	136
3.4.21	INPUT FILE - .str	140
3.4.22	INPUT FILE - sub-prst.dat	143
3.4.23	INPUT FILE - crop.dat	143
3.4.24	INPUT FILE - wgen.dat	150
3.4.25	INPUT FILE - .sub	152
3.4.26	INPUT FILE - .gw	155

3.4.27	INPUT FILE - .rte	156
3.4.28	INPUT FILE - wstor.dat	159
3.4.29	INPUT FILE - soilNN.dat	159
3.4.30	BLOCK DATA in the file init.f	163
4	How to Prepare Data and Run SWIM	167
4.1	Spatial Data Preparation	167
4.1.1	GIS Data Overview	168
4.1.2	How to Choose Spatial Resolution?	171
4.1.3	How to Choose the Average Sub-basin Area?	173
4.1.4	GRASS GIS Overview	173
4.1.5	Useful GRASS Programs and Functions	175
4.1.6	Map Export from ARC/INFO to ASCII Format	177
4.1.7	Watershed Analysis Program r.watershed	180
4.1.8	DEMO Data Set	181
4.2	SWIM/GRASS Interface	189
4.3	Relational Data Preparation	194
4.3.1	An Overview of Relational Data	194
4.3.2	Climate Data	195
4.3.3	Soil Data	198
4.3.4	Crop Parameters and Crop Management Data	203
4.3.5	Hydrological and water quality data	205
4.3.6	DEMO data set	205
4.4	Model Run	206
4.4.1	Collect all input data	206
4.4.2	Modification of the code to adjust for specific input data	208
4.4.3	Sensitivity of the simulated river discharge to model parameters	210
4.4.4	Overview of SWIM applications	214
4.5	Output variables	236
5	APPENDIX I GRASS commands useful for the spatial data preparation for SWIM	237
6	New developments until 2015	249
6.1	Introduction	249
6.2	git SWIM repository	250
6.2.1	Clone repository from cluster to your local machine	250
6.2.2	Create a new branch or use the master (trunk version)?	250

6.2.3	Some other useful git commands	251
6.2.4	Working on the SWIM documentation	252
6.3	Input Files	252
6.3.1	swim.conf	252
6.3.2	Basin input file (*.bsn)	252
6.3.3	*.cod	256
6.3.4	file.cio	256
6.3.5	Structure file (*.str)	256
6.3.6	*.lut (formerly cntab.dat)	256
6.3.7	stat-outdat.csv	256
6.3.8	runoff.dat	257
6.4	Modules	258
6.4.1	Subcatchment calibration	258
6.4.2	Crop management and rotations	258
6.4.3	Reservoir Module	258
6.4.4	Snow Module	258
6.4.5	Calculation of radiation data	258
6.4.6	Transmission losses	258
6.5	The SWIM Code under Subversion	258
6.6	Miscellaneous changes	259
6.6.1	Subbasin fractional area	259
6.6.2	Conversion to double precision	259
	References	261

Chapter 1

Model Description

This chapter includes an overview about the model history (Section 1.1), the general description of the model objectives, processes, and the spatial disaggregation (Section 1.2.3), a short overview of the model components (Section 1.2.2), and a detailed mathematical description of the model components (Section 1.3).

1.1 Model History

The SWIM model is based on two previously developed tools – SWAT (Arnold, Allen, and Bernhardt, n.d.; Arnold et al., n.d.[a]), and MATSALU (Krysanova and Luik, n.d.[a],[b]).

SWAT is a continuous-time distributed simulation watershed model. It was developed to predict the effects of alternative management decisions on water, sediment, and chemical

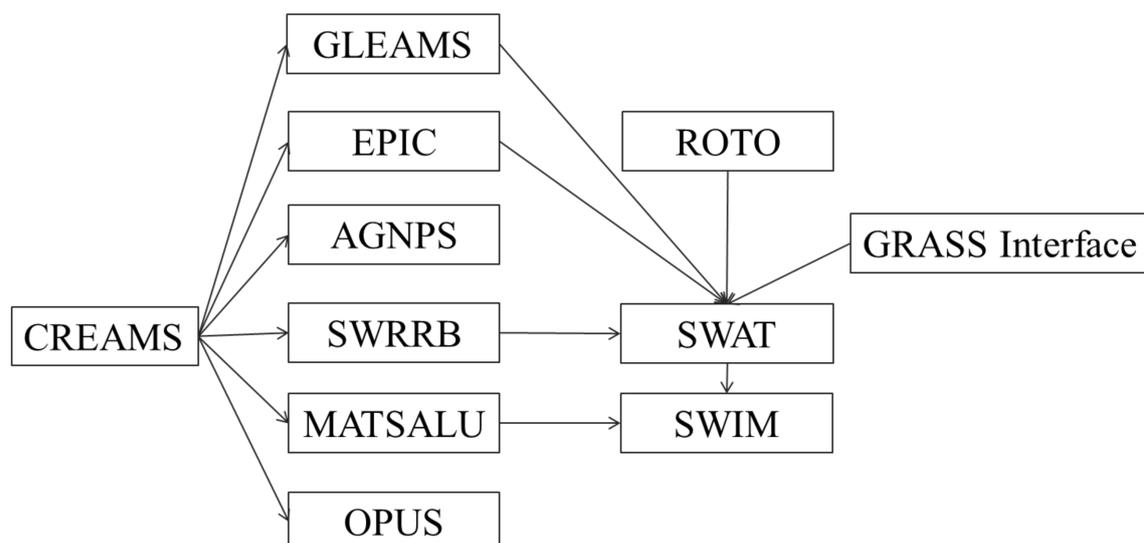


Figure 1.1: Model development based on the CREAMS model

yields with reasonable accuracy for ungauged rural basins. One of its attractive features is that there is a long period of modeling experience behind this model (see Figure 1.1).

In the mid-1970's in response to the Clean Water Act, the USDA Agricultural Research Service (ARS) assembled a team of interdisciplinary scientists to develop a process-based, nonpoint source simulation model. From that effort, a field scale model called CREAMS (Chemicals, Runoff, and Erosion from Agricultural Management Systems) was developed (Knisel, [n.d.](#)) to simulate the impact of land management on water, sediment, and nutrients.

In the 1980's, several models have been developed with origins from the CREAMS model. One of them, the GLEAMS model (Groundwater Loading Effects on Agricultural Management Systems) (Leonard, Knisel, and Still, [n.d.](#)) concentrated on pesticide and nutrient load to groundwater. Another model called EPIC (Erosion-Productivity Impact Calculator) (Williams and Renard, [n.d.](#); Williams, Renard, and Dyke, [n.d.](#)) was originally developed to simulate the impact of erosion on crop productivity and has now evolved into a comprehensive agricultural field scale model aimed in the assessment of agricultural management and nonpoint source loads. One more model for estimating the effects of different management practices on nonpoint source pollution from field-sized areas and also based on CREAMS is the OPUS model (Smith, [1992](#)). These three models can be applied for the field-scale areas or small homogeneous watersheds.

Other efforts involved modifying CREAMS to simulate complex watersheds with varying soils, land use, and management, which resulted in the development of several models, like AGNPS (Young et al., [n.d.](#)), SWRRB (Arnold et al., [n.d.\[b\]](#)) and MATSALU (Krysanova and Luik, [n.d.\[a\],\[b\]](#)).

AGNPS (AGricultural NonPoint Source) is a spatially detailed, single event (storm) model that subdivides complex watersheds into grid cells. SWRRB (Simulator for Water Resources in Rural Basins) was developed to simulate nonpoint source pollution from watersheds. It is a continuous time (daily time step) model that allows a basin to be subdivided into a maximum of ten sub-basins. To create SWRBB, the CREAMS model was modified for application to large, complex, rural basins.

The major changes involved were the following

- the model was expanded to allow simultaneous computations on several sub-basins;
- a better method was developed for predicting the peak runoff rate;
- a lateral subsurface flow component was added;
- a crop growth model was appended to account for annual variation in growth and its influence on hydrological processes;
- a pond/reservoir storage component was adjoined;

- a weather generator (rainfall, solar radiation, and temperature) was added for more representative weather inputs, both temporally and spatially;
- a module accounting for transmission losses was appended;
- a simple flood routing component was adjoined; and
- a sediment routing component was added to simulate sediment movement through ponds, reservoirs, streams, and valleys.

SWRRB was still limited to ten sub-basins and had a simplistic routing structure with outputs routed from the sub-basin outlets directly to the basin outlet. This problem led to the development of a model called ROTO (Routing Outputs to Outlet) (Arnold et al., n.d.[b]), which took outputs from SWRRB run on multiple sub-basins and routed the flows through channels and reservoirs. ROTO provided a reach routing approach and overcame the SWRRB sub-basin limitation by "linking" the sub-basin outputs.

Although the combination SWRRB + ROTO was quite effective, especially in comparison with CREAMS, the input and output of multiple files was cumbersome and required considerable computer storage. Limitations also occurred due to the fact that all SWRRB runs had to be made independently, and then the SWRRB outputs had to be input to ROTO for the channel and reservoir routing. Finally, the model called SWAT (Soil and Water Assessment Tool) was developed merging SWRRB and ROTO into one basin scale model. SWAT is a continuous time model working with daily time step, which allows a basin to be divided into hundreds or thousands of sub-watersheds or grid cells.

One more model, MATSALU, was developed in Estonia for the agricultural basin of the Matsalu Bay (which belongs to the Baltic Sea) with the area about 3,500 km² and the bay ecosystem in order to evaluate different management scenarios for the eutrophication control of the Bay. The model consists of four coupled submodels, which simulate 1) watershed hydrology, 2) watershed geochemistry, 3) river transport of water and nutrients, and 4) nutrient dynamics in the Bay ecosystem. Similar to SWRRB, its watershed components were essentially based on the CREAMS approach.

Spatial disaggregation in MATSALU is based on the overlay of three map layers: a map of elementary watersheds with an average area of 10 km², a land use map, and a soil map, to obtain so-called Elementary Areas of Pollution (EAP). Conceptually the EAPs are similar to Hydrologic Response Units (HRU) or hydrotopes. The three-level disaggregation scheme of MATSALU includes 'the basin – elementary sub-basins – EAPs'. Since the model was developed for the MATSALU watershed and connected to specific data sets, it is not sufficiently transferable.

Merging the two tools: SWAT and MATSALU, we tried to keep their best features and maintain their advantages (see Table 1.1). The model code was mostly based on SWAT. The more comprehensive three-level spatial disaggregation scheme from MATSALU was introduced into SWAT as an initial step. The next step was to adjust the model for the

use in European conditions, where data availability is different. This required some efforts in order to modify the data input. Besides, several modules were excluded from SWAT (pesticides, ponds/reservoirs, lake water quality) in order to avoid the overparametrization.

In parallel to the model development, its modules were sequentially tested in the Elbe basin, starting from hydrology. In contrast to SWAT, the hydrological module of SWIM has been validated with a daily time step. During the test, some subroutines were modified, some parameters were changed, and some components have been substituted.

Currently the model SWIM includes some common (or similar) modules of both predecessors and some new routines, like the flow routing, which is based on Muskingum method instead of ROTO in SWAT and Sant-Venant approach in MATSALU. The SWAT/GRASS interface was modified for SWIM.

Further development of the model is planned in the following directions:

- standardization of climate and crop management input data,
- addition of a module accounting for the carbon cycle in soil;
- addition of the lake and watershed modules;
- improving the description of lateral transport of nutrients; and

Table 1.1: Comparison of advantages and disadvantages of SWAT and MATSALU

Advantages	Disadvantages
SWAT	
<ul style="list-style-type: none"> • Coupling with GIS • Hydrological module tested in several meso- and macroscale watersheds • Vegetation module (simplified EPIC) is adopted for different crops and natural vegetation 	<ul style="list-style-type: none"> • Two-level disaggregation (basin and sub-basins) in SWAT-93 • Connection to specific American data sets (especially soil, climate) • SWAT as a long-term predictor was always tested and validated only with monthly time step
MATSALU	
<ul style="list-style-type: none"> • Three-level disaggregation scheme • N-module was tested in mesoscale watershed in connection with hydrology and river transport 	<ul style="list-style-type: none"> • Connection to specific Estonian data sets, not transferable to other basins • Four coupled models, not a coupled watershed model

- modifying SWIM/GRASS interface to include automatic connection of climate/precipitation stations to sub-basins.

1.2 General Description

1.2.1 Model Objectives

The objectives of the model are two-fold:

- to provide a comprehensive GIS-based tool for the coupled hydrological/vegetation/water quality modelling in mesoscale watersheds (from 100 up to 10,000 km²), which can be parameterised using regionally available data, and
- to enable the use of the model for analysis of climate change and land use change impacts on hydrological processes, agricultural production and water quality at the regional scale.

1.2.2 Processes Described in the Model

SWIM integrates hydrology, erosion, vegetation, and nitrogen/phosphorus dynamics at the river basin scale (Figure 1.2) and uses climate input data and agricultural management data as external forcing. The hydrological module is based on the water balance equation, taking into account precipitation, evapotranspiration, percolation, surface runoff, and subsurface runoff for the soil column subdivided into several layers.

The simulated hydrological system consists of four control volumes: the soil surface, the root zone, the shallow aquifer, and the deep aquifer (Figure 1.3). The percolation from the soil profile is assumed to recharge the shallow aquifer. Return flow from the shallow aquifer contributes to the streamflow. The soil column is subdivided into several layers in accordance with the soil data base. The water balance for the soil column includes precipitation, evapotranspiration, percolation, surface runoff, and subsurface runoff. The water balance for the shallow aquifer includes ground water recharge, capillary rise to the soil profile, lateral flow, and percolation to the deep aquifer.

The nitrogen module includes the following pools (Figure 1.4): nitrate nitrogen (NO₃-N), active and stable organic nitrogen, organic nitrogen in the plant residue, and the flows: fertilisation, input with precipitation, mineralisation, denitrification, plant uptake, wash-off with surface and subsurface flows, leaching to ground water, and loss with erosion. The phosphorus module includes the pools: labile phosphorus, active and stable mineral phosphorus, organic phosphorus, and phosphorus in the plant residue, and the flows: fertilisation, sorption/desorption, mineralisation, plant uptake, loss with erosion, wash-off with lateral

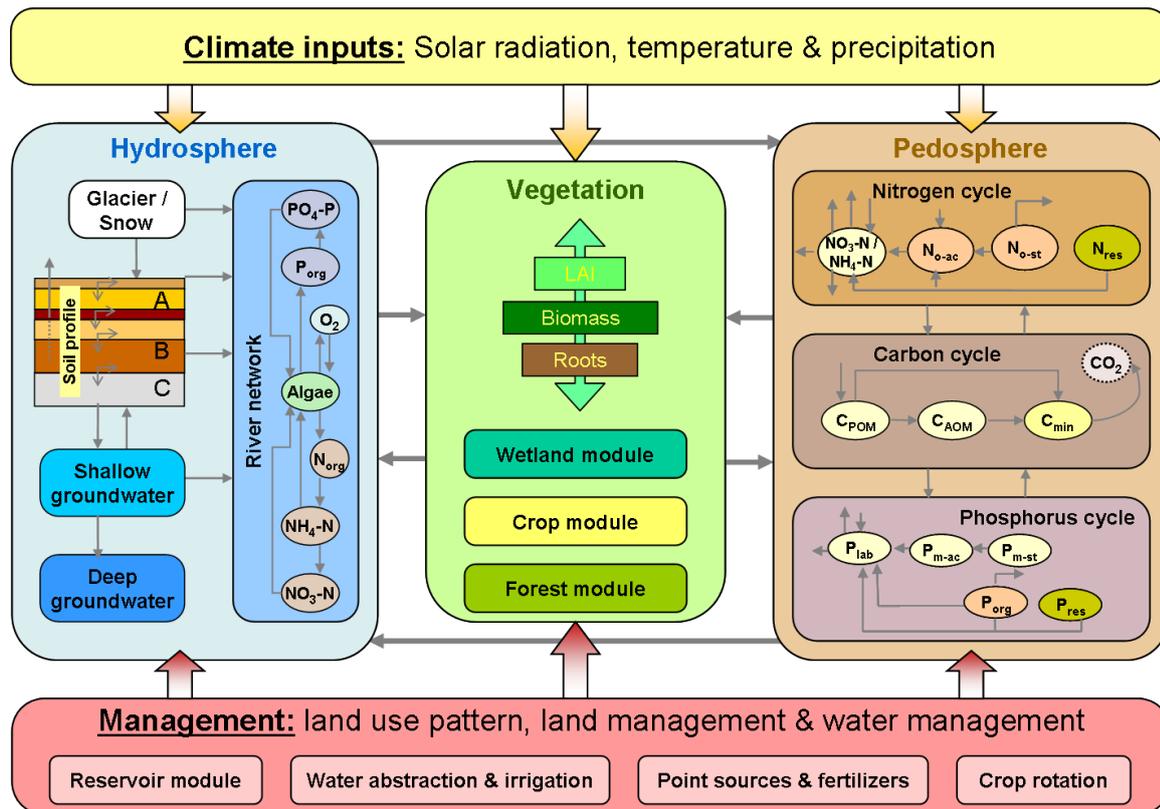


Figure 1.2: Flow chart of the SWIM model, integrating hydrological processes, crop/vegetation growth, and nutrient dynamics.

flow. The wash-off to surface water and leaching to groundwater are more important for nitrogen, while phosphorus is mainly transported with erosion.

The module representing crop and natural vegetation is an important interface between hydrology and nutrients. The same as in SWAT, a simplified EPIC approach (Williams, Renard, and Dyke, n.d.) is included in SWIM for simulating all arable crops considered (wheat, barley, corn, potatoes, alfalfa, and others), using unique parameter values for each crop, which were obtained in different field studies. Simplification relates mainly to less detailed description of phenological processes and lower requirements on the input information. This enables to simulate crop growth in a distributed modelling framework for quite large basins and regions. Non-arable and natural vegetation is included in the database through some 'aggregated' vegetation types like 'grass', 'pasture', 'forest', etc. and can be simulated as well.

1.2.3 Spatial Disaggregation

A three-level disaggregation scheme similar to that used in MATSALU is implemented in SWIM for mesoscale basins (Figure 1.5). The three-level disaggregation scheme in SWIM implies 1) basin, 2) sub-basins, and 3) hydrotopes inside sub-basins.

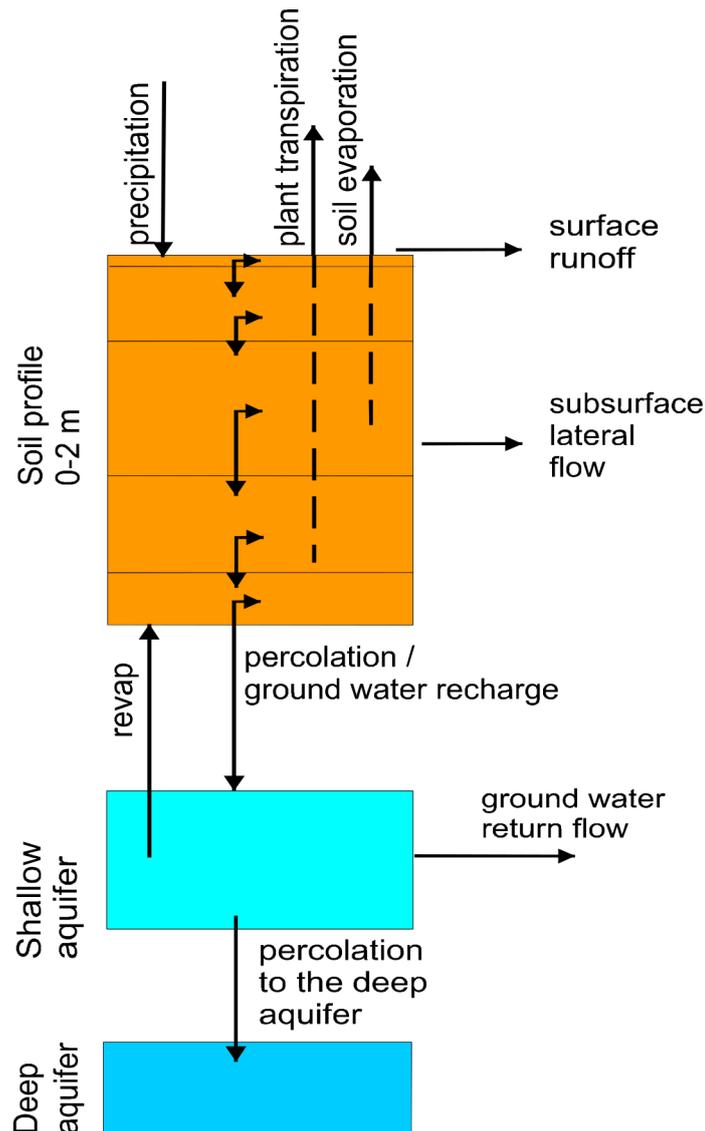


Figure 1.3: Flow chart of hydrological processes in soil as implemented in SWIM.

The idea is that a mesoscale basin (from 100 to 10,000 km²) is first subdivided into sub-basins of reasonable average area (see explanation in Section 3.1). This can be done using the *r.watershed* program of GRASS (or any other GIS with similar capabilities), which is applied to a Digital Elevation Model of the area with a certain threshold for the average size of the sub-basin.

After that the hydrotopes (or HRUs) are delineated within every sub-basin, based on land use and soil types. Normally, a hydrotope is a set of disconnected units in the sub-basin, which have a unique land use and soil type. A hydrotope can be assumed to behave in a hydrologically uniform way within the sub-basin.

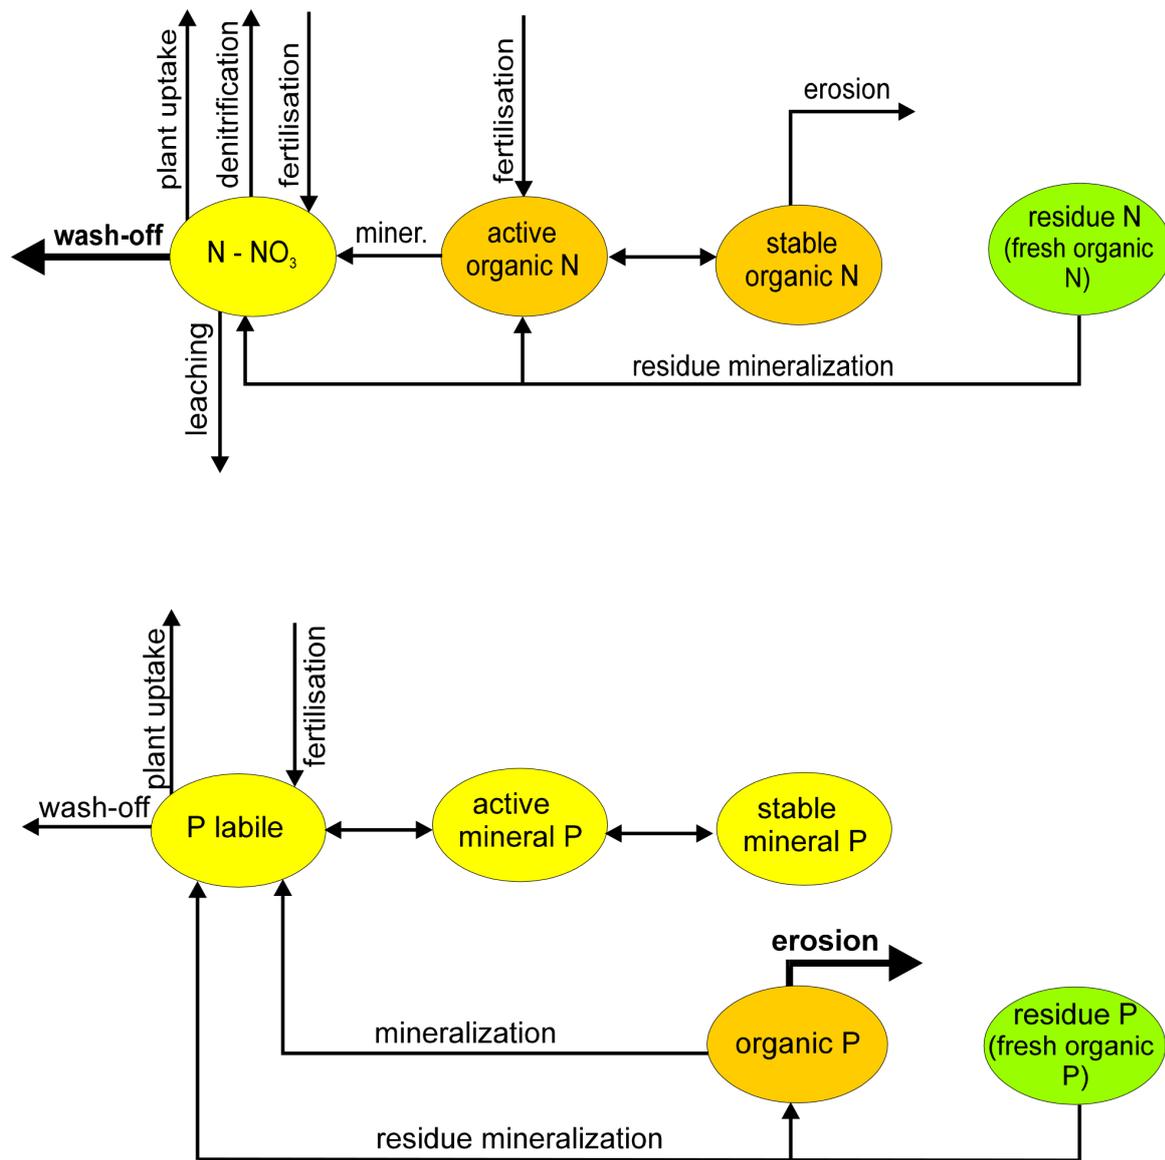


Figure 1.4: Nitrogen and phosphorus flow charts as implemented in SWIM.

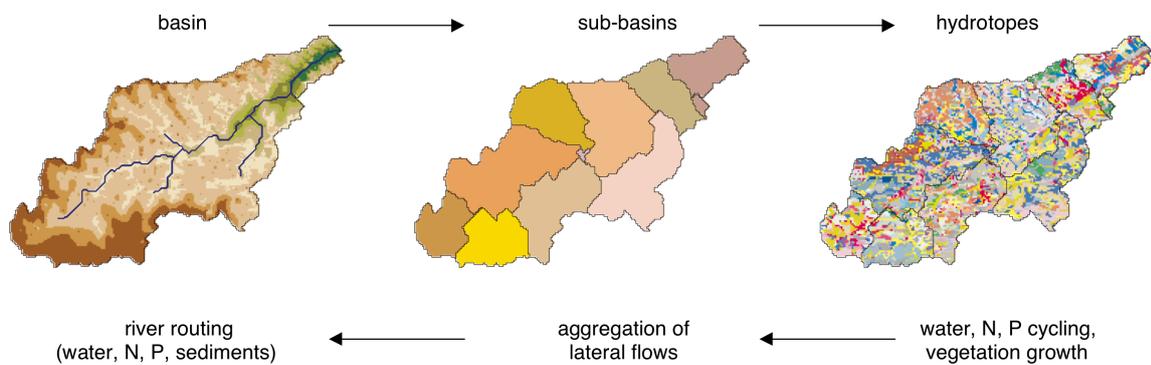


Figure 1.5: Three level disaggregation scheme 'basin - sub-basins – hydrotopes' implemented in SWIM.

1.2.4 GIS Interface

The SWAT/GRASS interface (Srinivasan et al., n.d.[a],[b]) was adopted and modified for SWIM to extract spatially distributed parameters of elevation, land use, soil types, and groundwater table. The interface creates a number of input files for the basin and sub-basins, including the hydrotope structure file (indicating sub-basin number, land use and soil type for every hydrotope) and the routing structure file (indicating how the sub-basins are connected via river network). To start the interface, the user must have at least four map layers of a basin. Three of them are the elevation map, the land use map, and the soil map. The fourth, sub-basin map, should be created in advance either using the *r.watershed* program of GRASS or by subdividing the basin in any other way.

Step 1. Sub-basin attributes This is the first step to be fulfilled. The program calculates area, resolution, and co-ordinate boundaries for the basin and each sub-basin, using a given sub-basin map. Further, the fraction of each sub-basin area to the basin area is calculated.

Step 2. Topographic attributes The program estimates the stream length, stream slope and geometrical dimensions using the *r.stream.att* tool (Srinivasan and Arnold, n.d.). The cross sectional dimensions (width and depth) of a stream are estimated using a neural network that is embedded in the interface, based on the drainage area and average elevation of a sub-basin (which should be “trained” on the regional data before use). The accumulation area and aspect are computed using the standard methods in GRASS. The weighted average method is used to estimate the overland slope and slope length. Finally, the channel USLE (Universal Soil Loss Equation) factors K and C are estimated using a standard table.

Step 3. Hydrotope structure The program defines the basin hydrotope structure by overlaying the sub-basin map with land use and soil layers. The structure file is created to run the model. Each line in the file describes the characteristics of one hydrotope - its sub-basin number, land use, and soil.

Step 4. Weather attributes The program selects the closest weather/precipitation station to every sub-basin. Then either actual weather information can be used, or the weather generator (in this case the long-term monthly statistical parameters must be available for precipitation and temperature for the station). This part of the interface has to be modified to provide more flexible input of climate information.

Step 5. Ground water attributes The ground water parameters are estimated for each sub-basin using the alpha layer (the reaction factor described in Section 2.1). This parameter defines the time lag needed to the groundwater flow as it leaves the shallow aquifer to reach the stream.

Step 6. Routing structure The interface creates the routing structure for the basin based on the elevation map. The routing structure is put in a special file, which

provides the information about when to add flows and route through sub-basins and when to add inflow (or subtract withdrawals) from any sub-basins.

Steps 1, 2, 5, 6 described above are the same as in the SWAT/GRASS interface, steps 3 and 4 are new, and some other steps from SWAT/GRASS (such as irrigation and nutrient attributes) were excluded.

1.2.5 Modelling Procedure

First, the SWIM/GRASS interface runs to produce necessary input files. After that the model itself can be run. The model operates on a daily time step. After the input parameters are read from files, the three-step modelling procedure is applied. First, water and nitrogen dynamics and crop/vegetation growth are calculated for every hydrotope. Then the outputs from the hydrotopes, especially the lateral water and nutrient flows, are averaged (area-weighted average) to estimate the sub-basin output. Finally, the routing procedure is applied to the sub-basin outputs, taking transmission losses into account.

1.3 Overview of the Model Components

1.3.1 Hydrological Processes

Snow melt The snow melt component is similar to that of the CREAMS model (Knisel, n.d.), according to a simple degree-day equation. Melted snow is then treated in the same way as rainfall for further estimation of runoff and percolation.

Surface runoff The runoff volume is estimated using a modification of the SCS curve number method (Arnold et al., n.d.[b]). Surface runoff is predicted as a nonlinear function of precipitation and a retention coefficient. The latter depends on soil water content, land use, soil type, and management. The curve number and the retention coefficient vary non-linearly from dry conditions at wilting point to wet conditions at field capacity and approach 100 and 0 respectively at saturation. The modification essentially reduced the empirism of the original curve number method. The reliability of the method has been proven by multiple validation of SWAT and SWIM in mesoscale basins. Nevertheless, there is a possibility to exclude the dependence of the retention coefficient on land use and soil, leaving the dependence on soil water content only, and assuming the same interval for all types of land use and soils.

Percolation The same storage routing technique as in SWAT is used to simulate water flow through soil layers in the root zone. Downward flow occurs when field capacity of the soil layer is exceeded, and as long as the layer below is not saturated. The flow rate is governed by the saturated hydraulic conductivity of the soil layer. Once water percolates

below the root zone, it becomes groundwater. Since the one day time interval is relatively large for soil water routing, the inflow is divided into 4 mm slugs in order to take into account the flow rate's dependence on soil water content. If the soil temperature in a layer is below 0°C, no percolation occurs from that layer. The soil temperature is estimated for each soil layer using the air temperature as a driver (Arnold et al., n.d.[b]).

Lateral subsurface flow Lateral subsurface flow is calculated simultaneously with percolation. The kinematic storage model developed by Sloan et al. (n.d.) is used to estimate the subsurface flow. The approach is based on the mass continuity equation in the finite difference form with the entire soil profile as the control volume. To account for multiple layers, the model is applied to each soil layer independently starting at the upper layer to allow for percolation from one soil layer to the next and percolation from the bottom soil layer past the soil profile (as recharge to the shallow aquifer).

Evapotranspiration Potential evapotranspiration is estimated using the Priestley-Taylor method (1972) that requires solar radiation and air temperature as input. It is possible to use the Penman-Monteith method (Monteith, n.d.[a]) instead if wind speed and relative air humidity data can be provided in addition. The actual evapotranspiration is estimated following the Ritchie (n.d.) concept, separately for soil and plants. Actual soil evaporation is computed in two stages. It is equal to the potential soil evaporation predicted by means of an exponential function of leaf area index (Richardson and Ritchie, n.d.) until the accumulated soil evaporation exceeds the upper limit of 6 mm. After that stage two begins. The actual soil evaporation is reduced and estimated as a function of the number of days since stage two began. Plant transpiration is simulated as a linear function of potential evapotranspiration and leaf area index. When soil water is limited, plant transpiration is reduced, taking into account the root depth.

Groundwater flow The groundwater model component is the same as in SWAT (see Arnold, Allen, and Bernhardt (n.d.)). The percolation from the soil profile is assumed to recharge the shallow aquifer. Return flow from the shallow aquifer contributes directly to the streamflow. The equation for return flow was derived from Smedema and Rycroft (n.d.), assuming that the variation in return flow is linearly related to the rate of change of the water table height. In a finite difference form, the return flow is a nonlinear function of ground water recharge and the reaction factor RF, the latter being a direct index of the intensity with which the groundwater outflow responds to changes in recharge. The reaction factor can be estimated for gaged sub-basins using the base flow recession curve.

1.3.2 Crop / Vegetation Growth

The crop model in SWIM and SWAT is a simplification of the EPIC crop model (Williams, Renard, and Dyke, n.d.). The SWIM model uses a concept of phenological crop development based on

- daily accumulated heat units;
- Monteith's approach (1977) for potential biomass;
- water, temperature, and nutrients stress factors; and
- harvest index for partitioning grain yield.

However, the more detailed approach implemented in EPIC for the root growth and nutrient cycling is not included in order to maintain a similar level of complexity of all submodels and to keep control on the model performance.

A single model is used for simulating all the crops and natural vegetation included in the crop database attached to the model. Annual crops grow from planting date to harvest date or until the accumulated heat units reach the potential heat units for the crop. Perennial crops maintain their root systems throughout the year, although the plants may become dormant after frost.

Phenological development of the crop is based on daily heat unit accumulation. Interception of photosynthetic active radiation is estimated with Beer's law equation (Monsi, n.d.) as a function of solar radiation and leaf area index. The potential increase in biomass is the product of absorbed PAR and a specific plant parameter for converting energy into biomass.

The potential biomass is adjusted daily if one of the four plant stress factors (water, temperature, nitrogen, and phosphorus) is less than 1.0 using the product of a minimum stress factor and the potential biomass. The water stress factor is defined as the ratio of actual to potential plant transpiration. The temperature stress factor is computed as a function of daily average temperature, optimal and base temperatures for plant growth. The N and P stress factors are based on the ratio of accumulated N and P to the optimal values.

The fraction of daily biomass growth partitioned to roots is estimated to range linearly between two fractions specified for each vegetation type - 0.4 at emergence to 0.2 at maturity. Root depth increases as a linear function of heat units and potential root depth. Leaf area index is simulated as a nonlinear function of accumulated heat units and crop development stages. Crop yield is estimated using the harvest index, which increases as a nonlinear function of heat units from zero at planting to the optimal value at maturity. The harvest index is affected by water stress in the second half of the growing period.

1.3.3 Nutrient Dynamics

Nitrogen mineralisation The nitrogen mineralisation model is a modification of the PA-PRAN mineralisation model (Seligman and van Keulen, 1981). Organic nitrogen associated with humus is divided into two pools: active or readily mineralisable organic nitrogen and

stable organic nitrogen. The model considers two sources of mineralisation: a) fresh organic nitrogen pool, associated with crop residue, and b) the active organic nitrogen pool, associated with the soil humus. Organic N flow between the active and stable organic nitrogen pools is governed by the equilibrium equation. Mineralisation of fresh organic nitrogen is a function of the C:N ratio, C:P ratio, soil temperature, and soil water content. The N mineralisation flow from residue is distributed between the mineral nitrogen (80%) and active organic nitrogen (20%) pools. Mineralisation of the active organic nitrogen pool depends on soil temperature and water content.

Phosphorus mineralization The phosphorus mineralisation model is structurally similar to the nitrogen mineralisation model. To maintain phosphorus balance at the end of a day, humus mineralisation is subtracted from the organic phosphorus pool and added to the mineral phosphorus pool, and residue mineralisation is distributed between the organic phosphorus pool (20%) and the labile phosphorus (80%).

Sorption / adsorption of phosphorus Mineral phosphorus is distributed between three pools: labile phosphorus, active mineral phosphorus, and stable mineral phosphorus. Mineral phosphorus flow between the active and stable mineral pools is governed by the equilibrium equation, assuming that the stable mineral pool is four times larger. Mineral phosphorus flow between the active and labile mineral pools is governed by the equilibrium equation as well, assuming equal distribution.

Denitrification Denitrification, as one of the microbial processes, is a function of temperature and water content. The denitrification occurs only in the conditions of oxygen deficit, which usually takes place when soil is wet. The denitrification rate is estimated as a function of soil water content, soil temperature, organic matter, a coefficient of soil wetness, and mineral nitrogen content. The soil water factor is an exponential function of soil moisture with an increasing trend when soil becomes wet.

Crop uptake of nutrients Crop uptake of nitrogen and phosphorus is estimated using a supply and demand approach. Six parameters are specified for every crop in the crop database, which describe: BN_1 and BP_1 - normal fraction of nitrogen and phosphorus in plant biomass excluding seed at emergence, BN_2 and BP_2 - at 0.5 maturity, and BN_3 and BP_3 - at maturity. Then the optimal crop N and P concentrations are calculated as functions of growth stage. The daily crop demand of nutrients is estimated as the product of biomass growth and optimal concentration in the plants. Actual nitrogen and phosphorus uptake is the minimum of supply and demand. The crop is allowed to take nutrients from any soil layer that has roots. Uptake starts at the upper layer and proceeds downward until the daily demand is met or until all nutrient content has been depleted.

Soluble nutrient loss in surface water and groundwater The amount of NO_3-N and soluble P in surface runoff is estimated considering the top soil layer only. Amounts of NO_3-N and soluble P in surface runoff, lateral subsurface flow and percolation are estimated as the products of the volume of water and the average concentration. Retention factor is

taken into account through transmission losses. Because phosphorus is mostly associated with the sediment phase, the soluble phosphorus loss is estimated as a function of surface runoff and the concentration of labile phosphorus in the top soil layer.

1.3.4 Erosion

Sediment yield is calculated for each sub-basin with the Modified Universal Soil Loss Equation (MUSLE, Williams and Berndt (n.d.)), almost the same as in SWAT. The equation for sediment yield includes the runoff factor, the soil erodibility factor, the crop management factor, the erosion control practice factor, and the slope length and steepness factor. The only difference from SWAT is that the surface runoff, the soil erodibility factor and the crop management factor are estimated for every hydrotope, and then averaged for the sub-basin (weighted areal average).

Estimation of the runoff factor requires the characteristics of rainfall intensity as described in Arnold et al. (n.d.[b]). To estimate the daily rainfall energy in the absence of time-distributed rainfall, the assumption about exponential distribution of the rainfall rate is made. This stochastic element is included to allow more realistic representation of peak runoff rates, given only daily rainfall and monthly rainfall intensity. This allows a simple substitution of rainfall rates into the equation. The fraction of rainfall that occurs during 0.5 hours is simulated stochastically, taking into account average monthly rainfall intensity for the area. Soil erodibility factor can be estimated from the texture of the upper soil layer. The slope length and steepness factor is estimated based on the Digital Elevation Model of a watershed by SWIM/GRASS interface for every sub-basin.

1.3.5 River Routing

The Muskingum flow routing method (Maidment, n.d.[b]) is used in SWIM. The Muskingum equation is derived from the finite difference form of the continuity equation and the variable discharge storage equation. The outflow rate for the reach is estimated using a recurrent equation with two parameters. They are the storage time constant for the reach, KST, and a dimensionless weighting factor, X. In physical terms, the parameter KST corresponds to an average reach travel time, and X indicates the relative importance of the inflow and outflow in determining the storage in the reach.

The sediment routing model consists of two components operating simultaneously – deposition and degradation in the streams. The approach is based on the estimation of the stream velocity in the channel as a function of the peak flow rate, the flow depth, and the average channel width. The sediment delivery ratio is estimated using a power function (power 1 to 1.5) of the stream velocity. If the sediment delivery ratio is less than 1, the deposition occurs in the stream, and degradation is zero. Otherwise, degradation is

estimated as a function of the sediment delivery ratio, the channel K factor (or the effective hydraulic conductivity of the channel alluvium), and the channel C factor.

Nitrate nitrogen and soluble phosphorus are considered in the model as conservative materials for the duration of an individual runoff event (Williams, [n.d.\[b\]](#)). Thus they are routed by adding contributions from all sub-basins to determine the basin load.

Chapter 2

Mathematical Description of the Model Components

In this chapter a mathematical description of all model components is given. First, hydrological processes are described in Section 2.1, followed by vegetation/crop growth processes (Section 2.2), nutrient dynamics processes (Section 2.3), and erosion (Section 2.4). After that a description of the channel routing processes is given in Section 2.5. This chapter is based mostly on the SWAT User Manual (Arnold et al., n.d.[a]) and the MATSALU model description (Krysanova and Luik, n.d.[a]).

2.1 Hydrological Processes

The hydrological submodel in SWIM is based on the following water balance equation

$$SW(t + 1) = SW(t) + PRECIP - Q - ET - PERC - SSF \quad (2.1)$$

where $SW(t)$ is the soil water content in the day t , $PRECIP$ – precipitation, Q – surface runoff, ET - evapotranspiration, $PERC$ - percolation, and SSF – subsurface flow. All values are the daily amounts in mm. Here the precipitation is an input, assuming that precipitation may differ between sub-basins, but it is uniformly distributed inside the subbasin. The melted snow is added to precipitation. The surface runoff, evapotranspiration, percolation below root zone and subsurface flow are described below. Some river basins, especially in the semiarid zone, have alluvial channels that abstract large quantities of stream flow. The transmission losses reduce runoff volumes when the flood wave travels downstream. This reduction is taken into account by a special module that accounts for transmission losses.

2.1.1 Snow Melt

If air temperature is below 0, precipitation occurs as snow, and snow is accumulated. If snow is present on soil, it may be melted when the temperature of the second soil layer exceeds 0°C (according to the model requirements, the depth of the first soil layer must be always set to 10 mm). The approach used is similar to that of CREAMS model (Knisel, n.d.). Snow is melted as a function of the snow pack temperature in accordance with the equation

$$\begin{aligned} SML &= 4.57 * TMX \\ 0. &\leq SML \leq SNO \end{aligned} \tag{2.2}$$

where SML is the snowmelt rate in mm d⁻¹, SNO is the snow in mm of water, TMX is the maximum daily air temperature in °C. Melted snow is treated the same as rainfall for estimating runoff volume and percolation, but rainfall energy is set to 0.

2.1.2 Surface Runoff

The model takes the daily rainfall amounts as input and simulates surface runoff volumes and peak runoff rates. Runoff volume is estimated by using a modification of the Soil Conservation Service (SCS) curve number technique (Arnold et al., n.d.[b]; USDA, n.d.[a]). The technique was selected for use in SWIM as well as in SWAT due to several reasons:

- (a) it is reliable and has been used for many years in the United States and worldwide;
- (b) the required inputs are usually available;
- (c) it relates runoff to soil type, land use, and management practices; and
- (d) it is computationally efficient.

The use of daily precipitation data is a particularly important feature of the technique because for many locations, and especially at the regional scale, more detailed precipitation data with time increments of less than one day are not available. Surface runoff is estimated from daily precipitation taking into account a dynamic retention coefficient SMX by using the SCS curve number equation

$$\begin{aligned} Q &= \frac{(PRECIP - 0.2 * SMX)^2}{(PRECIP + 0.8 * SMX)}, \quad PRECIP > 0.2 * SMX \\ Q &= 0, \quad PRECIP \leq 0.2 * SMX \end{aligned} \tag{2.3}$$

where Q is the daily runoff in mm, PRECIP is the daily precipitation in mm, and SMX is a retention coefficient. The retention coefficient SMX varies a) spatially, because soils, land use, management, and slope vary, and b) temporally, because soil water content is changing. The retention coefficient SMX is related to the curve number CN by the SCS equation

$$SMX = 254 * \left(\frac{100}{CN} - 1 \right) \quad (2.4)$$

To illustrate the approach, Figure 2.1 shows estimation of surface runoff Q from daily precipitation with (Equation (2.3)) and (Equation (2.4)) assuming different CN values.

The parameter CN is defined in three variations:

- for moisture condition 1 (or dry conditions) as CN_1
- for moisture condition 2 (or average conditions) as CN_2 and
- for moisture condition 3 (or wet conditions) as CN_3 .

CN_2 can be obtained from the SCS hydrology handbook (USDA, n.d.[a]) for a set of land use types, hydrologic soil groups and management practices (see also Tab. 3.20 in Chapter 3 of the Manual). The corresponding values of CN_1 and CN_3 are also tabulated in the handbook. For computing purposes, CN_1 and CN_3 were related to CN_2 with the equations (see also Figure 2.2)

$$CN_1 = CN_2 - \frac{20 * (100 - CN_2)}{100 - CN_2 + \exp \left[2.533 - 0.0636 * (100 - CN_2) \right]} \quad (2.5)$$

or an approximation of Equation (2.5):

$$CN_1 = -16.911 + 1.3481 * CN_2 - 0.013793 * CN_2^2 + 0.00011772 * CN_2^3 \quad (2.6)$$

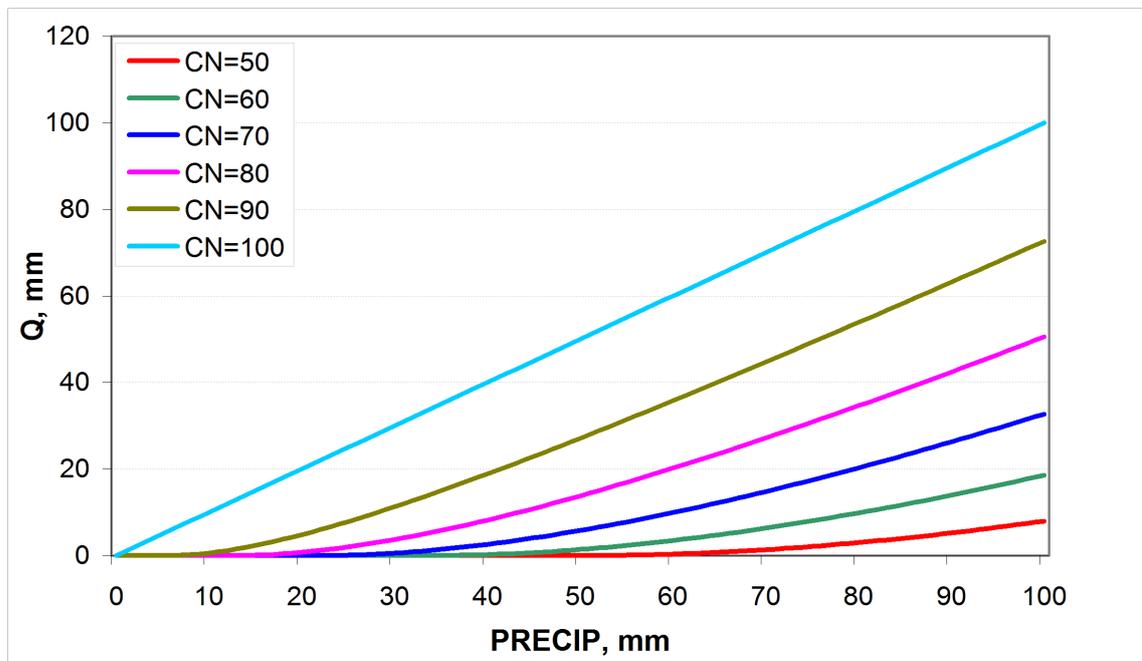


Figure 2.1: Estimation of surface runoff, Q , from daily precipitation, PRECIP, for different values of CN (Equation (2.3) and Equation (2.4))

and

$$CN_3 = CN_2 * \exp\left[0.00673 * (100 - CN_2)\right] \quad (2.7)$$

The values of CN_1 , CN_2 and CN_3 are related to land use types, hydrologic soil groups and management practices. An additional assumption was made to relate curve numbers to slope. Namely, it was assumed that the CN_2 value is appropriate for a 5% slope, the following equation was derived (Arnold et al., n.d.[a]) to adjust it for lower and higher slopes (see also Figure 2.3):

$$CN_{2S} = CN_2 + \frac{CN_3 - CN_2}{3} * (1 - 2 * \exp(-13.86 * SS)) \quad (2.8)$$

where CN_{2S} is the adjusted CN_2 value, and SS is the slope steepness in $m\ m^{-1}$. The retention coefficient is changing dynamically due to fluctuations in soil water content according to the equation

$$SMX = SMX_1 * \left(1 - \frac{SW}{SW + \exp(WF_1 - WF_2 * SW)}\right) \quad (2.9)$$

where SMX_1 is the value of SMX associated with CN_1 , SW is the soil water content in mm, and WF_1 and WF_2 are shape parameters. Figure 2.4 depicts the relationships between the retention coefficient SMX and the curve number CN , on one hand, and the relative soil water content, on the other hand.

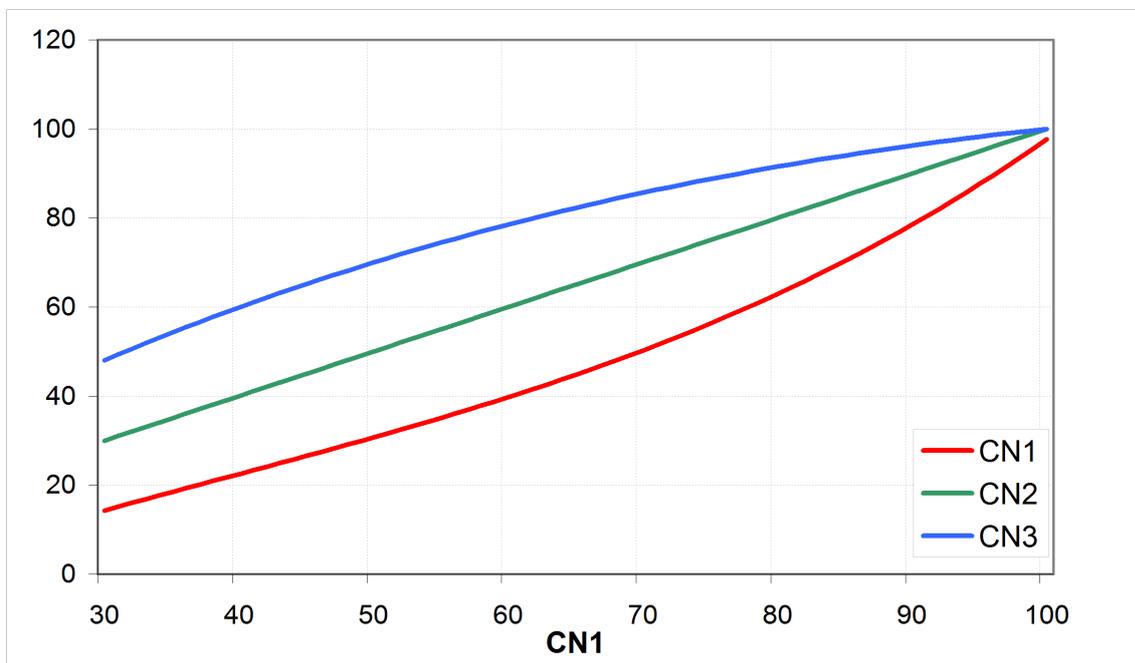


Figure 2.2: Correspondence between CN_1 , CN_2 and CN_3 (Equation (2.6), Equation (2.7))

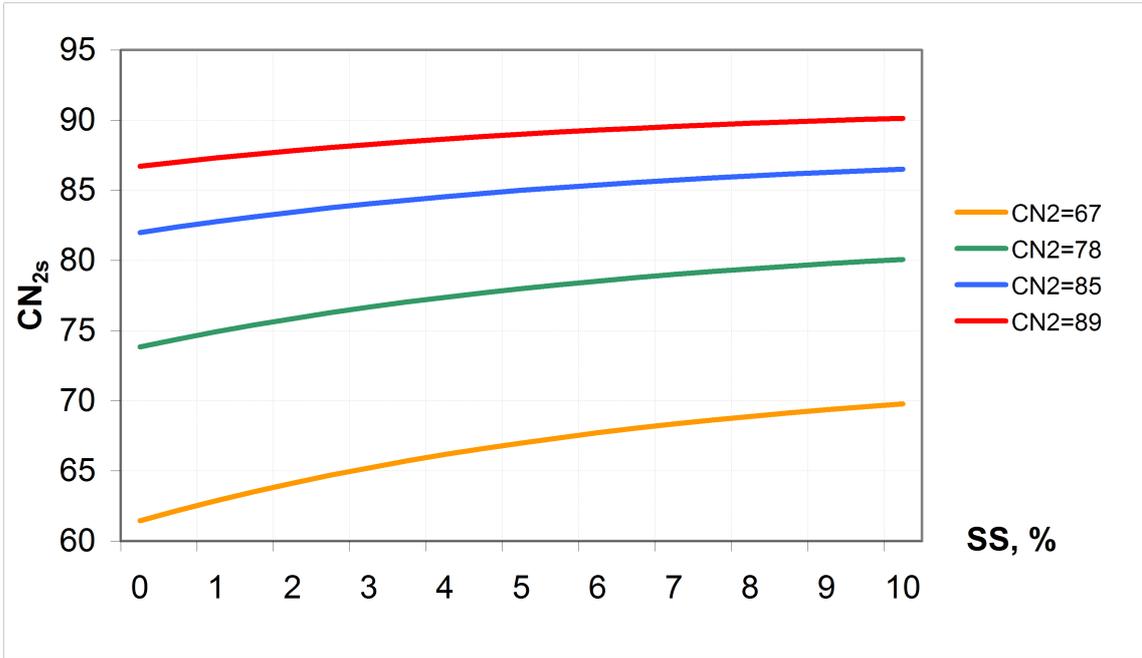


Figure 2.3: Adjustment of curve number CN_2 to the slope (Equation (2.8)) for some typical values of $CN_2 = 67, 78, 85,$ and $89,$ corresponding to straight row crop and four hydrologic groups A, B, C, and D, respectively

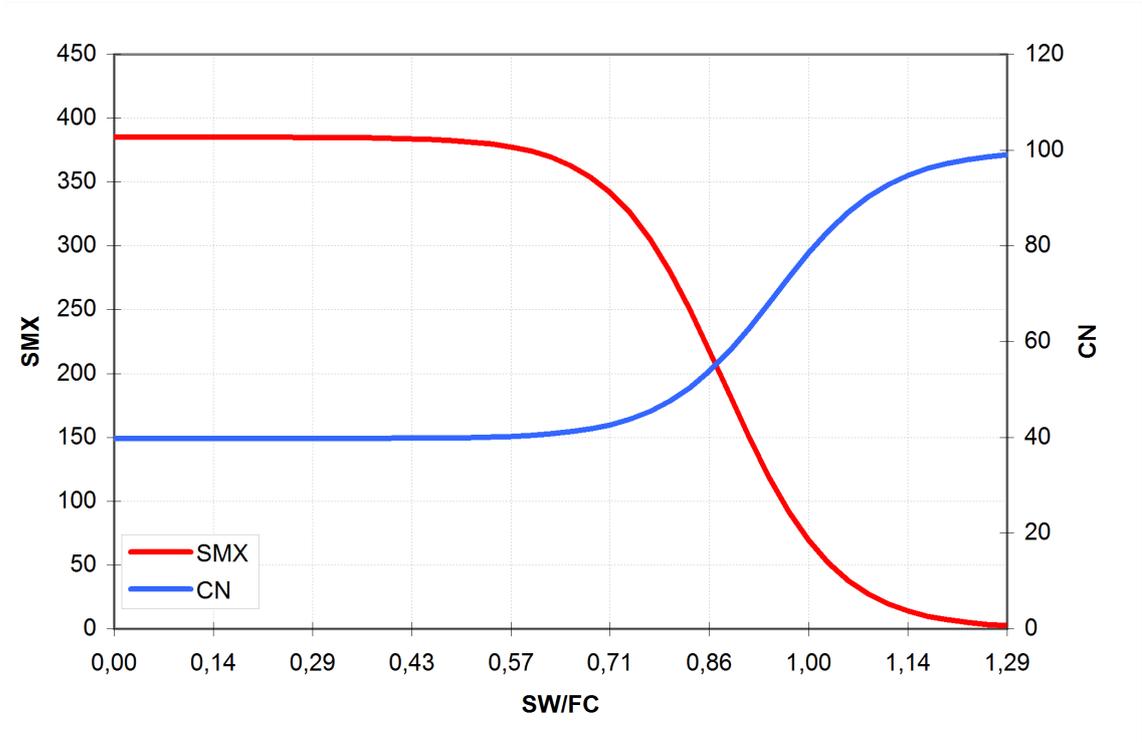


Figure 2.4: Retention coefficient SMX and curve number CN as functions of soil water content SW (Equation (2.9) and Equation (2.4)) assuming $CN_2 = 60, WP = 5 \text{ mm mm}^{-1}, FC = 35 \text{ mm mm}^{-1}, PO = 45 \text{ mm mm}^{-1}$

The following assumptions are made for the retention coefficient SMX

$$\begin{aligned}
 SMX &= SMX_1 & \text{if } SW &= WP, \\
 SMX &= SMX_2 & \text{if } FCC &= 0.7, \\
 SMX &= SMX_3 & \text{if } SW &= FC, \\
 SMX &= 2.54 & \text{if } SW &= PO
 \end{aligned}
 \tag{2.10}$$

where SMX_2 is the retention parameter corresponding to CN_2 , SMX_3 is the retention parameter corresponding to CN_3 , WP is the wilting point water content in $mm\ mm^{-1}$, FC is the field capacity water content in $mm\ mm^{-1}$, PO is the soil porosity in $mm\ mm^{-1}$, and FCC is the fraction of field capacity defined with the equation

$$FCC = \frac{SW - WP}{FC - WP}
 \tag{2.11}$$

The assumption that $SMX = 2.54$ in (Equation (2.10)) means that at full saturation $CN = 99$ (approaches its maximum). Values for WF_1 and WF_2 are obtained from a simultaneous solution of Equation (2.8) according to the assumptions (Equation (2.10)) as following

$$WF_1 = \ln\left(\frac{FC}{1 - SMX_3/SMX_1} - FC\right) + FC * WF_2
 \tag{2.12}$$

$$WF_2 = \frac{\ln\left(\frac{FC}{1 - SMX_3/SMX_1} - FC\right) - \ln\left(\frac{PO}{1 - 2.54/SMX_1} - PO\right)}{PO - FC}
 \tag{2.13}$$

The value of FCC defined in Equation (2.11) represents soil water uniformly distributed through the root zone of soil or the upper 1m of soil. Runoff estimates can be improved if the depth distribution of water in soil is known. For example, water distributed near the soil surface results in more runoff than the same volume of water uniformly distributed throughout the soil profile. Since SWIM estimates water content of each soil layer daily, the depth distribution is available. The effect of depth distribution on runoff is expressed in the depth weighting function

$$FCC^* = \frac{\sum_{i=1}^M \left(FCC_i * \frac{Z_i - Z_{i-1}}{Z_i} \right)}{\sum_{i=1}^M \left(\frac{Z_i - Z_{i-1}}{Z_i} \right)}, \quad Z_1 \leq 1.0m
 \tag{2.14}$$

where FCC^* is the depth-weighted FCC value for use in (Equation (2.9)), Z_i is the depth to the bottom of soil layer i in mm , and M is the number of soil layers. Equation 14 performs two functions:

- a) it reduces the influence of lower layers because FCC_i is divided by Z_i and
- b) it gives proper weight to thick layers relative to thin layers because FCC is multiplied by the layer thickness.

There is also a possibility for estimating runoff from frozen soil. If the temperature of the

second soil layer is less than 0°C, the retention coefficient is reduced by using the equation

$$SMX_{\text{froz}} = SMX * \left(1. - \exp(-0.000862 * SMX) \right) \quad (2.15)$$

where SMX_{froz} is the retention coefficient for frozen ground. Equation (2.15) increases runoff for frozen soils, but allows significant infiltration when soil is dry.

2.1.3 Peak Runoff Rate

The peak runoff rate is estimated in SWIM for sub-basins using the modified Rational formula (Arnold et al., n.d.[a]; Maidment, n.d.[b]). A stochastic element is included in the Rational formula to allow a more realistic simulation of peak runoff rates, given only daily rainfall and monthly rainfall intensity. The Rational formula can be written in the form

$$PEAKQ = \frac{RUNC * RI * A}{360} \quad (2.16)$$

where PEAKQ is the peak runoff rate in $\text{m}^3 \text{s}^{-1}$, RUNC is a dimensionless runoff coefficient expressing the watershed infiltration characteristics, RI is the rainfall intensity in mm h^{-1} for the watershed's time of concentration, and A is the drainage area in ha.

The runoff coefficient can be calculated for each day from the amounts of precipitation and runoff as following

$$RUNC = \frac{Q}{PRECIP} \quad (2.17)$$

Since daily precipitation is input and Q is calculated with Equation (2.3), RUNC can be estimated directly.

Rainfall intensity can be expressed as

$$RI = \frac{PRECIP_{\text{tC}}}{TC} \quad (2.18)$$

where TC is the watershed's time of concentration in h, and $PRECIP_{\text{tC}}$ is the amount of rainfall in mm during the time of concentration.

The value of $PRECIP_{\text{tC}}$ can be estimated by developing a relationship with total daily PRECIP. Generally, $PRECIP_{\text{tc}}$ and $PRECIP_{24}$ (24-h duration is appropriate for the daily time step model) are proportional for various frequencies.

Thus, a dimensionless parameter α that expresses the proportion of total daily rainfall that occurs during time of concentration can be introduced. Then

$$PRECIP_{\text{tC}} = \alpha * PRECIP_{24} \quad (2.19)$$

The equation for the peak runoff rate is obtained by substituting Equation (2.17), Equation (2.18), and Equation (2.19) into Equation (2.16):

$$PEAKQ = \frac{\alpha * Q * A}{360 * TC} \quad (2.20)$$

The time of concentration can be estimated by adding the surface and channel flow times

$$TC = TC_{ch} + TC_{ov} \quad (2.21)$$

where TC_{ch} is the time of concentration for channel flow in h, and TC_{ov} is the time of concentration for overland surface flow in h.

The time of concentration for channel flow can be calculated by the equation

$$TC_{ch} = \frac{CHFL}{3.6 * CHV} \quad (2.22)$$

where CHFL is the average channel flow length for the basin in km and CHV is the average channel velocity in $m s^{-1}$.

The average channel flow length can be estimated by the equation

$$CHFL = \sqrt{CHL * CHL_{cen}} \quad (2.23)$$

where CHL is the channel length from the most distant point to the watershed outlet in km and CHL_{cen} is the distance from the outlet along the channel to the watershed centroid in km. We can assume that $CHL_{cen} = 0.5 CHL$.

Average velocity can be estimated by using Manning's equation and assuming a trapezoidal channel with 2:1 side slopes and a 10:1 bottom width to depth ratio. Substitution of these estimated and assumed values, and conversion of units gives the following estimation of the time of concentration for channel

$$TC_{ch} = \frac{0.62 * CHL * CHN^{0.75}}{(QAV * A)^{0.25} * CHS^{0.375}} \quad (2.24)$$

where CHN is Manning's n, QAV is the average flow rate in $mm h^{-1}$, and CHS is the average channel slope in $m m^{-1}$.

The average flow rate is obtained from the estimated average flow rate from a unit source in the watershed (1 ha area) and the relationship

$$QAV = QAV_0 * A^{-0.5} \quad (2.25)$$

where QAV_0 is the average flow rate from a 1 ha area in $mm h^{-1}$.

Substitution of equation 25 into equation 24 gives the final equation for TC_{ch} :

$$TC_{ch} = \frac{0.62 * CHL * CHN^{0.75}}{QAV_0^{0.25} * A^{0.125} * CHS^{0.375}} \quad (2.26)$$

A similar approach is used to estimate the time of concentration for overland surface flow

$$TC_{ov} = \frac{SL}{3600 * SV} \quad (2.27)$$

where SL is the surface slope length in m and SV is the surface flow velocity in $m s^{-1}$.

The surface flow velocity is estimated applying Manning's equation to a strip 1 m wide down

the slope length, and assuming that flow is concentrated into a small trapezoidal channel with 1:1 side slopes and 5:1 bottom width to depth ratio as following

$$SV = \frac{0.00748 * FD^{0.666} * SS^{0.5}}{SN} \quad (2.28)$$

where SV is the surface flow velocity in $m^3 s^{-1}$, FD is flow depth in m , SS is the land surface slope in $m m^{-1}$, and SN is Manning's roughness coefficient 'n' for the surface. The average flow depth FD is calculated from Manning's equation as a function of flow rate

$$FD = \left(\frac{QAV_0 * SN}{5.025 * SS^{0.5}} \right)^{0.375} \quad (2.29)$$

where AVQ_0 is the average flow rate in $m^3 s^{-1}$. Substitution of equations Equation (2.28) and Equation (2.29) into Equation (2.27) gives

$$TC_{ov} = \frac{0.0556 * SL * SN^{0.75}}{QAV_0^{0.25} * SS^{0.375}} \quad (2.30)$$

The average flow rate from a unit source area in the basin is estimated with the equation

$$QAV_0 = \frac{Q}{DUR} \quad (2.31)$$

where the rainfall duration DUR (in h) is calculated using the equation

$$DUR = \frac{2.303}{-\ln(1. - \alpha_{0.5})} \quad (2.32)$$

where $\alpha_{0.5}$ is the fraction of rainfall that occurs during 0.5 h. It is calculated with Equation (2.19) using $PRECIP_{0.5}$ instead of $PRECIP_{tC}$. Equation (2.32) is derived assuming that rainfall intensity is exponentially distributed. To evaluate α properly, variation in rainfall patterns must be considered. For some short duration storms, most or all the rain occurs during TC causing α to approach its upper limit of 1.0. Other storm events of uniform intensity cause α to approach a minimum value. By substituting the products of intensity and time into Equation (2.19), an expression for the minimum value of α , α_{min} , is obtained

$$\alpha_{min} = TC/24 \quad (2.33)$$

Thus, α ranges within the limits

$$TC/24 < \alpha < 1.0 \quad (2.34)$$

Although confined between limits, the value of α is assigned with considerable uncertainty when only daily rainfall and simulated runoff amounts are given. This can lead to considerable uncertainties in estimating daily runoff and has to be kept in mind. The value of α is estimated in the model from the gamma distribution, taking into account the average monthly rainfall intensity for the basin under study.

2.1.4 Percolation

A storage routing technique (Arnold et al., n.d.[b]) is used in SWIM to simulate percolation through each soil layer. The percolation from the bottom soil layer is treated as recharge to the shallow aquifer. The storage routing technique is based on the equation

$$SW(t+1) = SW(t) * \exp\left(\frac{-\Delta t}{TT_i}\right) \quad (2.35)$$

where $SW(t+1)$ and $SW(t)$ are the soil water contents at the beginning and end of the day in mm, Δt is the time interval (24 h), and TT_i is the travel time through layer i in h. Thus, the percolation can be calculated by subtracting SW_t from SW_{t+1} :

$$PERC_i = SW_i * \left[1 - \exp\left(\frac{-\Delta t}{TT_i}\right)\right] \quad (2.36)$$

where $PERC$ is the percolation rate in mm d^{-1} . The travel time TT_i is calculated for each soil layer with the linear storage equation

$$TT_i = \frac{SW_i - FC_i}{HC_i} \quad (2.37)$$

where HC_i is the hydraulic conductivity in mm h^{-1} and FC is the field capacity water content for layer i in mm. The hydraulic conductivity is varying from the saturated conductivity value at saturation to near zero at field capacity (see also Figure 2.5) as

$$HC_i = SC_i * \left(\frac{SW_i}{UL_i}\right)^{\beta_i} \quad (2.38)$$

where SC_i is the saturated conductivity for layer i in mm h^{-1} , UL_i is soil water content at saturation in mm mm^{-1} , and β_i is a shape parameter that causes HC_i to approach zero as SW_i approaches FC_i . The equation for estimating β_i is

$$\beta_i = \frac{-2.655}{\log_{10}\left(\frac{FC_i}{UL_i}\right)} \quad (2.39)$$

The constant in equation 39 is set to -2.655 to assure that at field capacity

$$HC_i = 0.002 * SC_i \quad (2.40)$$

Water flow through a soil layer may occur until the lower layer is not saturated. If the layer below the layer being considered is saturated, no flow can occur. The effect of lower layer water content is expressed by the equation

$$PERC_{ic} = PERC_i * \sqrt{1 - \frac{SW_i + 1}{UL_i + 1}} \quad (2.41)$$

where $PERC_{ic}$ is the percolation rate for layer i in mm d^{-1} corrected for layer $i+1$ water content and $PERC_i$ is the percolation calculated with Equation (2.36).

Percolation is also affected by soil temperature. If the temperature in a particular layer is 0°C or below, no percolation is allowed from that layer.

Since the one-day time interval is relatively low for routing flow through the soil root zone, the water is divided into several portions for routing through soil. This is necessary because flow rates are dependent upon soil water content, which is continuously changing. For example, if the soil is extremely wet, equations Equation (2.36), Equation (2.37), and

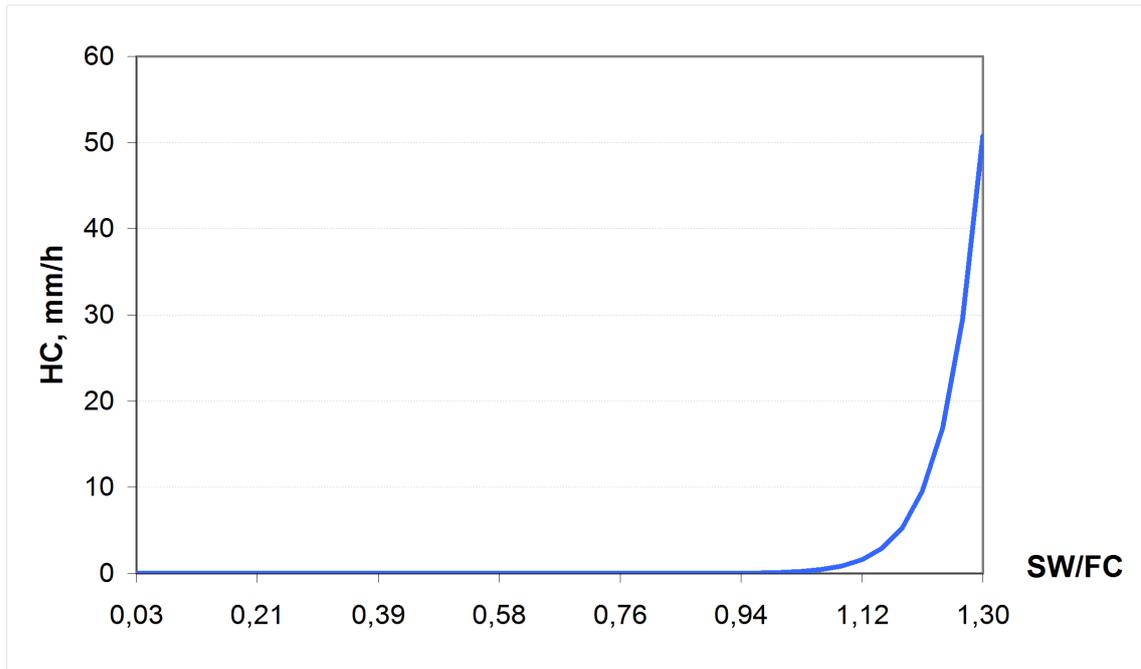


Figure 2.5: Hydraulic conductivity as a function of soil water content (Equation (2.39)) assuming $SC = 50.8 \text{ mm h}^{-1}$, $FC = 33 \text{ mm mm}^{-1}$, $UL = 43 \text{ mm mm}^{-1}$

Equation (2.38) may overestimate percolation, if only one routing is performed. To overcome this problem, each layer's inflow is divided into 4-mm slugs for routing.

Besides, when the inflow is divided into 4-mm slugs and each slug is routed individually through the layers, the relationship taking into account the lower layer water content (Equation (2.41)) works more realistically.

2.1.5 Lateral Subsurface Flow

The kinematic storage model developed by Sloan et al. (n.d.) uses the mass continuity equation for the entire soil profile, considering it as the control volume. The mass continuity equation in the finite difference form for the kinematic storage model is

$$\frac{SUP_2 - SUP_1}{t_2 - t_1} = WIR * SL - \frac{SSF_1 + SSF_2}{2} \quad (2.42)$$

where SUP is the drainable volume of water stored in the saturated zone $m \ m^{-1}$ (water above field capacity), t is time in h, SSF is the lateral subsurface flow in $m^3 \ h^{-1}$, WIR is the rate of water input to the saturated zone in $m^2 \ h^{-1}$, SL is the hillslope length in m, and subscripts 1 and 2 refer to the beginning and end of the time step, respectively. The drainable volume of water stored, SUP, is updated daily.

The lateral flow at the hillslope is given by

$$SSF = \frac{2 * SUP * VEL * SLW}{PORD * SL} \quad (2.43)$$

where VEL is the velocity of flow at the outlet in $mm \ h^{-1}$, SLW is the hillslope width in m, and PORD is the drainable porosity of the soil in $m \ m^{-1}$. Velocity at the outlet is estimated as

$$VEL = SC * \sin(v) \quad (2.44)$$

where SC is the saturated conductivity in $mm \ h^{-1}$, and n is the hillslope steepness in $m \ m^{-1}$. Combination of Equation (2.43) and Equation (2.44) gives

$$SSF = 0.024 * \frac{2 * SUP * SC * \sin(v)}{PORD * SL} \quad (2.45)$$

where SSF is in $mm \ d^{-1}$, SUP in $m \ m^{-1}$, g in $m \ m^{-1}$, PORD in $m \ m^{-1}$, and SL in m. If the saturated zone rises above the soil layer, water is allowed to flow to the layer above. The amount of flow upward is estimated as a function of saturated conductivity SC and the saturated slope length

$$QUP = \frac{24 * SC * SL_{sat}}{SL} \quad (2.46)$$

where QUP is the upward flow in mm d⁻¹, and SL_{sat} is the saturated slope length in m. To account for multiple layers, the model is applied to each soil layer independently starting at the upper layer to allow for percolation from one soil layer to the next.

2.1.6 Potential Evaporation

The method of Priestley-Taylor (1972) is used in the model for estimation of potential evapotranspiration, which requires only solar radiation, air temperature, and elevation as inputs. Instead, the method of Penman-Monteith (Monteith, n.d.[a]) can be used, if additional input data are available. The Penman-Monteith method requires solar radiation, air temperature, wind speed, and relative humidity as input.

The Priestley-Taylor method estimates potential evapotranspiration as a function of net radiation as following

$$EO = 1.28 * \left(\frac{RAD}{HV} \right) * \left(\frac{\delta}{\delta + \gamma} \right) \quad (2.47)$$

where EO is the potential evaporation in mm, RAD is the net radiation in MJ m⁻², HV is the latent heat of vaporization in MJ kg⁻¹, δ is the slope of the saturation vapor pressure curve in kPa C⁻¹, and γ is a psychrometer constant in kPa C⁻¹.

The latent heat of vaporization is estimated as a function of the mean daily air temperature T in °C

$$HV = 2.5 - 0.0022 * T \quad (2.48)$$

The saturation vapor pressure VP is also estimated as a function of temperature

$$VP = 0.1 * \exp \left[54.88 - 5.03 * \ln(T + 273) - \frac{6791}{T + 273} \right] \quad (2.49)$$

Then the slope of the saturation vapor pressure curve is calculated with the equation

$$\delta = \left(\frac{VP}{T + 273} \right) * \left(\frac{6791}{T + 273} - 5.03 \right) \quad (2.50)$$

The psychrometer constant γ is calculated as a function of barometric pressure BP (in kPa)

$$\gamma = 6.6 * 10^{-4} * BP \quad (2.51)$$

The barometric pressure is estimated as a function of elevation *ELEV* (in m)

$$BP = 101 - 0.0155 * ELEV + 5.44 * 10^{-7} * ELEV \quad (2.52)$$

If actual net radiation is not available, it can be estimated from the maximum solar radiation as following. First, the maximum possible solar radiation *RAM* in Ly is calculated as

$$RAM = \frac{711}{D} * \left(\phi * \sin\left(\frac{2 * \pi * LAT}{360}\right) * \sin(\theta) + \cos\left(\frac{2 * \pi * LAT}{360}\right) * \cos(\theta) * \sin(\phi) \right) \quad (2.53)$$

where *D* is the earth's radius vector in km, ϕ is the sun's half day length in radians, *LAT* is the latitude of the site in degrees, and θ is the sun's declination angle in radians.

The earth's radius vector *D* can be calculated for any day *t* as

$$D = \frac{1}{\sqrt{1. + 0.0335 * \sin\left[\frac{2 * \pi * (t + 88.2)}{365}\right]}} \quad (2.54)$$

The sun's declination angle is calculated with the equation

$$\theta = 0.4102 * \sin\left[\frac{2 * \pi * (t - 80.25)}{365}\right] \quad (2.55)$$

The sun's half day length is calculated as

$$\begin{aligned} \phi &= \cos^{-1}\left[\tan\left(\frac{2 * \pi * LAT}{360}\right) * \tan(\theta)\right], & -1 \leq \theta \leq 1 \\ \phi &= 0, & \theta > 1 \\ \phi &= \pi, & \theta \leq -1 \end{aligned} \quad (2.56)$$

Then the net radiation is estimated with the equation

$$RAD = RAM * (1. - ALB) \quad (2.57)$$

where *RAD* is the solar radiation in MJ m^{-2} and *ALB* is albedo.

The albedo is estimated by considering the soil, crop/vegetation cover, and snow cover. When crops are growing, albedo is determined by using the equation

$$ALB = 0.23 * (1. - SCOV) + ALB_{soil} * SCOV \quad (2.58)$$

where 0.23 is the albedo for plants, ALB_{soil} is the soil albedo, and SCOV is a soil cover index.

The value of SCOV ranges from 0 to 1.0 according to the equation

$$SCOV = exp(-0.05 * BMR) \quad (2.59)$$

where BMR is the sum of the above ground biomass and crop residue in $t\ ha^{-1}$.

If a snow cover exists with 5 mm or greater water content, the value of albedo is set to 0.8. If the snow cover is less than 5 mm and no crop is growing, the soil albedo is set to the input value (default value = 0.15). An example on Figure 2.6 shows possible seasonal dynamics of albedo in a temperate zone with a maximum 0.8 in winter (snow cover), minimum in march and september (equal to the bare soil albedo), and increasing up to 0.23 in summer (crop growth).

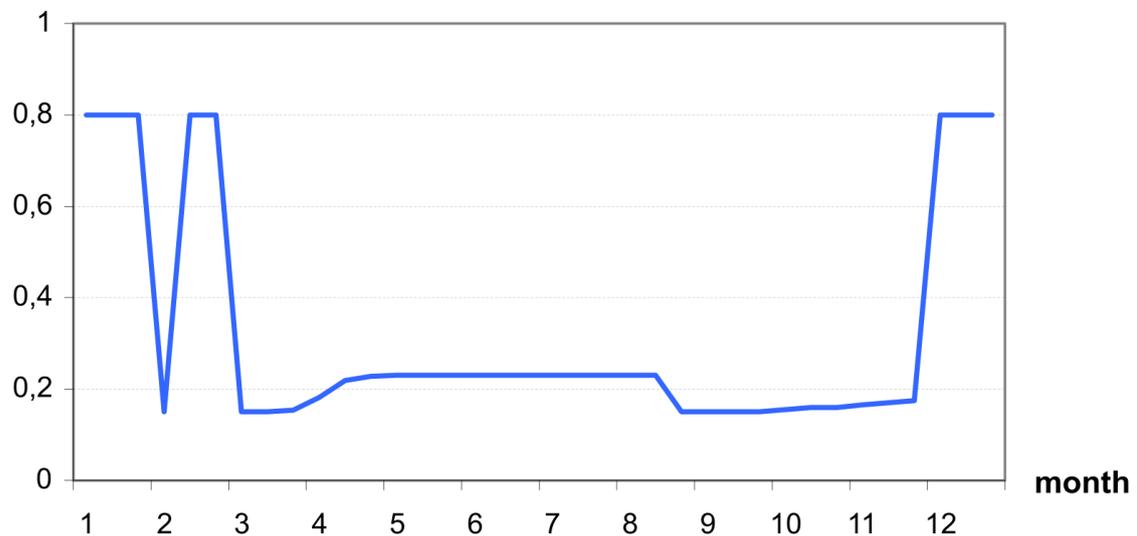


Figure 2.6: An example of the annual dynamics of soil albedo (Equation (2.58), Equation (2.59))

2.1.7 Soil Evaporation and Plant Transpiration

The model calculates evaporation from soils and transpiration by plants separately using an approach similar to that of Ritchie (n.d.). The plant transpiration is calculated as

$$\begin{aligned} EP &= \frac{EO * LAI}{3}, & 0 \leq LAI \leq 3.0 \\ EP &= EO, & LAI > 3.0 \end{aligned} \quad (2.60)$$

where EO is the potential evapotranspiration in mm d⁻¹ estimated by Equation (2.47), EP is the plant water transpiration rate in mm d⁻¹ and LAI is the leaf area index (area of plant leaves relative to the soil surface area).

If soil water is limited, plant water transpiration is reduced. The approach is described in Section 2.2.2 about water stress.

Potential soil evaporation ESO in mm d⁻¹ is simulated by an exponential function of leaf area index LAI according to the equation of Richardson and Ritchie (n.d.) (see also Figure 2.7):

$$ESO = EO * \exp(-0.4 * LAI) \quad (2.61)$$

Actual soil evaporation is calculated in two stages. In the first stage, soil evaporation is limited only by the energy available at the surface, and is equal to the potential soil

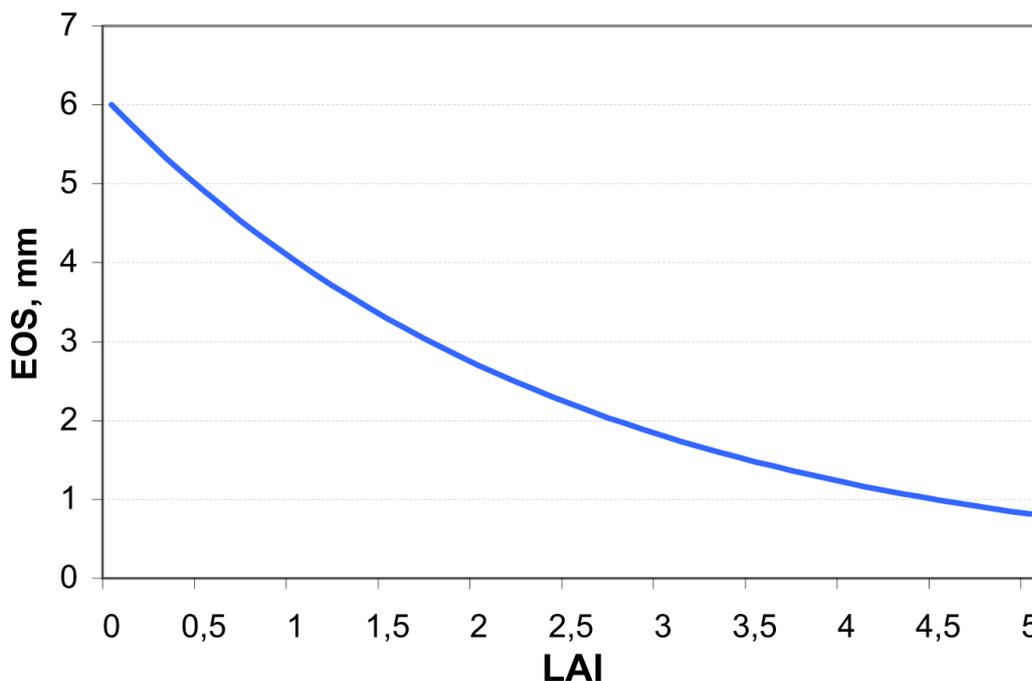


Figure 2.7: Potential soil evaporation, ESO, as a function of leaf area index, LAI (Equation (2.61)) under assumption that EO = 6 mm d⁻¹

evaporation. When the accumulated soil evaporation exceeds the first stage threshold (equal to 6 mm), the second stage begins. Then soil evaporation is estimated with the equation

$$ES = 3.5 * (\sqrt{TST} - \sqrt{TST - 1}) \quad (2.62)$$

where ES is the soil evaporation for day t in mm d⁻¹ and TST is the number of days since stage two evaporation began.

Actual soil water evaporation is estimated on the basis of the top 30 cm of soil and snow cover, if any. If the water content of the snow cover is greater or equal to ES, the soil evaporation comes from the snow cover. If ES exceeds the water content of the snow cover, water is removed from the upper soil layers if available.

2.1.8 Groundwater Flow

The groundwater submodel in the integrated river basin model like SWIM is intended for general use in regions where extensive field measurements are not available. Thus, the groundwater component has to be parameterized using readily available inputs. Also, it must have the level of sophistication similar to those of the other components. Therefore a detailed numerical model is not justified for this case, and a relatively simple yet realistic approach was chosen for use in SWAT and SWIM.

The simulated hydrological system consists of four control volumes that include:

- the soil surface,
- the soil profile or root zone,
- the shallow aquifer, and
- the deep aquifer.

The percolation from the soil profile is assumed to recharge the shallow aquifer. The surface runoff, the lateral subsurface flow from the soil profile, and return flow from the shallow aquifer contribute to the stream flow. The water balance equation for the shallow aquifer is

$$SAW(t + 1) = SAW(t) + RCH - REVAP - GWQ - SEEP \quad (2.63)$$

where SAW(t) is the shallow aquifer storage in the day t, RCH is the recharge, REVAP is the water flow from the shallow aquifer back to the soil profile, GWQ is the return flow or groundwater contribution to streamflow, SEEP is the percolation or seepage to the deep aquifer (all – in mm d⁻¹), and t is the day.

REVAP is defined as water that raises from the shallow aquifer to the soil profile and is lost to the atmosphere by soil evaporation or plant root uptake.

The approach of Smedema and Rycroft (n.d.), who derived the non-steady-state response of groundwater flow to periodic recharge from Hooghoudt (1940) steady-state formula, is used

$$GWQ = 8 * \frac{KD * GWH}{DS^2} \quad (2.64)$$

where KD is the hydraulic conductivity of groundwater in mm d⁻¹, DS is the drain spacing in m, and GWH is the water table height in m.

Assuming that the shallow aquifer is recharged by seepage from stream channels, reservoirs, or the soil profile (rainfall and irrigation), and is depleted by the return flow to the stream, fluctuations of water table can be estimated using the equation of Smedema and Rycroft (n.d.)

$$\frac{d(GWH)}{dt} = \frac{RCH - GWQ}{0.8 * SY} \quad (2.65)$$

where SY is the specific yield.

The return flow can be estimated assuming that its variation with time is also linearly related to the rate of change of the water table height:

$$\frac{d(GWQ)}{dt} = 10 * \frac{KD * (RCH - GWQ)}{SY * DS^2} = RF * (RCH - GWQ) \quad (2.66)$$

where RF is the constant of proportionality or the reaction factor for groundwater.

Integration of Equation (2.66) gives

$$GWQ(t + 1) = GWQ(t) * exp(-RF * \Delta t) + RCH * \left[1 - exp(-RF * \Delta t) \right] \quad (2.67)$$

The relationship for the water table height is derived combining Equation (2.64) and Equation (2.67). It results in the following relationship

$$GWH(t + 1) = GWH(t) * exp(-RF * \Delta t) + \frac{RCH}{0.8 * SY * RF} * \left(1 - exp(-RF * \Delta t) \right) \quad (2.68)$$

The percolation from the soil profile is assumed to recharge the shallow aquifer. The delay time or drainage time of the aquifer is used to correct the recharge. Sangrey, Harrop-Williams, and Klaiber (n.d.) used an exponential decay weighting function proposed by Venetis (n.d.) to estimate the delay time for return flow in their precipitation / groundwater

response model

$$RCH(t+1) = \left(1 - \exp\left(-\frac{1}{DEL}\right)\right) * RCH(t+1) + \exp\left(-\frac{1}{DEL}\right) * RCH(t) \quad (2.69)$$

where DEL is the delay time or drainage time of the aquifer in days (Sangrey, Harrop-Williams, and Klaiber, n.d.). This equation will affect only the timing of the return flow and not the total volume. The Equation (2.69) is used in SWIM to correct the recharge.

The volume of water flow from the shallow aquifer back to the soil profile, REVAP, is estimated with the equations

$$\begin{aligned} REVAP &= CR * ET, & REVAP &> RST \\ REVAP &= 0, & REVAP &\leq RST \end{aligned} \quad (2.70)$$

where ET is the actual evapotranspiration occurring in the soil profile, CR is the revap coefficient, and RST is the revap storage in mm.

The amount of percolation or seepage from the shallow aquifer (recharge to the deep aquifer) is estimated as a linear function

$$SEEP = CS * RCH \quad (2.71)$$

where CS is the seepage coefficient.

2.1.9 Transmission Losses

Many watersheds, especially in semiarid areas, have alluvial channels that abstract large quantities of stream flow (Lane, n.d.). The abstractions, or transmission losses, reduce runoff volumes because water is lost when the flood wave travels downstream.

A procedure for estimating transmission losses for ephemeral streams is described by Lane in the SCS Hydrology Handbook (USDA, n.d.[b]), chapter 19. The procedure is based on derived regression equations for estimation of transmission losses in the absence of observed inflow outflow data. It enables the user to estimate transmission losses for similar channels of arbitrary length and width using channel geometry parameters (width and depth) and Manning's "n". This procedure is used in SWIM as well as in SWAT to estimate transmission losses.

The unit channel intercept and slope, and the decay factor are estimated with regression equations obtained from the analysis of observed data in different conditions:

$$AR = -0.001831 * CHK * DU \quad (2.72)$$

$$DEC = -1.09 * \ln\left(1 - \frac{0.2649 * CHK * DU}{VOLQ_{in}}\right) \quad (2.73)$$

$$BR = \exp(-DEC) \quad (2.74)$$

where AR is the unit channel intercept in m₃, CHK is the effective hydraulic conductivity of the channel alluvium in mm h⁻¹ (Lane, n.d.; USDA, n.d.[b]), DU is the duration of streamflow in h, DEC is the decay factor in m km⁻¹, VOLQ_{in} is inflow volume of m³, and BR is the unit channel regression slope.

The inflow volume is assumed to be equal to the surface runoff from the sub-basin. The flow duration DU in h is estimated from

$$DU = \frac{Q * A}{1.8 * PEAKQ} \quad (2.75)$$

where Q is the surface runoff volume in mm, A is the drainage area in ha, and PEAKQ is the peak flow rate in m³ s⁻¹.

The regression parameters are estimated as

$$AX = [AR * (1 - BR)] * (1 - BR * CHL) \quad (2.76)$$

$$BX = CHL * CHW * \exp(-2.04 * DEC) \quad (2.77)$$

$$TH_0 = -\frac{AX}{BX} \quad (2.78)$$

where AX is the regression intercept in m km⁻¹, BX is the regression slope, CHW is average width of flow in m, CHL is length of channel in km, and TH₀ is the threshold volume for a unit channel in m³.

Then the final equation for runoff volume after losses, VOLQ_{tr}, is

$$\begin{aligned} VOLQ_{tr} &= -AX + BX * VOLQ_{in} & VOLQ_{in} > TH_0 \\ VOLQ_{tr} &= 0 & VOLQ_{in} < TH_0 \end{aligned} \quad (2.79)$$

The final equation for peak discharge after losses PEAKQ_{tr}, is

$$PEAKQ_{tr} = \frac{12.1 * AX}{DU - (1 - BX) * VOLQ_{in} + BX * PEAKQ_{in}}, \quad VOLQ_{in} > 0 \quad (2.80)$$

where $PEAKQ_{in}$ is the initial peak runoff rate.

2.2 Crop / Vegetation Growth

2.2.1 Crop Growth

The crop model in SWIM and SWAT is a simplification of the EPIC crop model (Williams, Renard, and Dyke, n.d.). The SWIM model uses

- a concept of phenological crop development based on daily accumulated heat units,
- Monteith's approach (1977) for potential biomass,
- water, temperature, and nutrients stress factors, and
- harvest index for partitioning grain yield.

However, the more detailed EPIC root growth and nutrient cycling modules are not included.

A single model is used for simulating all the crops and natural vegetation considered (see Section 3.4.23 in Chapter 3). The model is capable of simulating crop growth for both annual and perennial plants. Annual crops grow from planting date to harvest date or until the accumulated heat units equal the potential heat units for the crop. Perennial crops maintain their root systems throughout the year, although the plant may become dormant after frost. Later the term 'crop' will be used instead of 'crop or natural vegetation'.

Phenological development of the crop is based on accumulation of daily heat units. The value of heat units accumulated in the day t , $HUNA$, is calculated as

$$HUNA(t) = \left(\frac{TMX+TMN}{2} \right) - TB, \quad HUNA \leq 0 \quad (2.81)$$

where TMX and TMN are the maximum and minimum temperature in °C, and TB is the crop specific base temperature in °C assuming that no growth occurs at or below TB .

Then the heat unit index $IHUN$ ranging from 0 at planting to 1 at physiological maturity is calculated as

$$IHUN = \frac{\sum_t HUNA(t)}{PHUN} \quad (2.82)$$

where $PHUN$ is the value of potential heat units required for the maturity of the crop. The values of $PHUN$ for different crops are provided in the crop database supplemented with the model.

Interception of solar radiation is estimated with Beer's law equation (Monsi, n.d.) as a function of photosynthetic active radiation and leaf area index (see Figure 2.8)

$$PAR = 0.02092 * RAD * \left[1 - \exp(-0.65 * LAI) \right] \quad (2.83)$$

where PAR is the photosynthetic active radiation in MJ m⁻², RAD is solar radiation in Ly, and LAI is the leaf area index.

Potential increase in biomass for a day is calculated using the approach of Monteith (n.d.[b]) with the equation

$$\Delta BP = BE * PAR \quad (2.84)$$

where ΔBP is the daily potential increase in total biomass in kg h⁻¹ a⁻¹, and BE is the crop-specific parameter for converting energy to biomass in kg m² MJ⁻¹ ha⁻¹ d⁻¹. The latter one is taken from the crop database.

The potential increase in biomass estimated with Equation (2.84) is adjusted daily if one of the plant stress factors is less than 1.0. The model considers stresses caused by water, nutrients, and temperature. The following equation is used to estimate the daily increase in biomass B (in kg ha⁻¹)

$$\Delta B = \Delta BP * REGF \quad (2.85)$$

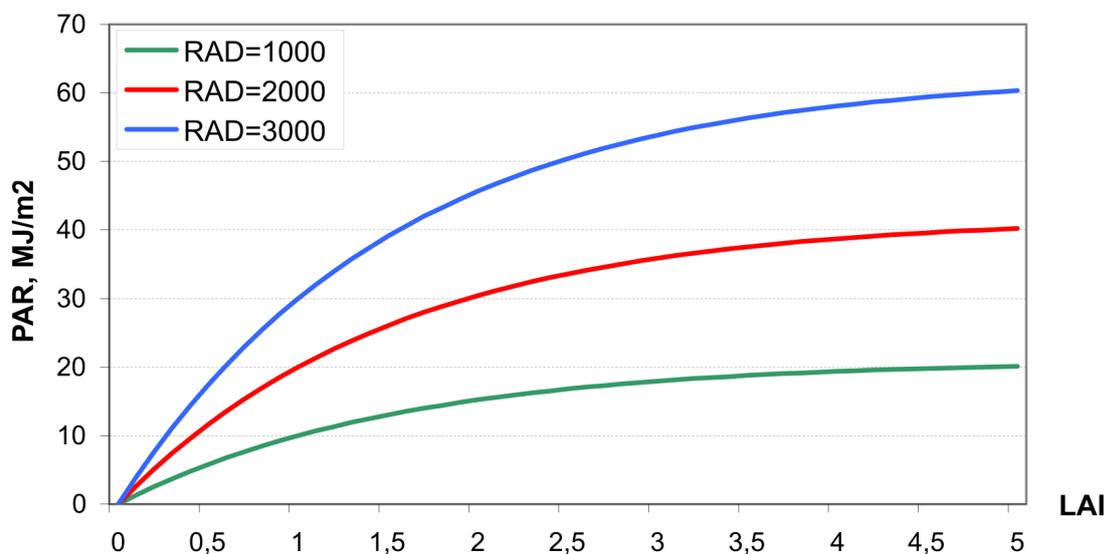


Figure 2.8: Photosynthetic active radiation, PAR as a function of leaf area index, LAI for RAD= 1000, 2000 and 3000 Ly (Equation (2.83))

where REGF is the crop growth regulating factor estimated as the minimum stress factor:

$$REGF = \min(WS, TS, NS, PS) \quad (2.86)$$

where WS, TS, NS, PS are stress factors caused by water, temperature, nitrogen and phosphorus, all varying between 0 and 1.

The leaf area index LAI is simulated as a function of heat units and biomass, differently for two phases of the growing season.

$$\begin{aligned} LAI &= \frac{LAIMX * BAG}{BAG + \exp(9.5 - 0.0006 * BAG)}, & IHUN \leq DLAI \\ LAI &= 16 * LAIMX * (1 - IHUN)^2, & IHUN > DLAI \end{aligned} \quad (2.87)$$

where LAIMX is the maximum potential LAI for the specific crop, BAG is aboveground biomass in kg ha^{-1} , and DLAI is the fraction of the growing season before LAI starts declining (crop-specific parameter). An example of LAI dynamics is shown in Figure 2.9).

The aboveground biomass is estimated as

$$BAG = (1 - RWT) * BT \quad (2.88)$$

where RWT is the fraction of total biomass partitioned to the root system, and BT is total biomass in kg ha^{-1} .

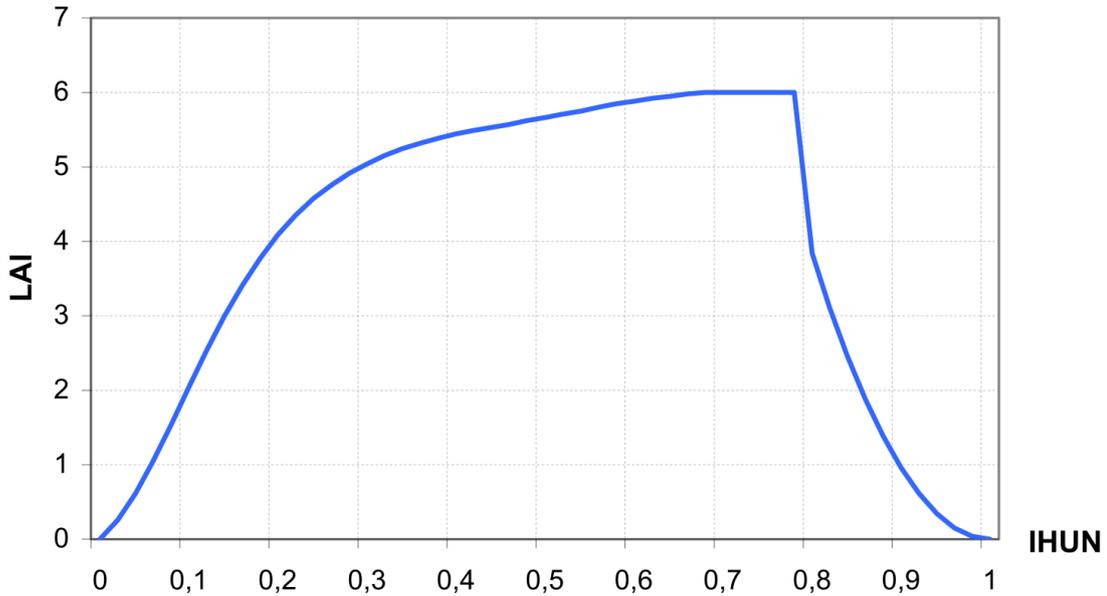


Figure 2.9: Leaf area index as a function of the heat unit index (Equation (2.87))

The fraction of total biomass partitioned to the root system normally decreases from 0.3 to 0.5 in the seedling to 0.05 to 0.20 at maturity (Jones, n.d.). The model estimates the root fraction to range linearly from 0.4 at emergence to 0.2 at maturity using the equation

$$RWT = (0.2 - 0.2 * IHUN) \quad (2.89)$$

2.2.2 Growth Constraint: Water Stress

The water stress factor is calculated by considering water supply and water demand with the following equation

$$WS = \frac{\sum_{i=1}^M WU_i}{EP} \quad (2.90)$$

where WU_i is plant water use in layer i in mm. The value of potential plant transpiration EP is calculated in the evapotranspiration module.

The plant water use is estimated using the approach of Williams and Hann (1978) for simulating plant water uptake. First, the root depth is calculated with the equation

$$RD = 2.5 * IHUN * RDMX \quad (2.91)$$

where RD is the fraction of the root zone that contains roots and $RDMX$ is the maximum root depth in m (crop-specific parameter).

Then the potential water use in each soil layer is estimated with the equation

$$WUP_i = \frac{EP}{1 - \exp(RDP)} * \left(1 - \exp\left(-\frac{RDP * RZD_i}{RD}\right) \right) \quad (2.92)$$

where WUP_i is the potential water use rate from layer i in mm d^{-1} , RDP is the rate depth parameter, and RZD_i is the root zone depth parameter for the layer i in mm.

The latter one is defined as

$$RZD_i = \begin{cases} Z_i, & RD > Z_i \\ RD, & RD \leq Z_i \end{cases} \quad (2.93)$$

The value of RDP used in the model (3.065) was determined assuming that about 30% of the total water use comes from the top 10% of the root zone. The details of evaluating RDP are given in Williams and Hann (1978). Equation (2.92) allows roots to compensate for water deficits in certain layers by using more water in layers with adequate supply.

Then the potential water use must be adjusted for water deficits to obtain the actual water use WU for each layer:

$$WU_i = WUO_i * \frac{SW_i}{0.25 * FC_i}, \quad SW_i \leq 0.25 * FC_i \quad (2.94)$$

$$WU_i = WUP_i, \quad SW_i > 0.25 * FC_i \quad (2.95)$$

After the calculation of actual water use by plants, the plant transpiration EP is adjusted.

2.2.3 Growth Constraint: Temperature Stress

The temperature stress factor is calculated as an asymmetrical function, differently for temperature below the optimal temperature TO, and above it. The equation for the temperature stress factor TS for temperatures below TO is

$$TS = \exp\left(\ln(0.9) * \left(\frac{CTSL * (TO - T)}{T + 1. * 10^{-6}}\right)^2\right), \quad T \leq TO \quad (2.96)$$

where CTSL is the temperature stress parameter for temperatures below TO, and T is the daily average air temperature in °C. The temperature stress parameter CTSL is evaluated as

$$CTSL = \frac{TO + TB}{TO - TB} \quad (2.97)$$

where TB is the base temperature for the crop in °C. Equation (2.96) assures that TS=0.9 when the air temperature is (TO+TB)/2.

For the temperatures higher than TO

$$TS = \exp\left(\ln(0.9) * \left(\frac{CTSH * (T - TO)}{T + 1. * 10^{-6}}\right)^2\right), \quad T > TO \quad (2.98)$$

where the temperature stress parameter for temperatures higher than TO, CTSH, is evaluated as

$$CTSH = 2 * TO - T - TB \quad (2.99)$$

An example of the temperature stress factor calculated with Equation (2.96) and Equation (2.98) is shown in Figure 2.10.

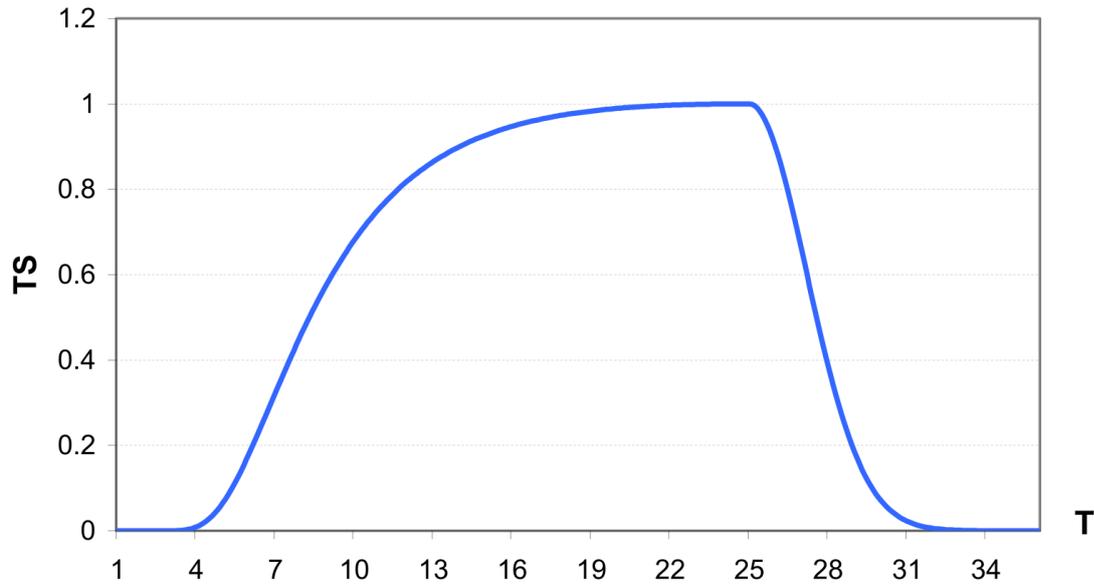


Figure 2.10: Temperature stress factor as a function of average daily air temperature (equations 96 and 98), assuming $T_O = 25^\circ\text{C}$ and $T_B = 3^\circ\text{C}$

2.2.4 Growth Constraints: Nutrient Stress

Estimation of nutrient stress factors is based on the ratio of simulated plant N and P contents to the optimal values of nutrient content. The stress factors vary non-linearly from 0 when N or P is half the optimal level to 1.0 at optimal N and P contents (Jones et al., *n.d.*).

Let us consider the N stress factor first. As an initial step, the scaling factor SFN is calculated as

$$SFN = 200 * \left(\frac{\sum UN(t)}{CNB * BT} - 0.5 \right) \quad (2.100)$$

where $UN(t)$ is the crop N uptake on day t in kg ha^{-1} , CNB is the optimal N concentration for the crop, BT is the accumulated total biomass in kg ha^{-1} .

Then the N stress factor is calculated with the equation (see also Figure 2.11)

$$NS = \frac{SFN}{SFN + \exp(3.52 - 0.026 * SFN)}, \quad \text{if } SFN > 0 \quad (2.101)$$

The P stress factor, PS, is calculated analogously, using the optimal P concentration, COP, instead.

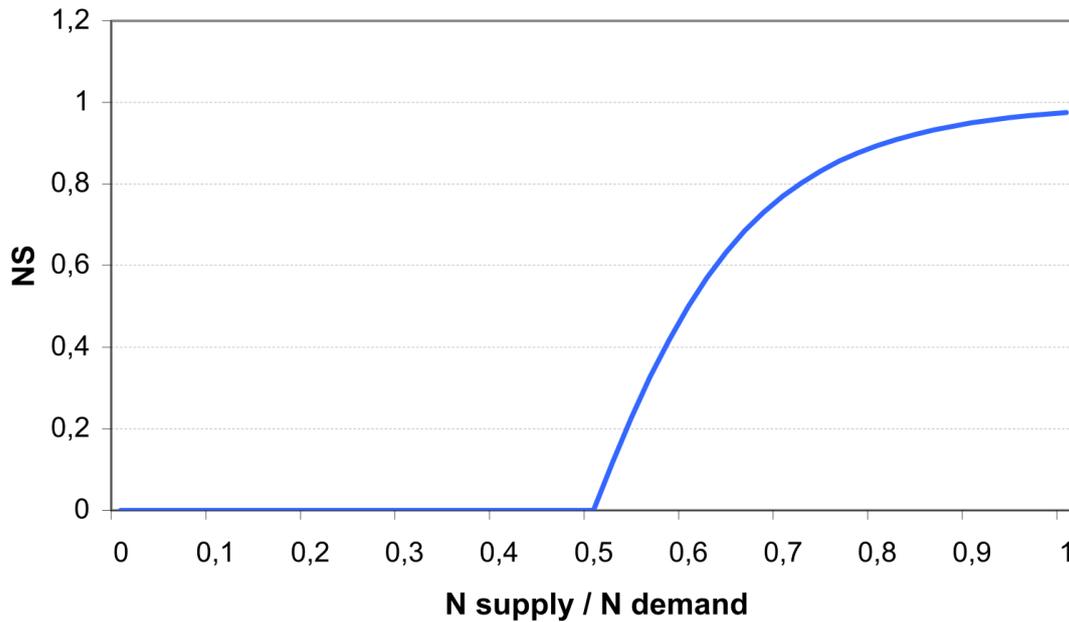


Figure 2.11: Nitrogen stress factor as a function of N supply and N demand (Equation (2.100) – Equation (2.101))

2.2.5 Crop Yield and Residue

The economic yield of most crops is a reproductive organ. Harvest index (economic yield divided by aboveground biomass) is often a relatively stable value across a range of environmental conditions. Crop yield is estimated in the model using the harvest index concept

$$YLD = HI * BAG \quad (2.102)$$

where YLD is the crop yield removed from the field in kg ha^{-1} , HI is the harvest index at harvest, and BAG is the above ground biomass in kg ha^{-1} .

Harvest index HIA increases non linearly during the growth season and can be estimated as the function of the accumulated heat units

$$HIA = HVSTI * HIC_1 = HVSTI * \frac{100 * IHUN}{100 * IHUN + \exp(11.1 - 10 * IHUN)} \quad (2.103)$$

where HVSTI is the crop-specific harvest index under favourable growing conditions, and HIC_1 is a factor depending on IHUN (see Figure 2.12).

The constants in equation 103 are set to allow HIA to increase from 0.1 at $IHUN=0.5$ to 0.92 at $IHUN=0.9$. This is consistent with economic yield development of crops, which produce most economic yield in the second half of the growing season.

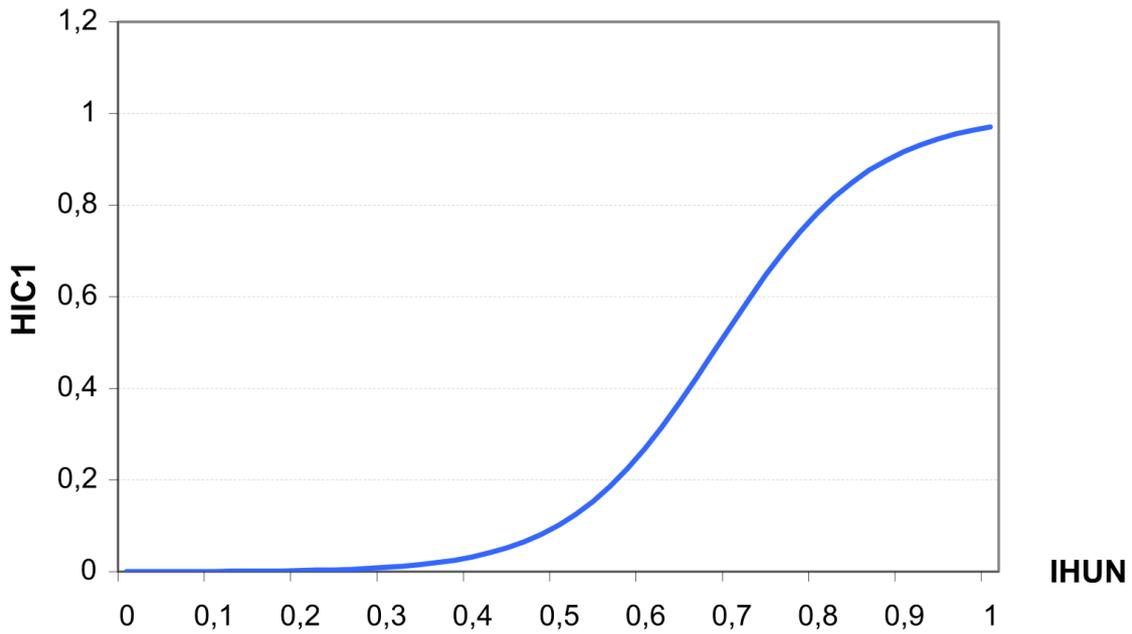


Figure 2.12: Harvest index as a function of heat unit index (factor HIC_1 , equation 103)

Most crops are particularly sensitive to water stress, especially in the second half of the growing season, when major yield components are determined (Doorenbos and Kassam, n.d.). The effect of water stress on the harvest index is described by the following two equations

$$HIAD = HIA * HIC_2 = HIA * \frac{WSF}{WSF + \exp(6.117 - 0.086 * WSF)} \quad (2.104)$$

$$WSF = 100 * \frac{SWU}{SWP + 1.e^{-6}} \quad (2.105)$$

where HIAD is the adjusted harvest index, WSF is a parameter expressing water supply conditions for crop, HIC_2 is a factor depending on WSF (see also factor HIC_2 at Figure 2.13), SWU is accumulated actual plant transpiration in the second half of the growing season ($IHUN > 0.5$), and SWP is accumulated potential plant transpiration in the second half of the growing season. The harvest index at harvest, HI is equal to HIAD.

The residue RSD is estimated at harvest as

$$RSD = (1 - RWT) * BT * HI \quad (2.106)$$

where RWT is the fraction of roots, and BT is the total biomass. This relationship can be modified for some crops if residue come from the roots.

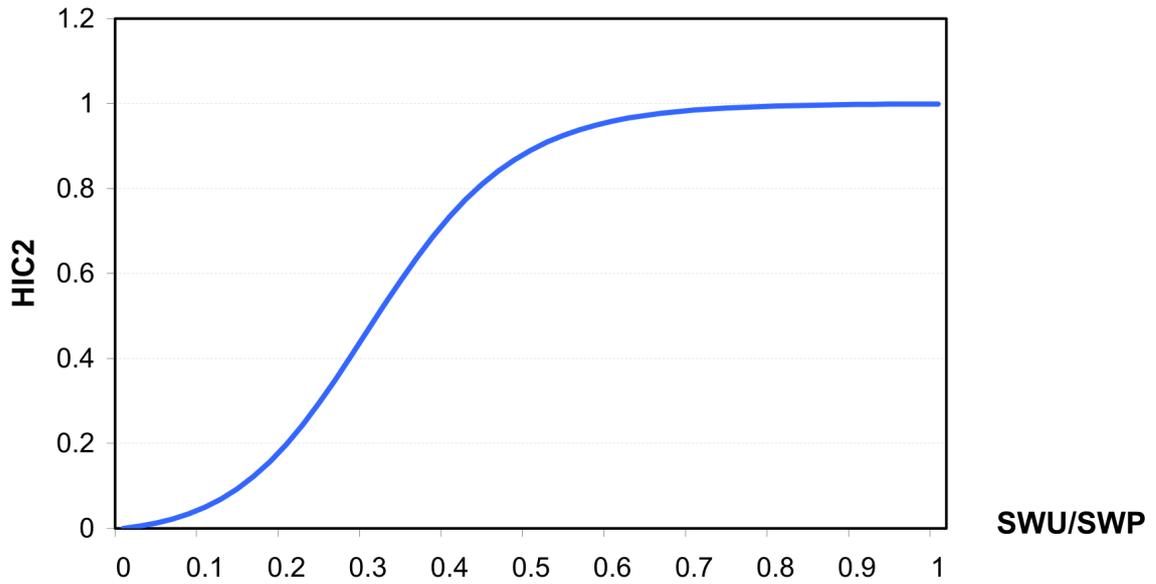


Figure 2.13: Harvest index as a function of soil water content (factor HIC_2 , equation 104)

All processes described in Section 2.2.1 – Section 2.2.5 are presented graphically in Figure 2.14. There are three basic blocks in the crop module (depicted by the grey coloured boxes) that are used to estimate the crop yield: accumulated heat units (top middle), stress factors (lower half), and harvest index (top left). The stress factors include temperature stress, nutrient stress (nitrogen and phosphorus), and water stress. The crop growth regulating factor is estimated as the minimum of these four factors. Nutrient stress is determined from the actual and potential nutrient uptake. Water stress is induced from water use and plant transpiration. The heat units accumulation is estimated from the crop specific minimum growth temperature, the daily minimum and maximum air temperatures and the assumed accumulated heat units. The adjusted harvest index is evaluated from the actual and potential transpiration and the crop specific harvest index. The small rectangles denote dependent variables, whereas the coloured ovals refer to model parameters independent from the others computed within the module. They describe the specifications of crop (green), climate (blue) and soil (brown).

2.2.6 Adjustment of Net Photosynthesis to Altered CO_2

Different approaches for the adjustment of net photosynthesis and evapotranspiration to altered atmospheric CO_2 concentration have been used in modelling studies (Goudriaan and Ketner, n.d.; Rotmans and Den Elzen, n.d.). Detailed results about the interaction of higher CO_2 and water use efficiency are described in (Eamus, n.d.; Grossman et al., n.d.; Kimball et al., n.d.[a]).

Two different approaches can be used in SWIM for the adjustment of net photosynthesis (factor ALFA):

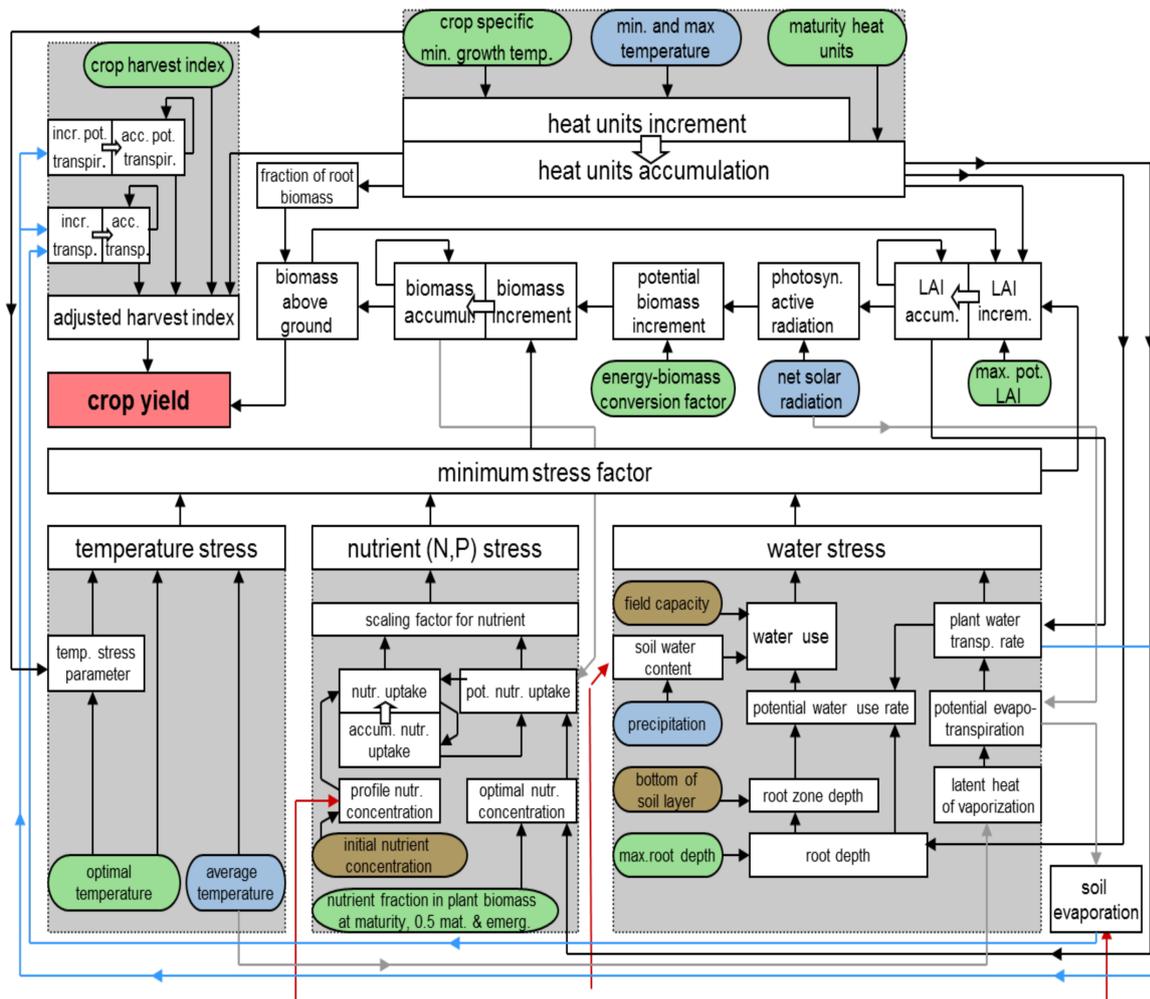


Figure 2.14: Scheme of operations included in SWIM crop module

1. an empirical approach based on adjustment of the biomass-energy factor as suggested in EPIC and SWAT models (Arnold et al., n.d.[a]), and
2. a new semi-mechanistic approach derived by F. Wechsung from a mechanistic model for leaf net assimilation (Harley et al., n.d.), which takes into account the interaction between CO₂ and temperature.

The second method and its application for climate change impact study with SWIM is described in Krysanova and Becker (n.d.[a])

The factor ALFA is defined as

$$ALFA = \frac{AS_2}{AS_1} \quad (2.107)$$

where AS₁ and AS₂ are net leaf assimilation rates (Mikro mol m⁻² s⁻¹) in two periods, corresponding to two different CO₂ concentrations.

In the first method ALFA is estimated as

$$ALFA = \frac{100 * CA}{BE * (CA + exp(SHP_1 - CA * SHP_2))} \quad (2.108)$$

where BE is the biomass-energy factor as in equation (83), CA is the current atmospheric CO₂ concentration (micro mol mol⁻¹), and SHP₁ and SHP₂ are the coefficients of the S-shape curve, describing the assumed change in BE for two different CO₂ concentrations.

For the CO₂ doubling, 1.1 times increase in BE is assumed for maize, and 1.3 times increase for wheat and barley (see Figure 2.15).

If CO₂ concentration CA is changing from CA₁ to CA₂, and BE is changing from BE₁ to BE₂, the coefficients SHP₁ and SHP₂ can be estimated as following:

$$SHP_2 = \frac{\log(100 * CA_1 / BE_1 - CA_1) - \log(100 * CA_2 / BE_2 - CA_2)}{CA_2 - CA_1} \quad (2.109)$$

$$SHP_1 = \log(100 * CA_1 / BE_1 - CA_1) + CA_1 * SHP \quad (2.110)$$

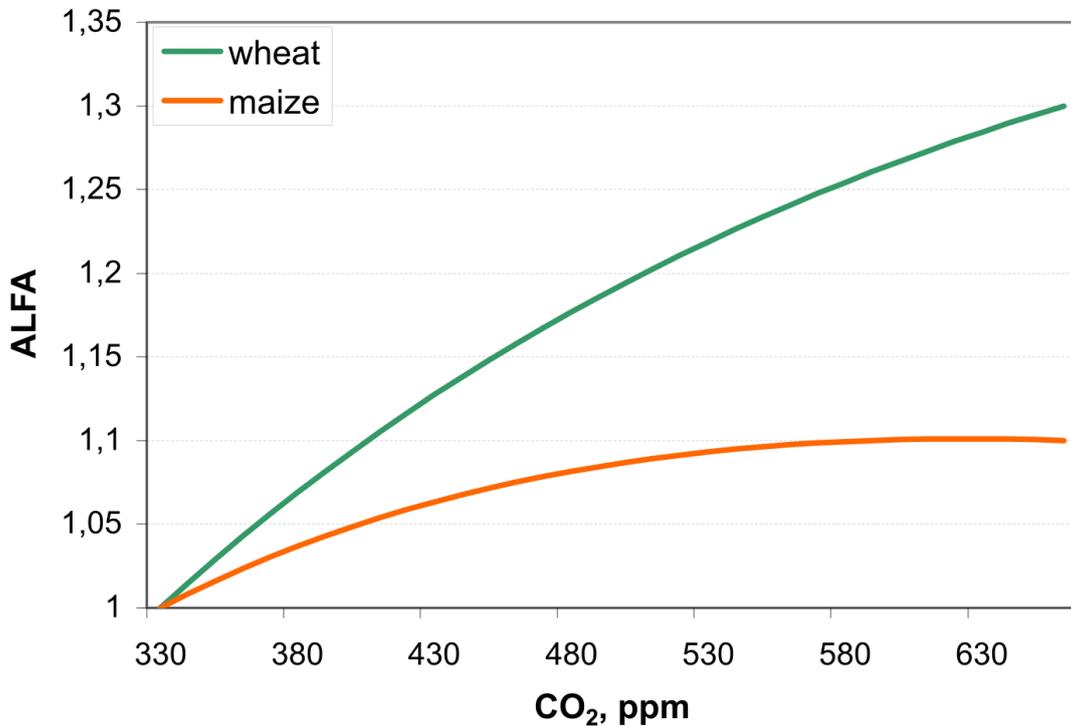


Figure 2.15: Factor ALFA as a function of CO₂ concentration for wheat and maize estimated using the first method (Equation (2.108), Equation (2.109), Equation (2.109)) and assuming BE = 30 kg m² MJ⁻¹ ha⁻¹ d⁻¹ for wheat and BE = 40 kg m₂ MJ⁻¹ ha⁻¹ d⁻¹ for maize. The CO₂ concentration is changing from 330 to 660 ppm

In the second method a temperature-dependent enhancement factor α was derived from Harley et al. (n.d.) for cotton

$$ALFA_{CO_2} = exp \left[P_1 * (CL_2 - CL_1) - P_2 * ((CL_2)^2 - (CL_1)^2) + P_3 * TL * (CL_2 - CL_1) \right] \quad (2.111)$$

where TL is the leaf temperature ($^{\circ}C$), CL_1 and CL_2 are the current and future CO_2 concentration inside leaves (Mikro mol mol $^{-1}$), and coefficients $P_1 = 0.3898 * 10^{-2}$, $P_2 = 0.3769 * 10^{-5}$, and $P_3 = 0.3697 * 10^{-4}$.

It is assumed in the model that the leaf temperature TL coincides with the air temperature TX, and that the CO_2 concentration inside leaves is a linear function of the atmospheric CO_2 concentration:

$$CL = 0.7 * CA \quad (2.112)$$

Then the cotton-specific factor ALFA was adjusted for wheat, barley and maize according to the latest crop-specific results reported in the literature (Peart et al., n.d.) (Kimball et al., n.d.[a])

$$ALFA_{wheat} = (ALFA_{cot})^{0.6} \quad (2.113)$$

$$ALFA_{barley} = (ALFA_{cot})^{0.6} \quad (2.114)$$

$$ALFA_{maize} = (ALFA_{cot})^{0.36} \quad (2.115)$$

which imply an increase in leaf net photosynthesis of 31, 31 and 10% for wheat, barley and maize, respectively, if the atmospheric CO_2 increases from 360 to 720 ppm at $20^{\circ}C$ and corresponds to the analogous assumption made in the first method. Figure 2.16 shows the temperature-dependent ALFA factor for cotton, wheat and maize in the case of CO_2 doubling (a) and in the case of 50% increase in CO_2 (b) assuming $CA_1 = 330$ ppm estimated with the second method (Equation (2.111), Equation (2.112), Equation (2.113), Equation (2.115)).

2.2.7 Adjustment of Evapotranspiration to Altered CO_2

Additionally, a possible reduction of potential leaf transpiration due to higher CO_2 (factor BETA) derived directly from the enhancement of photosynthesis (factor ALFA) was taken into account in combination with both methods for the adjustment of net photosynthesis. The method was suggested by F. Wechsung.

The factor BETA is defined as

$$BETA = \frac{EPO_2}{EPO_1} \quad (2.116)$$

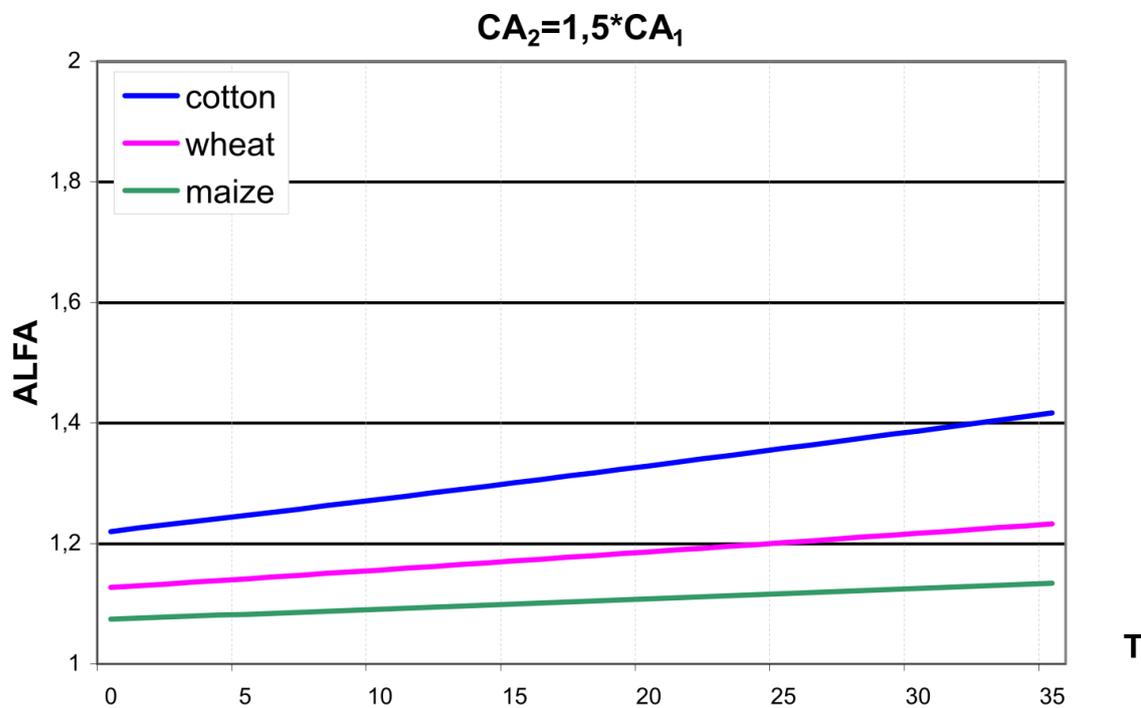
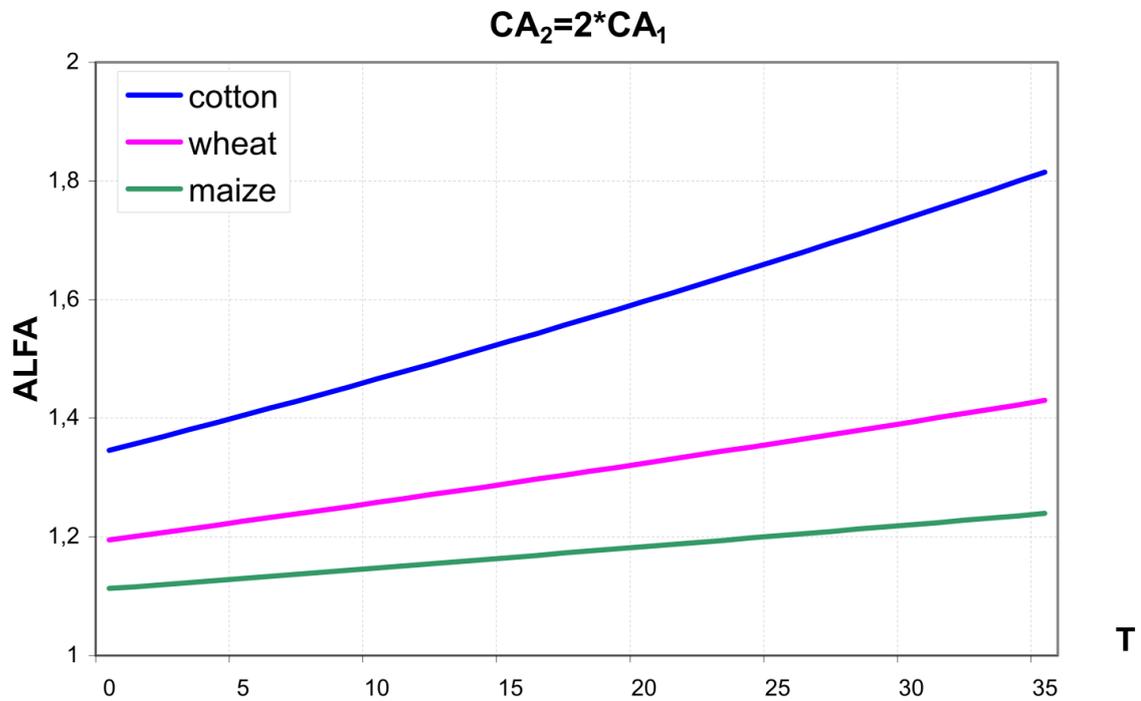


Figure 2.16: ALFA factor for cotton, wheat and maize as dependent on temperature in the case of CO₂ doubling (a) and in the case of 50% increase in CO₂ (b) assuming initial CO₂ concentration 330 ppm (Equation (2.111) - Equation (2.115) and Equation (2.121))

where EPO_1 and EPO_2 are potential plant transpiration rates ($\text{mol m}^{-2} \text{s}^{-1}$) in two periods, corresponding to two different CO_2 concentrations.

Assuming that

$$\frac{AS}{EPO} = \frac{CA - CL}{VPD} * \frac{RESW}{RESC} \quad (2.117)$$

where VPD is the vapour pressure deficit (kPa), RESC is the total leaf resistance to CO_2 transfer ($\text{m}^2 \text{s mol}^{-1}$), RESW is the total leaf resistance to water vapour transfer ($\text{m}^2 \text{s mol}^{-1}$).

From definitions Equation (2.107) and Equation (2.116) and Equation (2.107) the ratio can be estimated

$$\frac{ALFA}{BETA} = \frac{CA_2 - CL_2}{CA_1 - CL_1} * \frac{VPD_1}{VPD_2} \frac{RESW_2}{RESC_2} * \frac{RESC_1}{RESW_1} \quad (2.118)$$

The following assumptions can be accepted for a given plant (see, e.g. Morrison (n.d.))

$$\frac{RESW_2}{RESC_2} \approx \frac{RESW_1}{RESC_1} \quad (2.119)$$

and

$$VPD_2 \approx VPD_1 \quad (2.120)$$

Then the following estimation is derived for BETA from Equation (2.112), Equation (2.118), Equation (2.119) and Equation (2.120)

$$BETA = ALFA * \frac{CA_1}{CA_2} \quad (2.121)$$

Jarvis and McNaughton (n.d.) postulate that on the regional scale there is no control of stomatal resistance on evapotranspiration, because the humidity profiles are adjusted within the planetary boundary layer. This response would counter stomatal closure as a negative feedback. On the other hand, recent model studies suggest that stomata have far more control on regional and global evapotranspiration than postulated by Jarvis and McNaughton (Kimball et al., n.d.[b]).

Simulation runs with SWIM, which included the CO_2 fertilization effect on crops, have been carried out (Krysanova and Becker, n.d.[a]) applying both methods for ALFA factor in two variants: without and with factor BETA. In this way it is possible to account for current uncertainty regarding significance of stomatal effects on higher CO_2 for regional evapotranspiration. The comparison of two methods for estimation of ALFA factor is shown in Figure 2.17.

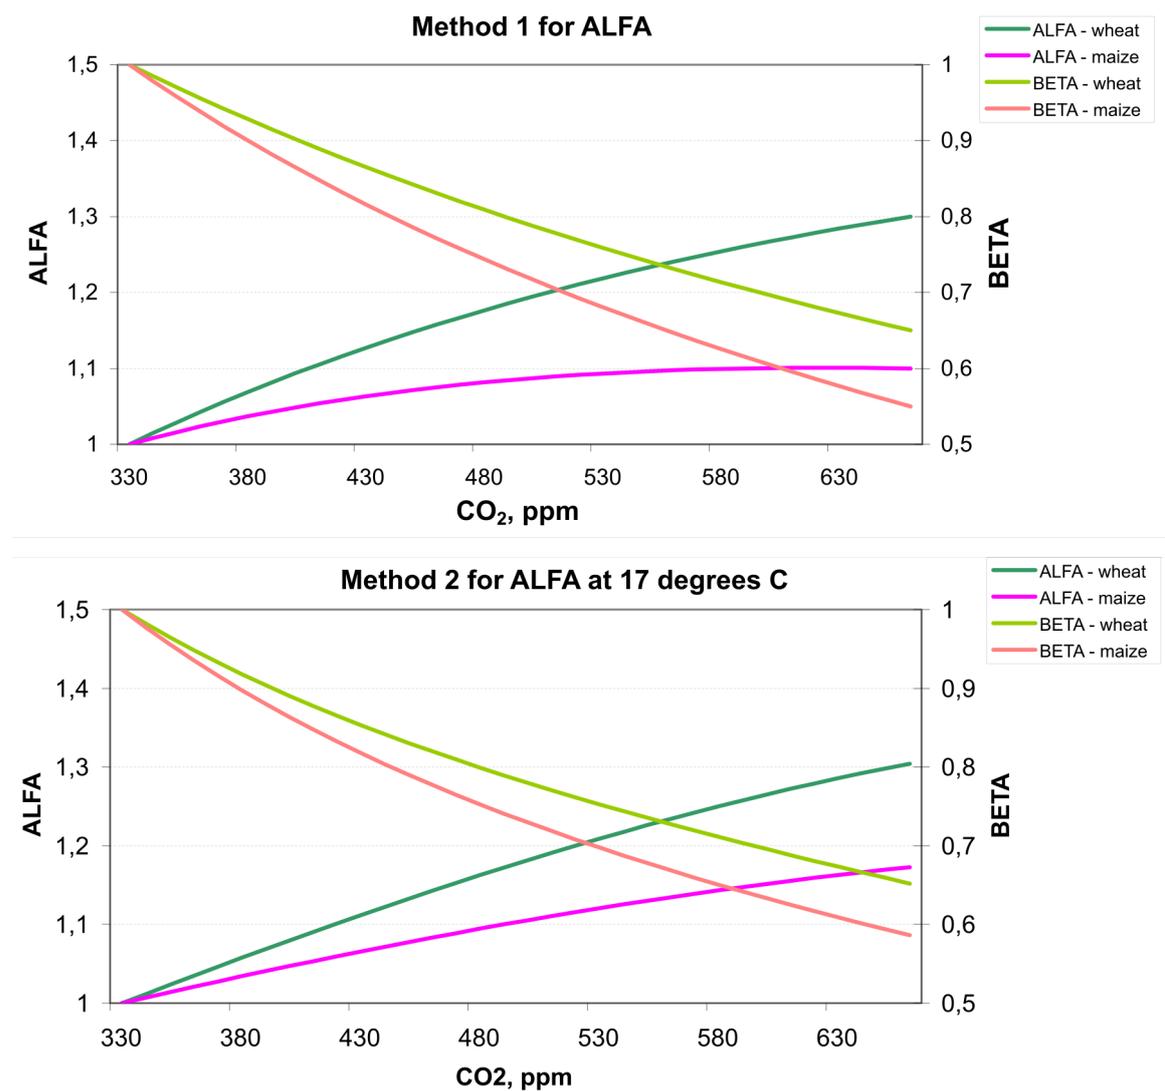


Figure 2.17: Comparison of two methods for the estimation of ALFA and BETA factors: ALFA and BETA as functions of CO₂ concentration under assumption that temperature is 17 °C for the second method

2.3 Nutrient Dynamics

Sub-basin nutrient cycling modules were taken from MATSALU and SWAT, and modified where necessary. The approach used in SWAT was modified from the EPIC model (Williams, Renard, and Dyke, n.d.). The model simulates water, sediment and nutrients dynamics in every hydrotope, aggregates results for sub-basins, and then routes the water, sediment, and nutrients with lateral flow from the sub-basin outlet to the basin outlet.

2.3.1 Soil Temperature

Several processes of nutrient transformation, like mineralisation, are of microbial character, therefore estimation of soil temperature is necessary. Daily average soil temperature is

defined at the center of each soil layer. The basic soil temperature equation is

$$TSO(Z, t) = TAV + \frac{AMP}{2} * \cos\left(\frac{2 * \pi}{265} * (t - 200) - \frac{Z}{DD}\right) * \exp\left(-\frac{Z}{DD}\right) \quad (2.122)$$

where $TSO(Z, t)$ is the soil temperature at the depth Z in the day t in °C, Z is depth from the soil surface in mm, t is time d, TAV is the average annual air temperature in °C, AMP is the annual amplitude in daily average temperature in °C, and DD is the damping depth for the soil in mm. The damping depth DD can be defined as a function of soil bulk density BD and water content SW as expressed in the following equations

$$DD = DP * \exp\left[\ln\left(\frac{500}{DP}\right) * \left(\frac{1 - SPD}{1 + SPD}\right)^2\right] \quad (2.123)$$

$$DP = 1000 + \frac{2500 * BD}{BD + 686 * \exp(-5.63 * BD)} \quad (2.124)$$

$$SPD = \frac{SW}{(0.356 - 0.144 * BD) * ZM} \quad (2.125)$$

where DP is the maximum damping depth for the soil in mm, BD is the soil bulk density in $t\ m^{-3}$, ZM is the distance from the bottom of the lowest soil layer to the surface in mm, and SPD is a scaling parameter.

Equation (2.122) reflects average conditions, if only TAV and AMP parameters are used. Since air temperature is provided as input, the soil temperature module can use the air temperature as driver to correct Equation (2.122).

First, the bare soil surface temperature is estimated as

$$TGB(t) = WFT * (TMX - T) + T, \quad PRECIP = 0 \quad (2.126)$$

$$TGB(t) = WFT * (T - TMN) + TMN, \quad PRECIP > 0 \quad (2.127)$$

where $TGB(t)$ is the bare soil surface temperature in °C in the day t , TMX , T , and TMN are the maximum, average and minimum daily air temperature in °C, and WFT is a proportion of rainy days in a month.

Equation (2.127) uses the minimum air temperature as a base to estimate surface temperature on rainy days. Higher temperatures are estimated on dry days using Equation (2.126). The value of WFT is determined by considering the number of rainy days in this month:

$$WFT = \frac{NRD}{NDD} \quad (2.128)$$

where NDD is the number of days in a month, and NRD is the number of rainy days in a month.

The soil surface temperature is also affected by residue and snow cover. This effect is introduced by lagging the predicted base surface temperature with the equation

$$TG(t) = BCV * TGB(t + 1) + (1 - BCV) * TGB(t) \quad (2.129)$$

where BCV is a lagging factor for simulating residue and snow cover effects on surface temperature. The value of BCV is 0 for bare soil and approaches 1.0 as cover increased as expressed in the equation

$$BCV = \max \left\{ \frac{\frac{COV}{COV + \exp(7.563 - 1.297 * 10^{-4} * COV)}}{\frac{SNO}{SNO + \exp(6.055 - 0.3022 * SNO)}} \right\} \quad (2.130)$$

where COV is the land cover, or the sum of above ground biomass and crop residue in kg ha^{-1} and SNO is the water content of the snow cover in mm.

Then the soil temperature at any depth is estimated with Equation (2.122) by substituting TG(t) for TS(0,t). TG(t) is a better estimate of the surface temperature than T(0,t), because current weather and cover conditions are considered. At the soil surface ($Z=0$), the proper substitution can be accomplished by adding TG(t) and subtracting TS(0,t) from Equation (2.122). Differences between TG(t) and TS(0,t) are damped as Z increases. So, the final equation for estimating soil temperature at any depth is

$$TSO(Z, t) = TAV + \left(\frac{AMP}{2} * \cos \left(\frac{2 * \pi}{365} * (t - 200) - \frac{Z}{DD} \right) + TG(t) - TS(0, t) \right) * \exp \left(- \frac{Z}{DD} \right) \quad (2.131)$$

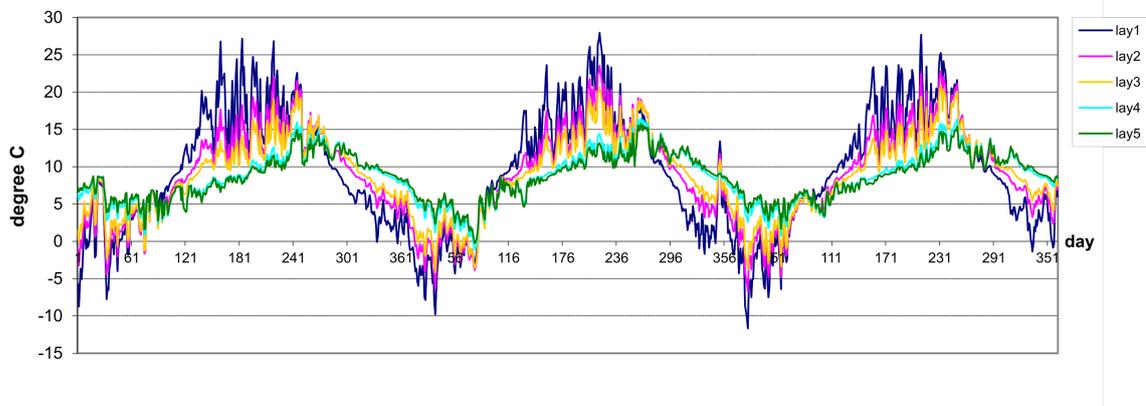


Figure 2.18: An example of soil temperature dynamics in five soil layers simulated with SWIM using Equation (2.82)

An example of soil temperature dynamics as simulated by SWIM using equation 131 is shown in Figure 2.18.

2.3.2 Fertilization and Input with Precipitation

Fertilization in form of mineral and active organic N and P is treated as input information in SWIM. The amounts and dates should be specified in advance. The amounts of fertilizers applied can be either strict or calculated values, depending on whether the strict or flexible fertilization scheme is applied. In the latter case the amounts of applied N and P depend on the actual concentration of mineral N and P in soil.

To estimate the N contribution from rainfall, SWIM uses an average rainfall N and P concentration, specific for the region. The amount of N and P in precipitation is estimated as the product of rainfall amount and concentration.

2.3.3 Nitrogen Mineralisation

The nitrogen mineralisation model is a modification of the PAPRAN mineralisation model (Seligman and Keulen, n.d.). The model considers two sources of mineralisation:

- a) fresh organic N pool, associated with crop residue, and
- b) the active organic N pool, associated with the soil humus.

Step 1.

When the model is initialized, organic N associated with humus is divided into two pools: active or readily mineralisable organic nitrogen ANOR and stable organic nitrogen SNOR (in kg ha⁻¹) by using the equation

$$ANOR = ANFR * NOR \quad (2.132)$$

where ANFR is the active pool fraction (set to 0.15), NOR is the total organic N in kg ha⁻¹ estimated from the initial soil data.

Organic N flow between the active and stable pools is described with the equilibrium equation

$$ASNFL = CASN * \left[\frac{ANOR}{ANFR} - SNOR \right] \quad (2.133)$$

where ASNFL is the flow in kg ha⁻¹ d⁻¹ between the active and stable organic N pools, CASN is the rate constant (10⁻⁴ d⁻¹). The daily flow of humus-related organic N, ASNFL, is added to the stable organic N pool and subtracted from the active organic N pool.

Step 2.

The residue is decomposed daily in accordance with the equation

$$RSD = RSD * (1 - DECR) \quad (2.134)$$

where DECR is the decomposition rate. Fresh organic N pool FON is associated with residue. It is recalculated with the same equation daily:

$$FON = FON * (1 - DECR) \quad (2.135)$$

and N mineralisation flow from fresh organic N in $\text{kg ha}^{-1} \text{d}^{-1}$, FOMN, is estimated as

$$FOMN = DECR * FON \quad (2.136)$$

The decomposition rate DECR is a function of C:N ratio, C:P ratio, temperature, and water content in soil

$$DECR = 0.05 * \min(CNRF, CPRF) * \sqrt{TFM_2 * WFM} \quad (2.137)$$

where CNRF and CPRF are the C:N and C:P ratio factors of mineralisation, respectively, and TFM2 and WFM are the temperature and soil water factors of mineralisation, respectively. The values of CNRF and CPRF are calculated with the equations

$$CNRF = \exp\left[-\frac{0.693 * (CNR - 25)}{25}\right] \quad (2.138)$$

$$CPRF = \exp\left[-\frac{0.693 * (CPR - 200)}{200}\right] \quad (2.139)$$

where CNR is the C:N ratio and CPR is the C:P ratio. The CNR and CPR are calculated with the equations

$$CNR = \frac{0.58 * RSD}{FON + NMIN} \quad (2.140)$$

$$CPR = \frac{0.58 * RSD}{FOP + PLAB} \quad (2.141)$$

where FON is the amount of fresh organic N in kg ha^{-1} , FOP is the amount of fresh organic P in kg ha^{-1} , NMIN is the amount of mineral nitrogen (or nitrate nitrogen plus ammonium nitrogen) in kg ha^{-1} , and PLAB is the amount of labile P in kg ha^{-1} .

The temperature factor in Equation (2.137) is expressed by the equation (see also Figure 2.19)

$$TFM_2 = \frac{TSO(2, t)}{TSO(2, t) + \exp[6.82 - 0.232 * TSO(2, t)]} \quad (2.142)$$

where $TSO(2,t)$ is soil temperature in the second soil layer in °C (the depth of first layer is 10 mm). The soil water factor considers the relation of total soil water to field capacity

$$WFM = \frac{SW}{FC} \quad (2.143)$$

The N mineralisation flow from residue, FOMN, calculated by Equation (2.136) is distributed between mineral nitrogen and active organic nitrogen pools in the proportion 4:1.

Step 3.

The stable organic N pool is not subjected to mineralisation. Only the active pool of organic N in soil is exposed to mineralisation. The mineralisation from the active organic N is expressed by the equation

$$HUMN_i = COMN * \sqrt{TFM_i * WFM_i * ANOR_i} \quad (2.144)$$

where $HUMN_i$ is the mineralisation rate in $kg\ ha^{-1}\ d^{-1}$ for the active organic N pool in layer i , $COMN$ is the humus rate constant for N ($0.0003\ d^{-1}$), and TFM_i and WFM_i are the temperature and water factors of mineralisation for the layer i .

The temperature and water factors are calculated for any soil layer the same as for residue decomposition using Equation (2.142) and Equation (2.143). At the end of the day, the humus mineralisation is subtracted from the active organic N pool and added to the mineral N pool.

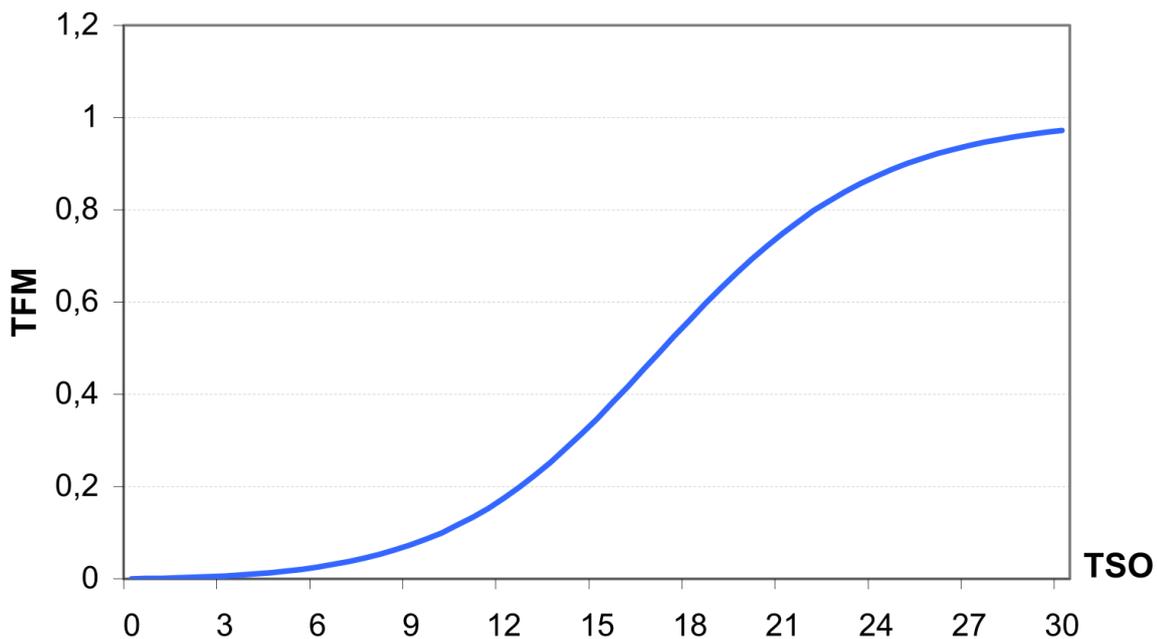


Figure 2.19: Temperature factor of mineralisation, TFM (Equation (2.142))

2.3.4 Phosphorus Mineralisation

The phosphorus mineralisation model is structurally similar to the nitrogen mineralisation model, with some differences as explained below.

Step 1.

Fresh organic P pool FOP is associated with residue. It is recalculated daily as

$$FOP = FOP * (1 - DECR) \quad (2.145)$$

Then the P mineralisation flow from fresh organic P in $\text{kg ha}^{-1} \text{d}^{-1}$, FOMP, is estimated as

$$FOMP = DECR * FOP \quad (2.146)$$

where the rate DECR is calculated the same as for nitrogen using Equation (2.137).

Step 2.

Mineralisation of organic P associated with humus is estimated for each soil layer with the following equation

$$HUMP_i = COMP * \sqrt{TFM_i * WFM_i} * POR_i \quad (2.147)$$

where $HUMP_i$ is the mineralisation rate in $\text{kg ha}^{-1} \text{d}^{-1}$ i, COMP is the humus mineralisation rate constant for P, and POR is the P organic pool in soil layer i.

To maintain the P balance at the end of a day, the mineralized humus is subtracted from the organic P pool and added to the mineral P pool, and the mineralized residue is subtracted from the FOP pool. Then 1/5 of FOMP is added to the POR pool, and 4/5 of FOMP is added to labile P pool, PLAB.

2.3.5 Phosphorus Sorption / Adsorption

Mineral phosphorus is distributed between three pools: labile phosphorus, PLAB, active mineral phosphorus, PMA and stabile mineral phosphorus, PMS. Mineral P flow between the active and stable mineral pools is governed by the equilibrium equation

$$ASPFL = CASP * (4 * PMA - PMS) \quad (2.148)$$

where ASPFL is the flow in $\text{kg ha}^{-1} \text{d}^{-1}$ between the active and stable mineral P pools, CASP is the rate constant (0.0006d^{-1}). The daily flow ASPFL is added to the stable mineral pool and subtracted from the active mineral pool.

Mineral P flow between the active and labile mineral pools is governed by the equilibrium equation

$$ALPFL = PLAB - CALP * PMA \quad (2.149)$$

where ALPFL is the flow in $\text{kg ha}^{-1} \text{d}^{-1}$ between the active and labile mineral P pools, CALP is the equilibrium constant (default: 1.). The daily flow ALPFL is added to the active mineral pool and subtracted from the labile mineral pool.

2.3.6 Denitrification

Denitrification causes NO_3 to be volatilized from soil. The denitrification occurs only in the conditions of oxygen deficit, which usually is associated with high water content. Besides, as one of the microbial processes, denitrification is a function of temperature and carbon content. The equation used to estimate the denitrification rate is

$$\begin{aligned} DENIT_i &= WFD_i * TCFD_i * NIT_i, & SW_i/FC_i &\leq 0.9 \\ DENIT_i &= 0. & SW_i/FC_i &< 0.9 \end{aligned} \quad (2.150)$$

where DENIT is the denitrification flow in layer i in $\text{kg ha}^{-1} \text{d}^{-1}$, WFD is the soil water factor of denitrification, and TCFD is the combined temperature-carbon factor.

The soil water factor considers total soil water and is represented by the exponential equation (see Figure 2.20)

$$WFD_i = 0.06 * \exp\left(\frac{3 * SW_i}{FC}\right) \quad (2.151)$$

where SW_i is the soil water content in layer i in mm and FC_i is the field capacity in mm mm^{-1} .

The combined temperature and carbon factor is expressed by the equation

$$TCFD_i = 1 - \exp(CDN * TFM_i * CBN_i) \quad (2.152)$$

where CDN is a shape coefficient, TFM_i coincides with the temperature factor of mineralisation, and CBN_i is the carbon content, and subscript i refers to the layers.

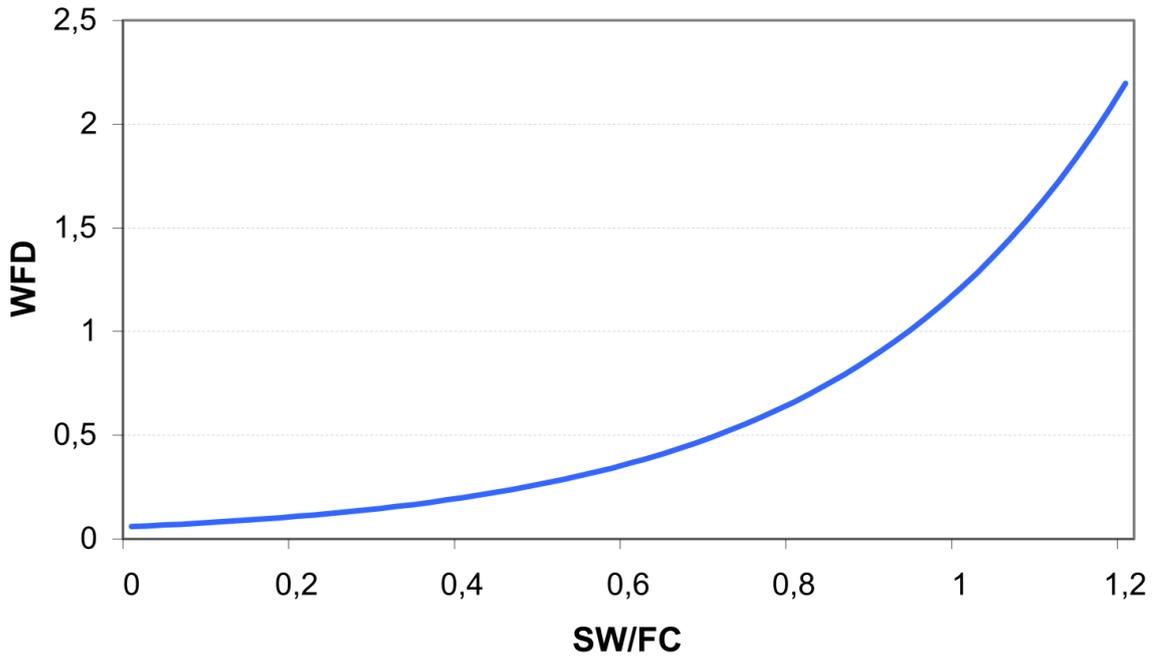


Figure 2.20: Soil water factor of denitrification (Equation (2.151))

2.3.7 Nutrient Uptake by Crops

Nitrogen uptake by crop is estimated using a supply and demand approach. The daily (day t) crop N demand can be computed using the equation

$$NDEM(t) = CNB(t) * BT(t) - CNB(t-1) * BT(t-1) \quad (2.153)$$

where $NDEM(t)$ is the N demand of the crop in kg ha^{-1} , $CNB(t)$ is the optimal N concentration in the crop biomass, and $BT(t)$ is the accumulated biomass in kg ha^{-1} . Three parameters BN_1 , BN_2 , and BN_3 are specified for every crop in the crop database, which describe: BN_1 - normal fraction of nitrogen in plant biomass excluding seed at emergence, BN_2 - at 0.5 maturity, and BN_3 - at maturity.

Then the optimal crop N concentration is calculated as a function of growth stage using the equation (see also Figure 2.21)

$$CNB = (BN_1 - BN_3) * \left[1 - \frac{IHUN}{IHUN + \exp(SP_1 - SP_2 * IHUN)} \right] + BN_3 \quad (2.154)$$

where SP_1 and SP_2 are shape parameters assuring the definition above, and $IHUN(t)$ is the heat unit index expressing the fraction of the growing season as calculated in Equation (2.81). The crop is allowed to take nitrogen from any soil layer that has roots. Uptake starts at the upper layer and proceeds downward until the daily demand is met or until all N has been depleted.

The same approach is used to estimate P uptake, differing only by the parameter values.

2.3.8 Nitrate Loss in Surface Runoff and Leaching to Groundwater

The total amount of water lost from the soil layer i is the sum of surface runoff, lateral subsurface flow (or interflow), and percolation from this layer:

$$WTOT_i = Q_i + SSF_i + PERC_i \quad (2.155)$$

where $WTOT$ is the total water lost from the soil layer in mm, Q is the surface runoff in mm, SSF is the lateral subsurface flow in mm, and $PERC$ is the percolation in mm, and i is the layer.

The amount of nitrate nitrogen lost with $WTOT_i$ is the product of NO_3 -N concentration and water loss as expressed by the equation

$$NFL_i = WTOT_i * CON_i \quad (2.156)$$

where NFL_i is the amount NO_3 -N lost from the layer i in $kg\ ha^{-1}$ and CON_i is the concentration of NO_3 -N in the layer i in $kg\ ha^{-1}$.

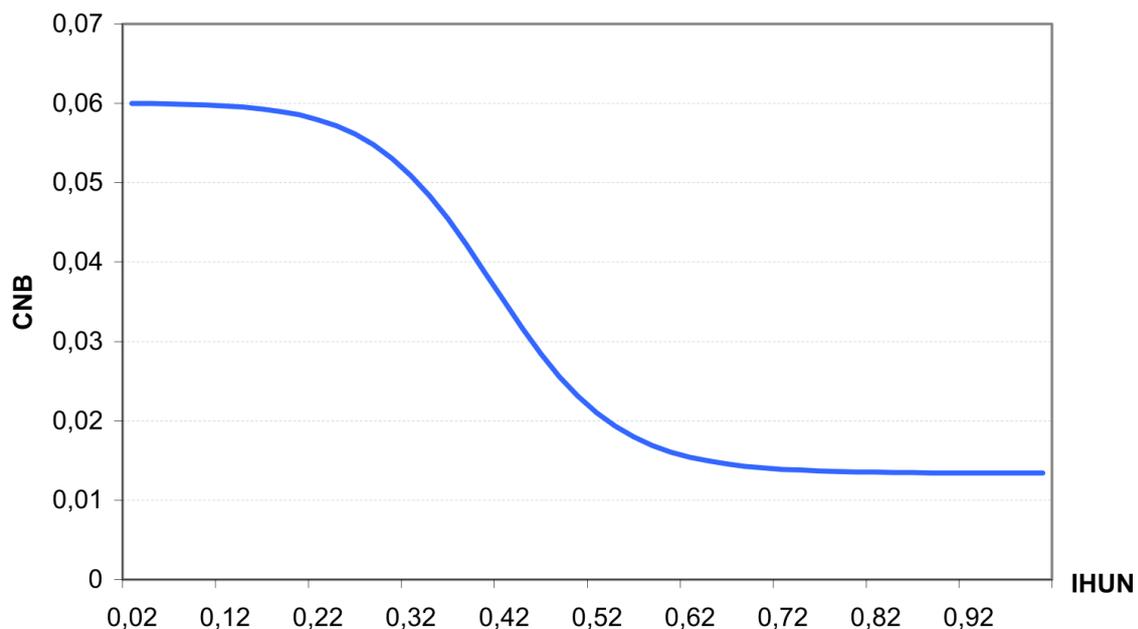


Figure 2.21: The optimal crop N concentration, CNB , as a function of growth stage $IHUN$ (equation 154) assuming $BN_1 = 0.06\ g\ g^{-1}$, $BN_2 = 0.0231\ g\ g^{-1}$ and $BN_3 = 0.0134\ g\ g^{-1}$

The amount of NO₃-N left in the layer is adjusted daily as

$$NMIN(t) = NMIN(t - 1) - WTOT_i * CON_i \quad (2.157)$$

where NMIN(t-1) and NMIN(t) are the amounts of NO₃-N contained in the layer at the beginning and end of the day (in kg ha⁻¹).

Then the NO₃-N concentration can be estimated by dividing the weight of NO₃-N by the water storage in the layer:

$$CON_i(t) = CON_i(t - 1) - CON_i(t - 1) * \left(-\frac{WTOT_i}{PO_i - WP_i} \right) \quad (2.158)$$

where CON_i(t) is the concentration of NO₃-N at the end of the day in kg ha⁻¹, PO is the soil porosity in mm mm⁻¹, and WP is the wilting point water content for soil layer in mm mm⁻¹.

Equation (2.158) is a finite different approximation of the exponential equation

$$CON_i(t) = CON_i(t - 1) - exp\left(-\frac{WTOT_i}{PO_i - WP_i}\right) \quad (2.159)$$

Then the integration of Equation (2.159) allows to calculate NFL for any WTOT value

$$NFL_i = NMIN_i * CW_i = NMIN_i * \left(1 - exp\left(-\frac{WTOT}{PO_i - WP_i}\right)\right) \quad (2.160)$$

The coefficient CW as the function of relative water content is depicted in Figure 2.22. The average concentration for the day is

$$CON_i = \frac{NFL_i}{WTOT_i} \quad (2.161)$$

Amounts of NO₃-N contained in surface runoff, lateral subsurface flow, and percolation are estimated as the products of the volume of water and the concentration with Equation (2.161).

2.3.9 Soluble Phosphorus Loss in Surface Runoff

Phosphorus in soil is mostly associated with the sediment phase. Therefore the soluble P runoff equation can be expressed in the simple form

$$PFL = \frac{0.01 * COP * Q}{CSW} \quad (2.162)$$

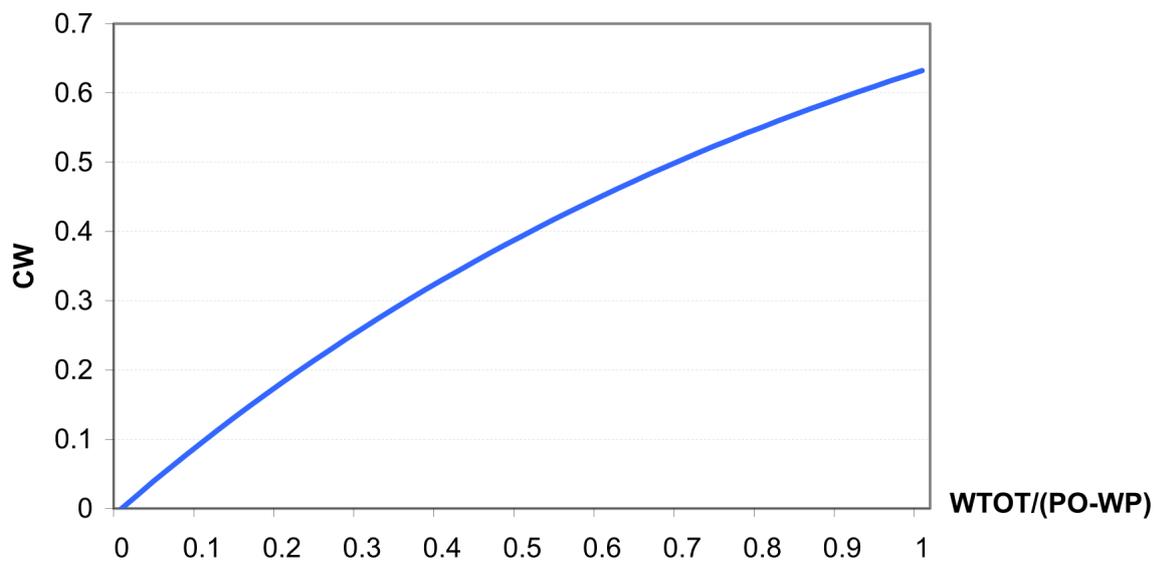


Figure 2.22: Coefficient CW to calculate the amount $\text{NO}_3\text{-N}$ lost from the layer as a function of water content (Equation (2.160))

where PFL is the soluble P in $\text{kg ha}^{-1} \text{d}^{-1}$ lost with surface runoff, Q is the surface runoff in mm , COP is the concentration of labile phosphorus in soil layer in g t^{-1} , and CSW is the P concentration in the sediment divided by that of the water in $\text{m}^3 \text{t}^{-1}$. The value of COP is input to the model and remains constant. The default value of CSW used in the model is 175.

All processes described in Section 2.3.1 – Section 2.3.9 are presented graphically in Figure 2.23 (for nitrogen cycle) and Figure 2.24 (for phosphorus).

The nitrogen module operates with four main pools depicted by the blue rectangles in Figure 2.23: nitrate, stable organic N , mineralisable organic N and fresh organic N (crop residue). The nitrate pool is influenced by the following flows (depicted as flags): N fertilizer application, N precipitation input, N leaching, potential N uptake by plants and denitrification. The latter one is subject to the impact of the following variables and parameters: soil water content, field capacity, shape coefficient, temperature factor of mineralisation and carbon content. The exchange between stable and mineralisable organic nitrogen pools, whose intensity depends on the size of these pools and the rate constant, is shown on the right-hand side. The mineralisation is a function of soil temperature, soil water content, field capacity and the humus rate constant.

The phosphorus module (Figure 2.24) consists of five pools, namely fresh organic P (crop residue), organic P , labile P , active and stable mineral P . Labile P is influenced by the following five flows: decomposition, mineralisation, potential nutrient uptake, P loss by leaching and P exchange with the active mineral phosphorus pool. The size of the latter two flows is modulated by the amount of P in the concerned pools. The two-directional influence we meet in the case of the exchange flow between active and stable mineral P ,

and the mineralisation and decomposition flows (also pictured as flags). Mineralisation, decomposition, and soil erosion control the amount of organic P. The same as for the nitrogen cycle, mineralisation is influenced by soil temperature, soil water content, field capacity and the humus rate constant, whereas the decomposition rate essentially depends on the C-N-ratio, C-P-ratio and soil temperature.

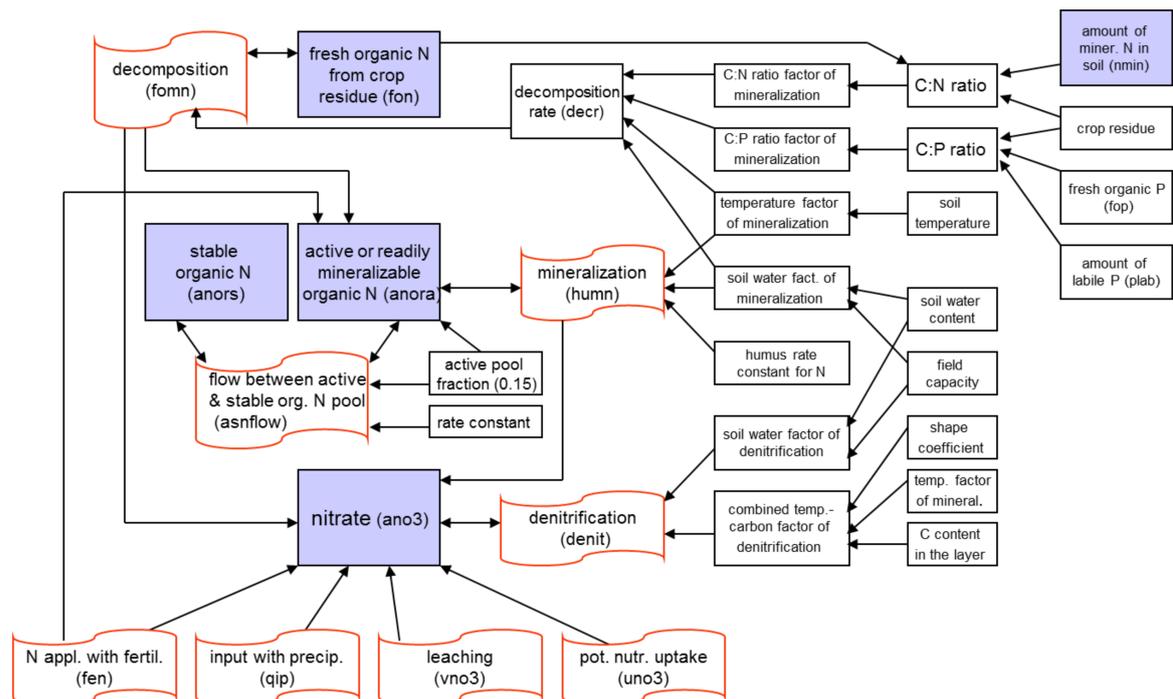


Figure 2.23: Scheme of operations included in SWIM nitrogen module

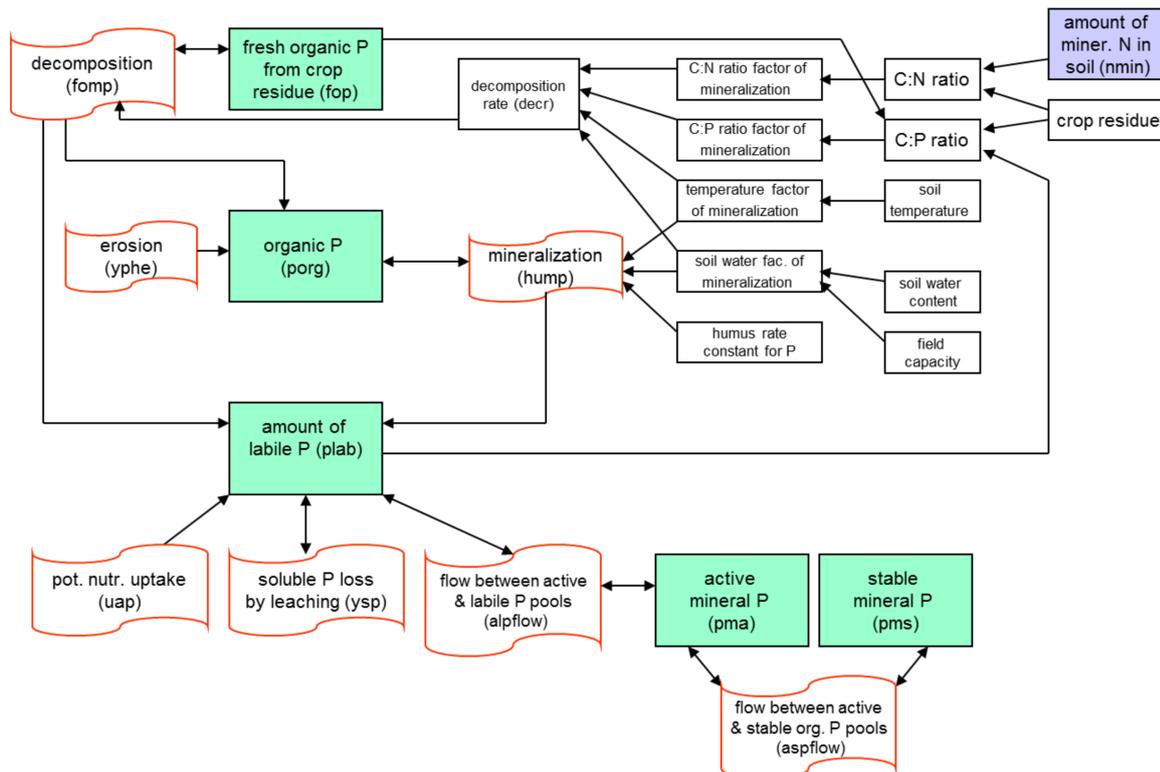


Figure 2.24: Scheme of operations included in SWIM phosphorus module

2.4 Erosion

2.4.1 Sediment Yield

Sediment yield is calculated for each sub-basin with the Modified Universal Soil Loss Equation (MUSLE) (Williams and Berndt, n.d.), practically the same as in SWAT:

$$YSED = 11.8 * (VOLQ * PEAKQ)^{0.56} * K * C * ECP * LS \quad (2.163)$$

where YSED is the sediment yield from the sub-basin in t, VOLQ is the surface runoff column for the sub-basin in m^3 , PEAKQ is the peak flow rate for the sub-basin in $m^3 s^{-1}$, K is the soil erodibility factor, C is the crop management factor, ECP is the erosion control practice factor, and LS is the slope length and steepness factor.

The only difference between SWAT and SWIM in the erosion module is that the surface runoff, the soil erodibility factor K and the crop management factor C are estimated in SWIM for every hydrotope, and then averaged for the sub-basin (weighted areal average). In SWAT there are two options: option 1 based on two-level disaggregation “basin – sub-basins”, when the above mentioned factors are first estimated for the sub-basins, and option 2 similar to that of SWIM, when the factors are estimated first for HRUs (Hydrologic Response Units).

The soil erodibility factor K is estimated from the texture of the upper soil layer or is taken from a database.

The crop management factor, C , is evaluated with the equation,

$$C = \exp[CMN + (-0.2231 - CMN) * \exp(-0.00115 * COV)] \quad (2.164)$$

where COV is the soil cover (above ground biomass + residue) in kg ha^{-1} and CMN is the minimum value of C .

The value of CMN is estimated from the average annual value of C factor, CAV , using the equation

$$CMN = 1.463 * \ln(CAV) + 0.1034 \quad (2.165)$$

The value of CAV for each crop is determined from tables prepared by Wischmeier and Smith (n.d.).

The erosion control practice is estimated as default value of 0.5, if no other data are available (which is usually the case for mesoscale basins and regional case studies).

The LS factor is estimated with the equation (Wischmeier and Smith, n.d.) (see Figure 2.25)

$$LS = \left(\frac{SL}{22.1}\right)^\xi * (65.41 * SS^2 + 4.565 * SS + 0.065) \quad (2.166)$$

where SL is the slope length, SS is the slope steepness, and the exponent ξ varies with slope and is computed with the equation

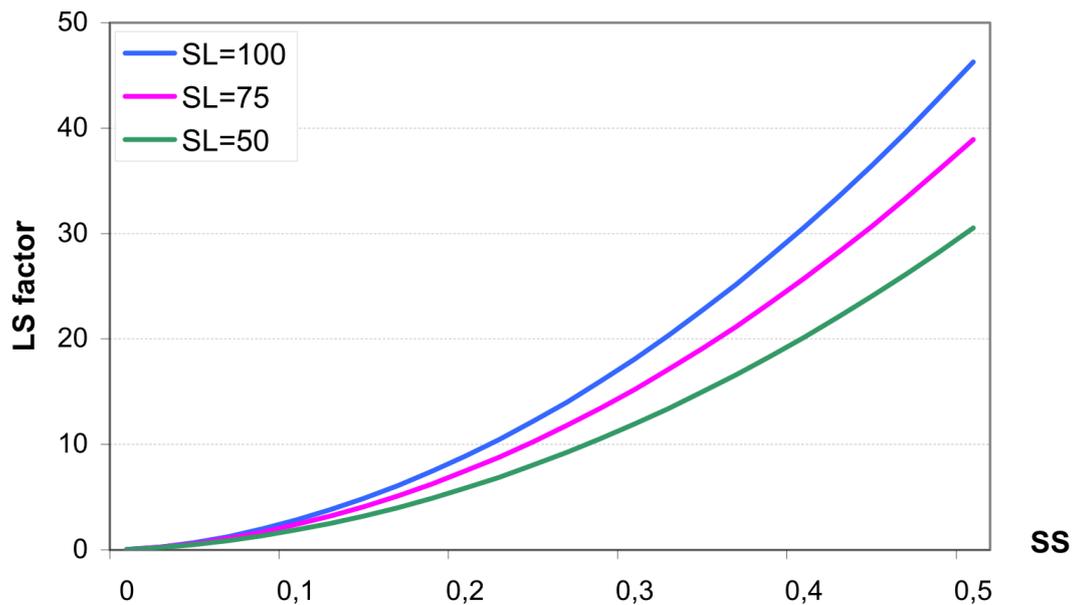


Figure 2.25: The LS factor calculated as a function of slope steepness SS for different slope lengths SL (Equation (2.166)-Equation (2.167))

$$\xi = 0.6 * \left[1 - \exp(-35.835 * SS) \right] \quad (2.167)$$

The slope length and slope steepness are calculated in SWIM/GRASS interface for every sub-basin.

2.4.2 Organic Nitrogen Transport by Sediment

A loading function developed by McElroy (n.d.) and modified by Williams and Hann (1978) for application to individual runoff events is used to estimate organic N loss for each sub-basin. The loading function is

$$YON = 0.001 * YSED * CNOR * ER \quad (2.168)$$

where YON is the organic N runoff loss at the sub-basin outlet in kg ha⁻¹, CNOR is the concentration of organic N in the top soil layer in g t⁻¹, and ER is the enrichment ratio. The value of CNOR is input to the model and is constant throughout the simulation.

The enrichment ratio is the concentration of organic N in sediment divided by that of the soil. Enrichment ratios are logarithmically related to sediment concentration as described by Menzel (n.d.). An individual event enrichment sediment concentration relationship was developed considering upper and lower bounds. The upper bound of the enrichment ratio is the inverse of the sediment delivery ratio DR (sub-basin sediment yield divided by gross sheet erosion): ER < 1/DR. Exceeding the inverse of the delivery ratio implied that more organic N leaves the watershed than is dislodged from the soil.

The delivery ratio is estimated for each runoff event using the equation

$$DR = \left(\frac{PEAKQ}{PRER} \right)^{0.56} \quad (2.169)$$

where DR is the sediment delivery ratio, PEAKQ is the peak runoff rate in mm h⁻¹, and PRER is the peak rainfall excess rate in mm h⁻¹.

Equation (2.169) is based on sediment yield estimated using MUSLE (Williams, n.d.[a]). The rainfall excess rate cannot be evaluated directly because the model uses only the total daily runoff volume, and not the event rainfall. An estimation of PRER can be obtained, however, using the equation

$$PRER = PRR - AIR \quad (2.170)$$

where PRR is the peak rainfall rate in mm h⁻¹ and AIR is the average infiltration rate in mm h⁻¹.

The peak rainfall rate can be calculated with the equation

$$PRR = 2 * PRECIP * \log\left(\frac{1}{1 - \alpha_{0.5}}\right) \quad (2.171)$$

The average infiltration rate can be calculated with the equation

$$AIR = \frac{PRECIP - Q}{DUR} \quad (2.172)$$

where DUR is the rainfall duration in h, and PRECIP is rainfall in mm.

The rainfall duration is estimated the same as in Equation (2.32) according to Williams, Renard, and Dyke (n.d.).

$$DUR = \frac{4.605 * PRECIP}{PRR} = -\frac{2.3025}{\log(1 - \alpha_{0.5})} \quad (2.173)$$

The enrichment ratio is estimated with the logarithmic equation

$$ER = PCON * SEDC^{PEXP} \quad (2.174)$$

where SEDC is the sediment concentration in g m^{-3} , and PCON and PEXP are parameters set by the upper and lower limits.

To approach the lower limit for the enrichment ratio, 1.0, the sediment concentration should be extremely high. Conversely, a very low sediment concentration would cause the enrichment ratio to approach 1/DR. The simultaneous solution of Equation (2.174) at the boundaries assuming that sediment concentrations range from 500 to 250000 g m^{-3} gives the following estimations for PEXP and PCON

$$PEXP = \frac{\log(\frac{1}{DR})}{2.699} \quad (2.175)$$

$$PCON = \frac{1}{0.25^{PEXP}} \quad (2.176)$$

2.4.3 Phosphorus Transport by Sediment

Phosphorus transport with sediments is simulated with a loading function similar to that described in Section 2.4.2 for the organic N transport. The loading function for phosphorus is

$$YP = 0.01 * YSED * POR_1 * ER \quad (2.177)$$

where YP is the sediment phase of P loss in runoff in kg ha^{-1} , and POR_1 is the concentration of organic P in the top soil layer in g t^{-1} .

2.5 River Routing

2.5.1 Flow Routing

The model uses the Muskingum flow routing method (see Maidment (n.d.[b]) and Schulze (n.d.)). For a given reach, the continuity equation may be expressed as:

$$\frac{d(STOR)}{dt} = QIN(t) - QOUT(t) \quad (2.178)$$

where $d(STOR)/dt$ is the rate of change of storage within the reach ($m^3 s^{-1}$), $QIN(t)$ is the inflow rate ($m^3 s^{-1}$) at time t , and $QOUT(t)$ is the outflow rate ($m^3 s^{-1}$) at time t . The Muskingum method assumes a variable discharge storage equation:

$$STOR(t) = KST * \left[X * QIN(t) + (1 - X) * QOUT(t) \right] \quad (2.179)$$

where $STOR(t)$ is the storage (m^3) in river reach at time t , KST is the storage time constant for the reach (s), and X is the dimensionless weighting factor in river reach routing.

Here KST is the ratio of storage to discharge and has the dimension of time. In physical terms, KST is considered to be an average reach travel time for a flood wave, and X indicates the relative importance of the input QIN and outflow $QOUT$ in determining the storage in a reach. The lower and upper limits for X are 0 and 0.5, respectively. Typical values of X for a river reach range between 0.0 and 0.3, with a mean value near 0.2.

Thus, from Equation (2.179) the change in storage over time Δt is given as

$$\begin{aligned} STOR(t+1) - STOR(t) &= KST * \left[X * QIN(t+1) + (1 - X) * QOUT(t+1) \right] \\ &- KST * \left[X * QIN(t) + (1 - X) * QOUT(t) \right] \end{aligned} \quad (2.180)$$

The Muskingum equation is derived from the finite difference form of the continuity Equation (2.178) and Equation (2.180) as the following:

$$QOUT(t+1) = C_1 * QIN(t+1) + C_2 * QIN(t) + C_3 * QOUT(t) \quad (2.181)$$

where the parameters C_1 , C_2 and C_3 are determined as (see also Figure 2.26)

$$C_1 = \frac{-KST * X + 0.5 * \Delta t}{KST - KST * X + 0.5 * \Delta t} \quad (2.182)$$

$$C_2 = \frac{KST * X + 0.5 * \Delta t}{KST - KST * X + 0.5 * \Delta t} \quad (2.183)$$

$$C_3 = \frac{KST - KST * X - 0.5 * \Delta t}{KST - KST * X + 0.5 * \Delta t} \quad (2.184)$$

Here KST and Δt must have the same time units and the three coefficients C_1 , C_2 and C_3 sum to 1.0. Numerical stability is attained and the computation of negative outflows is avoided if the following condition is fulfilled

$$2 * KST * X < \Delta t < 2 * KST * (1 - X) \quad (2.185)$$

Fig. 2.26

Estimation of KST is based on the reach geometry

$$KST = \frac{CHL}{CLR} \quad (2.186)$$

where CHL is the reach length, and CLR is the wave celerity.

The celerity may be estimated by using the Manning formula with an adjusting coefficient for a certain reach shape. For the wide rectangular reach the celerity may be estimated (Schulze, p. AT13-9) as

$$CLR = \frac{5 * CHV}{3} \quad (2.187)$$

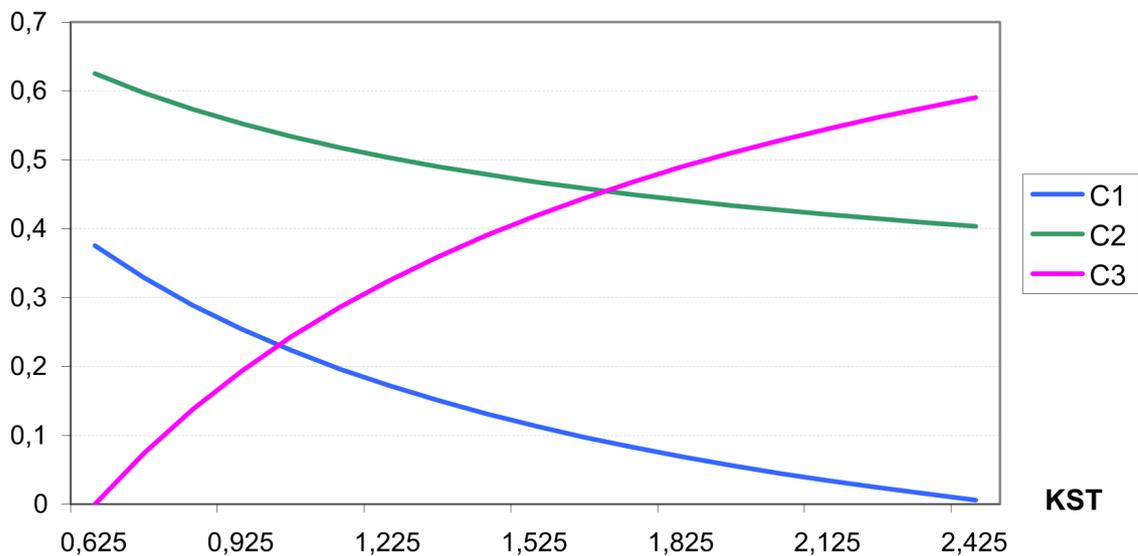


Figure 2.26: Coefficients C_1 , C_2 and C_3 as functions of parameter KST as used to calculate flow routing with the Muskingum Equation (2.182)-Equation (2.184) assuming that $X = 0.2$ and $\Delta t = 1$

where CHV is the average stream velocity in $m\ s^{-1}$. The average velocity is estimated from the Manning formula as

$$CHV = \frac{HR^{2/3} * \sqrt{CHS}}{CHN} \quad (2.188)$$

where HR is hydraulic radius, CHS is channel bottom slope, CHN is the Manning's roughness N . The value of X is set in the model to 0.2.

2.5.2 Sediment Routing

The sediment routing model consists of two components operating simultaneously – deposition and degradation in the streams. Deposition in the stream channel is based on the stream velocity in the channel, which is estimated as a function of the peak flow rate, the flow depth, and the average channel width with the equation

$$CHV = \frac{PEAKQ}{FD * CHW} \quad (2.189)$$

where CHV is the stream velocity in the channel in $m\ s^{-1}$, $PEAKQ$ is the peak flow rate in $m^3\ s^{-1}$, FD is the flow depth in m , and CHW is the average channel width in m .

The flow depth is calculated using the Manning's formula as

$$FD = \left(\frac{PEAKQ * CHN}{CHW * \sqrt{CHS}} \right)^{0.6} \quad (2.190)$$

where CHN is the channel roughness, N , and CHS is the channel slope in $m\ m^{-1}$.

The sediment delivery ratio DEL_R through the reach is described by the logarithmic equation suggested by J. Williams (similar to Equation (2.174))

$$DEL_R = \frac{Q}{YSED_{in}} * SPCON * CHV^{spexp} \quad (2.191)$$

where $YSED_{in}$ is the sediment amount entering the reach, and the parameters $SPCON$ (between 0.0001 and 0.01) and $SPEXP$ (between 1.0 and 1.5) can be used for calibration. The power function in 191 is shown in Figure 2.27 for different combinations of $SPCON$ and CHV .

If $DEL_R < 1.0$, the degradation is zero, and deposition is estimated from the sediment input as

$$DEP = YSED_{in} * (1 - DEL_R), \quad DEGR = 0 \quad (2.192)$$

Otherwise, if $DEL R \leq 1$, the deposition is zero, and the degradation is calculated from the sediment input as

$$\begin{aligned} DEP &= 0. \\ DEGR &= YSED_{in} * (DEL R - 1) * CHK * CHC \end{aligned} \quad (2.193)$$

where CHK is the channel K factor or the effective hydraulic conductivity of the channel alluvium (see also Equation (2.71)), and CHC is the channel C factor.

Finally, the amount of sediment reaching the sub-basin outlet, $YSED_{out}$, is

$$YSED_{out} = YSED_{in} - DEP + DEGR \quad (2.194)$$

2.5.3 Nutrient Routing

Nitrate nitrogen and soluble phosphorus are considered in the model as conservative materials for the duration of an individual runoff event (Williams, n.d.[b]). Thus they are routed by adding contributions from all sub-basins to determine the basin load.

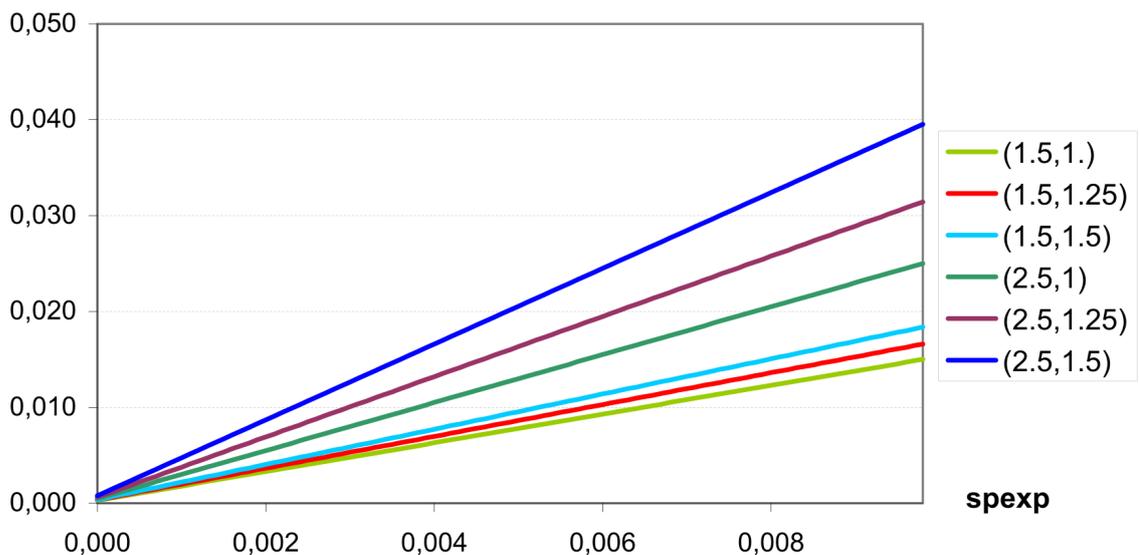


Figure 2.27: Function $SPCON * CHV_{spexp}$ to estimate the sediment delivery ratio $DEL R$ (Equation (2.191)) for different combinations of $(CHV, SPCON)$

Chapter 3

SWIM Code Structure and Input Parameters

In this chapter the code structure of the both parts of the modelling system:

- the SWIM/GRASS interface, and
- the simulation part of SWIM

are described. The SWIM/GRASS interface is applied to prepare necessary (but not all) input files to run the simulation part of SWIM. The simulation part of SWIM performs simulation of ecohydrological processes in river basins or regions.

In Section 3.1 the code structure of the SWIM/GRASS interface is given, and in Section 3.2 the code of the SWIM simulation part is described. The latter is described in more detail. The code development is continuing, and it is assumed that SWIM users should be able to understand and, if necessary, to modify some modules/subroutines of the simulation part or add new modules. Therefore the latter is described in more detail.

In Section 3.3 input and output files are described, and in Section 3.4 all input parameters are listed and defined.

3.1 Structure of the SWIM/GRASS Interface

It is recommended to read the overview of SWIM/GRASS interface (Section 1.3) before reading this section.

The code includes menus and all menu-driven operations as described in Section 1.3. The subroutine *main* displays the first menu, which allows either to create a new project,

or to copy, remove, or work on an existing project. The subroutine *main_menu()* provides the main menu, which lists steps to be completed by the interface.

When the step is chosen, the *sub_menu()* switches between the following important subroutines (see Figure 3.1):

- *get_basin_info* - to request and extract a basin information from the user supplied map layer,
- *hydro_struct_swim* - to create structure file for a basin based on basin map, land use map and soil map,
- *get_topo_info* - to request an elevation map and extract the topographic properties using programs
- *ram.sub-basin* and *compute_slp_len*,
- *rw_gw_swim* - to read the extracted groundwater properties and write them in SWIM format,
- *com_rout_info_swim* - to compute routing structure, including basin number, starting elevation, ending elevation, starting and ending accumulation cells, stream length and the next draining sub-basin number
- *get_climate_station_s* - to extract the numbers of nearest 3 climate stations for a basin or each sub-basin,
- *get_precipit_station_s* - to extract the number of nearest 3 precipitation stations for a basin or each sub-basin,
- *write_cio_1* - to write the extracted control properties in SWIM format,
- *save_swim_project* - to save the project status information in *proj_file* which is the *project_name* with *.proj* extension. This program will be used at the end of each project, in order to keep track of the project status.

All files included in SWIM/GRASS interface are listed and described in Section 3.1. One file contains one subroutine with a similar or the same name. Section 3.1 presents the file *swimmake*, which is used to compile SWIM/GRASS interface.

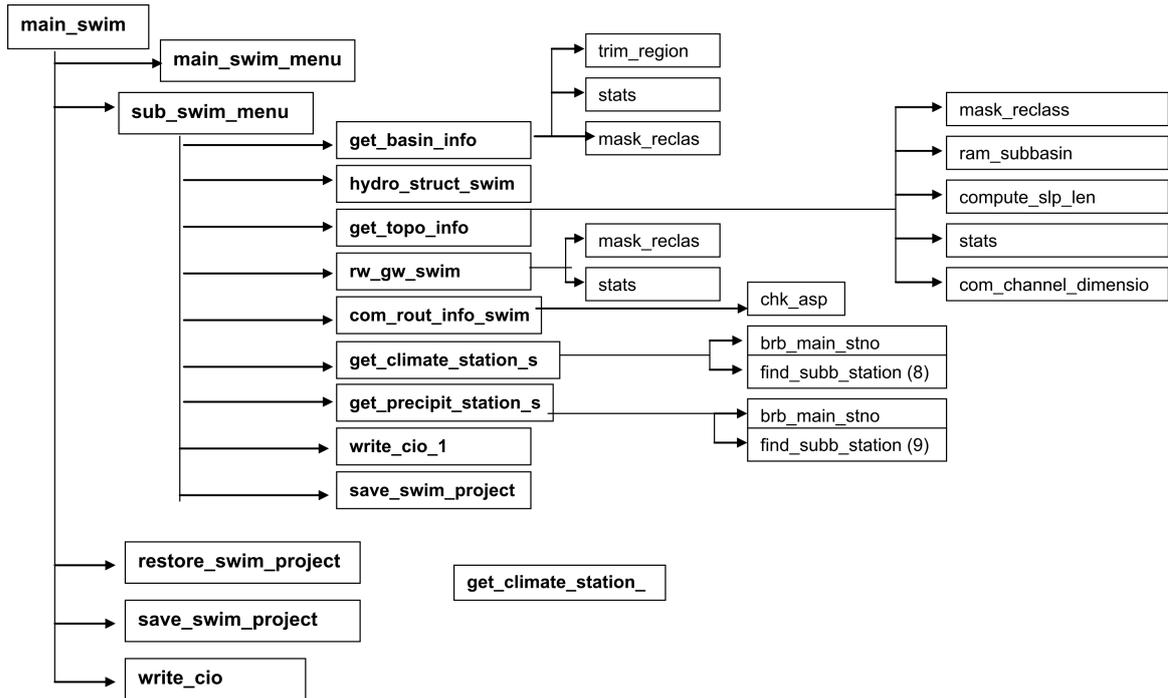


Figure 3.1: Function tree of SWIM/GRASS interface

Table 3.1: Description of files included in SWIM/GRASS interface

No	I line: file name	file/subroutine function
1	<i>cell_open.c</i> <i>int cell_open(name,mapset)</i>	To open an old map with name in the mapset and return the file id. To open an old map with name in the mapset and return the file id. To open an old map with name in the mapset and return the file id.
2	<i>cell_open_new.c</i> <i>int cell_open_new(name)</i>	To open an old map with name in the mapset and return the file id.
3	<i>check_name.c</i> <i>int</i> <i>check_name(name,array,n)</i>	To check if name corresponds to array.
4	<i>chk_asp.c</i> <i>chk_asp()</i>	To check the routing (aspect) data that was created in <i>com_rout_info()</i> . This will interactively allow the user to change the aspect of the basins and to store that information in <i>proj_name.asp</i> file under <i>proj_name</i> directory. It will be read by <i>restore_project</i> while starting the project if the status [8] is done.

Continued on next page

Table 3.1 – *Continued from previous page*

No	I line: file name	file/subroutine function
5	com_rout_info_swim.c com_rout_info()	To extract routing info from basin->p, t.aspect, and temp_basin_acc maps; The information gathered will be stored in a structure which will have basin number, starting elevation, ending elevation, starting and ending accumulation cells, stream length and the next draining sub-basin number.
6	compute_slp_len.c compute_slp_len(elev_map)	To generate a slope and aspect maps from the given elevation map using the neighbourhood technique for slope prediction. It creates a new temporary map called temp_slope which has the values of slope in tenths of percent and also creates a slope length map according to the unit stream power theory.
7	display_info.c display_info()	An option to display a raster map, a site map, a vector map, to display basin number, and to restore the screen
8	dummy_lcra.c dummy_data()	dummy data for .cod file (not used in SWIM)
9	find_subb_stations.c find_subb_stations()	This subroutine establishes correspondence between sub-basins and climate/precipitation stations.
10	forms.c form1()	Forms to fill in (variant SWRRB, not used in SWIM)
11	get_basin_info.c get_basin_info()	This subroutine requests/extracts a basin information from user or from user supplied layer.
12	get_climate_station_s.c get_climate_station()	This subroutine extracts the numbers of nearest 3 climate stations for a basin or each sub-basin using program brb_main_stationno.c. The climate station number list has to be stored in a file under the active directory. The station number(s) is (are) stored in climstat_3.dat under full_path. A label file called proj_name.climstat_3 is defined which can be used to mark the stations in a map.

Continued on next page

Table 3.1 – *Continued from previous page*

No	I line: file name	file/subroutine function
13	get_crop_info.c get_crop_info()	This subroutine requests/extracts the crop properties from user supplied land use map. Each sub-basin is masked and the dominant land use name is selected then the findcrop routine is called to write out the land use properties in the needed format (SWAT version, not used in SWIM).
14	get_irr_nutrient_info.c get_irr_nutrient_info()	This automatically creates .mco file for each sub-basin depending on the user's choice for auto fertilizer and auto irrigation (SWAT variant, not used in SWIM).
15	get_mapset.c char *get_mapset(name)	To return the mapset of the map layer with the name. name: Name of the map whose mapset is needed. The mapset location is returned.
16	get_new_name.c char *get_new_name(promt,name)	To get the new map name in the current mapset using the specified prompt. It checks for the existence for the map layer with the same name and returns name, if succeeds, else quits. promt: any string to give info to the user what the program expects. name: name of the new map layer.
17	get_old_name.c char *get_old_name(prompt)	To get the old map name in any mapset using the specified prompt. It checks for the existence for the map layer and returns name, if succeeds else quits. prompt: To identify the layer one needs.
18	get_precipit_station_s.c get_pecipitation_station()	This subroutine extracts the number of nearest 3 precipitation stations for a basin or each sub-basin using program brb_main_stationno.c. The precipitation station number list has to be stored in a file in the active path. The station number(s) is (are) stored in prstat_3.dat under full_path. A label file called proj_name.prstat_3 is defined which can be used to mark the stations in a map.
19	get_rain_temp_info.c get_rain_temp_info()	This subroutine requests/extracts the rain gauge and temperature gauge station properties from user supplied map. From each sub-basin get the file name that is correspond to that sub-basin. The file has to be in SWAT format (not used in SWIM).

Continued on next page

Table 3.1 – *Continued from previous page*

No	I line: file name	file/subroutine function
20	get_res_inflow.c get_res_inflow()	This requests/extracts reservoir, inflow and (re)compute the routing structures to create .fig file through a menu system (not used in SWIM).
21	get_soil_info.c get_soil_info()	This requests/extracts the soil properties from user supplied soils map. Each sub-basin is masked and the dominant soil name is picked and the findsoil routine is called to write out the soil properties in SWAT format (not used in SWIM).
22	get_topo_info.c get_topo_info()	This subroutine requests/extracts an elevation map from user and extracts the topological properties such as stream length and stream slope using ram.sub-basin program and average overland slope and slope length using compute_slp_len subroutine. It creates several intermediate layers like temp_LS, temp_slen, temp_sslp, and temp_slope.
23	hydro_struct_swim.c hydro_struct()	This function requests a basin map, land use map and soil map for one area, starts r.stats for these three maps, stores the output in "proj_name.str" under full_path except these where one of the first numbers is zero.
24	main_swim.c main()	Main program
25	main_swim_menu.c main_menu()	This subroutine provides the first menu to start with the SWIM/GRASS project.
26	mask_reclass.c mask_reclass(layer_name, cellnum,flag)	To create a temporary file for reclassification the cellnum into MASK layer.
27	read_basin.c read_basin()	This subroutine reads the extracted basin properties in SWIM format. The basin file are stored in "data_dir" and are read in to the SWIM variables.
28	read_cod.c read_cod()	This subroutine reads the extracted control properties in SWIM format. The basin file are stored in "data_dir" and are read in to the SWIM variables.

Continued on next page

Table 3.1 – *Continued from previous page*

No	I line: file name	file/subroutine function
29	read_crop.c read_crop(num)	This subroutine reads the extracted crop properties that are stored in SWIM format by the findcrop program from user supplied crop map. The crop files are stored in "data_dir" and are read in to the SWIM variables for each sub-basin "num".
30	read_res.c read_res(num)	This subroutine reads the user specified reservoir data that are stored in SWIM format. The reservoir files are stored in "data_dir" as res_num.res and are read in to the SWIM variables for each sub-basin "num" (not used in SWIM).
31	read_rout.c read_rout(num)	This subroutine reads the extracted sub-basin routing properties in SWIM format. The basin file are stored in "data_dir" and are read in to the SWIM variables for sub-basin "num".
32	read_soil.c read_soil(num)	This subroutine reads the extracted soil properties that are stored in SWIM format by the findsoil program from user supplied soils map. The soil files are stored in "data_dir" and are read in to the SWIM variables for each sub-basin "num".
33	read_sub-basin.c read_sub-basin(num)	This subroutine reads the extracted sub-basin properties in SWIM format. The basin file are stored in "data_dir" and are read in to the SWIM variables for sub-basin "num".
34	read_weather.c read_weather()	This subroutine reads the generated weather parameters from the weath_gen program which is stored in SWAT format. The weather station was selected is the most closest station from the approximate centre of the Basin. The weather file is stored in "data_dir" and are read in to the SWAT variables for the whole basin (not used).
35	restore_swim_project.c restore_project()	This subroutine program retrieves the project status information from proj_file which is the project_name with .proj extension into appropriate variables.
36	rm_rast_map.c rm_rast_map(map)	This subroutine removes current raster map.

Continued on next page

Table 3.1 – *Continued from previous page*

No	I line: file name	file/subroutine function
37	rw_gw_swim.c read_gw()	This subroutine reads the extracted groundwater properties in SWIM format. The groundwater parameter file are stored in "data_dir" and are read in to the SWIM variables.
38	save_swim_project.c save_project()	This program saves the project status information in proj_file which is the project_name with .proj extension. This program will be used at the end of each project, in order to keep track of the project status.
39	stats.c stats(layer_name, flag, stat)	This routine gets the categories, area flag: 1 - stores the output in a variables 2 - returns the cell number that has maximum occurrence 3 - returns the average value of the cell number 4 - returns the weighted average value of the cell number.
40	sub_swim_menu.c sub_menu()	This subroutine is the major menu in a loop to update the various data from either layers or user inputs This program will be used while working on a ongoing project.
41	what.c	This subroutine checks current GRASS window.
42	write_basin.c write_basin()	This subroutine writes the extracted basin properties in SWIM format. The basin file are stored in "data_dir" and are read as the SWIM variables.
43	write_cio_1.c write_cio()	This subroutines writes the extracted control properties in SWIM format. The basin file are stored in "data_dir" and are read as the SWIM variables.
44	write_cod.c write_cod()	This subroutine writes the extracted control properties in SWIM format. The basin file are stored in "data_dir" and are read as the SWIM variables.
45	write_crop.c write_crop(num,crp_fl)	This subroutine writes the extracted crop properties from crp_fl database in SWIM format. The crop files are stored in "data_dir" and are read as the SWIM variables for each sub-basin "num".
46	write_res.c write_res(num)	This subroutine writes the reservoir data provided by user in SWIM format The reservoir files are stored in "data_dir" as res_num.res and are read as the SWIM variables for each sub-basin "num".

Continued on next page

Table 3.1 – *Continued from previous page*

No	I line: file name	file/subroutine function
47	write_rout.c write_rout()	This subroutine writes the extracted sub-basin routing properties in SWIM format. The basin file are stored in "data_dir" and are read as the SWIM variables for sub-basin "num".
48	write_soil.c write_soil(num)	This subroutine writes the extracted soil properties in SWIM format. The soil files are stored in "data_dir" and are read as the SWIM variables for each sub-basin "num".
49	write_sub-basin.c write_sub-basin()	This subroutine writes the extracted sub-basin properties in SWIM format. The basin file are stored in "data_dir" and are read as the SWIM variables for sub-basin "num".
50	write_weather.c	This subroutine writes the generated weather parameters from the weath_gen program and stores in SWIM format. The weather file is stored in "data_dir" and are read as the SWIM variables for the whole

Table 3.2: File swimmake used to compile SWIM/GRASS interface

Bin = ../bin
LIBDIR = /usr/local/grass/source/src/libes/LIB
RASTERLIB = \$(LIBDIR)/libraster.a
DISPLAYLIB = \$(LIBDIR)/libdisplay.a
D_LIB = \$(LIBDIR)/libD.a
GISLIB = \$(LIBDIR)/libgis.a
VASK = \$(LIBDIR)/libvask.a
LIBES = \$(D_LIB) \$(DISPLAYLIB) \$(RASTERLIB) \$(GISLIB) \$(VASK)
EXTRACFLAGS = -L/usr/local/grass/source/src/libes
PGM = swim_input

Continued on next page

Table 3.2 – *Continued from previous page*

```
LIST = \  
    cell_open.o\  
    cell_open_new.o\  
    check_name.o\  
    chk_asp.o\  
    com_rout_info_swim.o\  
    compute_slp_len.o\  
    display_info.o\  
    dummy_lcra.o\  
    find_subb_stations.o\  
    forms.o\  
    get_basin_info.o\  
    get_climate_station_s.o\  
    get_crop_info.o\  
    get_irr_nutrient_info.o\  
    get_mapset.o\  
    get_new_name.o\  
    get_old_name.o\  
    get_precipit_station_s.o\  
    get_rain_temp_info.o\  
    get_res_inflow.o\  
    get_soil_info.o\  
    get_topo_info.o\  
    hydro_struct_swim.o\  
    main_swim.o\  
    main_swim_menu.o\  
    mask_reclass.o\  
    read_basin.o\  
    read_cod.o\  
    read_crop.o\  
    read_res.o\  

```

Continued on next page

Table 3.2 – *Continued from previous page*

read_rout.o\ read_soil.o\ read_sub-basin.o\ read_weather.o\ restore_swim_project.o\ rm_rast_map.o\ rw_gw_swim.o\ save_swim_project.o\ stats.o\ sub_swim_menu.o\ what.o\ write_basin.o\ write_cio_1.o\ write_cod.o\ write_crop.o\ wwrite_res.o\ wwrite_rout.o\ wwrite_soil.o\ wwrite_sub-basin.o\ wwrite_weather.o\ \$(PGM): \$(LIST) \$(LIBES) \$(CC) \$(LDFLAGS) -o \$@ \$(LIST) \$(LIBES) -lm -lcurses

3.2 Structure of the SWIM Simulation Part

3.2.1 Files and their Functions

The simulation part of the model code consists of 33 files listed in Section 3.2.1. They can be subdivided regarding their main functions into the following parts:

1. main administrative files, representing three-level disaggregation procedure: basin - sub-basin - hydrotope,
2. climate data input or generation,
3. hydrological processes,
4. erosion, crop/vegetation growth and nutrient processes,
5. routing of water, sediments and nutrients,
6. administrative subroutines (common blocks, read input files, initialisation of variables, writing of results, and statistical evaluation of results).

Every file contains one or several subroutines with similar functions. Altogether there are 85 subroutines in the simulation part. General functions performed in the files are also shortly described in Section 3.2.1.

The block-scheme of the model operations is presented in Figure 3.2. It shows the sequence of computing different processes.

The file *Makefile* used to compile SWIM code is given in Section 3.2.1.

Table 3.3: Files and subroutines included in SWIM code

No	File name	Subroutines	Main function
I. Main administrative files, representing three-level disaggregation procedure: Basin – Subbasin - Hydrotope			
1	main.f	main	Initialisation (calls subroutines reading input data), annual and daily loops, routing structure, and aggregation of results for the basin
2	sub-basin.f	sub-basin()	Sub-basin operations: initial conditions in hydrotopes in the first day, calls hydrotop, aggregates hydrotop outputs, and provides outputs from sub-basin for routing
3	hydrotop.f	hydrotop()	Simulation of all hydrological, vegetation and nutrient cycling processes in hydrotopes
II. Climate parameters read or generate			
4	cliread.f	cliread + sub2prst	Reading observed climate and hydrological data
5	clicon.f	clicon + clgen()	Generation of daily climate data from monthly statistical data

Continued on next page

Table 3.3 – continued from previous page

No	File name	Subroutines	Main function
III. Hydrological processes			
6	solt.f	solt() + snom()	Calculation of soil temperature and snow melt
7	curn.f	curno() + volq() + peakq() + tran()	Simulation of daily runoff, peak runoff rate and transmission losses for hydrotopes
8	evap.f	evap()	Calculation of soil evaporation and potential plant transpiration
9	perc.f	purk() + perc() + percrack()	Calculation of percolation and lateral subsurface flow from soil
10	gwat.f	gwmod()	Calculation of groundwater contribution to streamflow
IV Erosion, crop and nutrients			
11	eros.f	ecklsp() + ysed() + enrsb() + orgnsed() + psed()	Simulation of erosion processes
12	crop.f	crpmd() + operat() + growth()	Simulation of crop planting, growth and harvesting
13	veget.f	vegmd()	Simulation of non-crop vegetation
14	vegfun.f	wstress() + tstress() + npstress() + scurve() + ascrv() + adjustbe()	Special functions for crop and vegetation: water, temperature and N&P stress, CO2 adjustment of the biomass-energy ratio (alpha factor)
15	copyld.f	cryld_brb	Calculation of crop yield for districts in Brandenburg
16	ncycle.f	ncycle() + nlch() + nuptake() + fert()	Simulation of N cycle in soil
17	pcycle.f	pcycle() + psollch() + puptake()	Simulation of P cycle in soil
V Routing of water, sediments and nutrients			
18	route.f	route() + add() + transfer()	Calculation of water, sediment and nutrient routing
19	routfun.f	rthyd() + rtsed() + enrtr() + rtorgn + rtpsed + ttcoefi() + coefs() + qman	Routing functions

Continued on next page

Table 3.3 – *continued from previous page*

No	File name	Subroutines	Main function
VI Administrative subroutines			
20	compar.f		Common parameters: dimensions
21	common.f		Common blocks: parameters and variables
22	open.f	open + opensub + open-soil + openstruct + closef + caps()	Opening and closing input/output files
23	readcod.f	readcod	Reading xxx.cod* and xxx.fig input files: codes for print and routing
24	readbas.f	readbas	Reading xxx.bsn and xxx.str input files: basin and calibration parameters, and hydrotope structure
25	readcrp.f	readcrp	Reading crop.dat input file
26	readsub.f	readsub	Call of readwet, reading sub-basin input files: xxxNN.sub**, xxxNN.gw, and xxxNN.rte
27	readsol.f	readsol + rflowtt()	Reading soil parameters from soilNN.dat files
28	readwet.f	readwet	Reading monthly weather statistical parameters for the basin
29	init.f	blockdata + init + init-sums + initsub	Block data and initialisation of variables
30	initcrop.f	initcrop()	Initialisation of crop management parameters
31	genres.f	wr_daily, wr_month(), wr_annual	Writing daily, monthly and annual general results
32	flohyd.f	fomon() + floann + floave + crop_gis + hydro_gis	Writing monthly, annual and average annual water and N flows for selected hydrotopes; Writing crop yield and annual water flows (for hydrotopes) in the GRASS input format
33	stat.f	alpha() + gammad() + distn() + gcycl() + randn() + xmonth + xnash()	Statistical functions and criteria of fit

Table 3.4: File Makefile used to compile SWIM code

```
OBJ=      clicon.o\  
          cliread.o\  
          crop.o\  
          cropyld.o\  
          curn.o\  
          eros.o\  
          evap.o\  
          flohyd.o\  
          genres.o\  
          gwat.o\  
          hydrotop.o\  
          init.o\  
          initcrop.o\  
          main.o\  
          ncycle.o\  
          open.o\  
          pcycle.o\  
          perc.o\  
          readcod.o\  
          readcrp.o\  
          readbas.o\  
          readsub.o\  
          readsol.o\  
          readwet.o\  
          route.o\  
          routfun.o\  
          solt.o\  
          sub-basin.o\  
          stat.o\  
          veget.o\  

```

Continued on next page

Table 3.4 – *Continued from previous page*

vegfun.o\ FFLAGS = -g -qftrap=invalid:zerodivide:overflow:enable swim: \$(OBJ) f77 \$(FFLAGS) \$(OBJ) -lm -loadmap:map.out -o swim \$(OBJ): common.f .f.o: f77 \$(FFLAGS) -c \$*.f clean: rm -f \$(OBJ) swim
--

3.2.2 Subroutines and their Functions

All the subroutines included in SWIM code are shortly described in Section 3.2.2. In addition, the Table indicates, where every subroutine is called.

Table 3.5: Description of subroutines included in SWIM simulation part

File	Subroutine	Subroutine description	Called in
main.f	main	Main program. Calls subroutines reading input data and initialisation subroutines. Establishes annual and daily loops, and the routing structure. Aggregates results for the basin.	
sub-basin.f	sub-basin	Sub-basin operations: initialisation in hydrotopes, call hydrotop, aggregation of hydrotope outputs, setting lateral flows for routing	main
hydrotop.f	hydrotop	Simulation of all hydrological, vegetation and nutrient cycling processes in hydrotopes	sub-basin
cliread.f	cliread	this subroutine read climate data	main

Continued on next page

Table 3.5 – *continued from previous page*

File	Subroutine	Subroutine description	Called in
	sub2prst	this subroutine establishes the correspondence between sub-basins and precipitation stations	main
clicon.f	clicon	this subroutine controls weather inputs	main
	clgen()	this subroutine simulates daily solar radiation, daily precipitation, and max. and min. air temperature at the user option	clicon
solt.f	solt	this subroutine estimates daily average temperature at the bottom of each soil layer	hydrotop
	snom	this subroutine calculates daily snow melt when the average air temperature exceeds 0 degrees	sub-basin
curn.f	curno()	this subroutine sets curve number parameters	hydrotop
	volq()	this subroutine predicts daily runoff given daily precipitation and snowmelt using a modified curve number approach	hydrotop
	peakq()	this subroutine computes the peak runoff rate using a modification of the Rational Formula	sub-basin
	tran()	this subroutine computes channel transmission losses	sub-basin
evap.f	evap()	this subroutine computes the amount of soil evaporation and potential plant evaporation using Ritchie's model	hydrotop
perc.f	purk()	this is the master percolation component It divides each layer's flow into 4 mm slugs and manages the routing process	hydrotop
	perc()	this subroutine computes percolation and lateral subsurface flow from a soil layer when field capacity is exceeded - hillflow method	purk
	percrack	this subroutine computes percolation by crack flow	purk
gwat.f	gwmod()	this subroutine estimates groundwater contribution to streamflow	sub-basin
eros.f	ecklsp()	this subroutine calculates K, P, and LS factors for hydrotope	hydrotop

Continued on next page

Table 3.5 – *continued from previous page*

File	Subroutine	Subroutine description	Called in
	ysed()	this subroutine predicts daily soil loss caused by water erosion using the Modified Universal Soil Loss Equation	sub-basin
	enrsb()	this subroutine computes enrichment ratio for sub-basin	sub-basin
	orgnsed()	this subroutine computes organic N loss with erosion	sub-basin
	psed()	this subroutine computes P loss with erosion	sub-basin
crop.f	crpmd()	Main crop routine: calls operat() and growth() subroutines	hydrotop
	operat	this subroutine sets crop operations: planting, harvesting, and kill	crpmd
	growth	this subroutine predicts daily potential growth of total crop biomass and roots and calculates the leaf area index. It incorporates residue and decays residue on ground surface. It calls subroutines wstress and tstress and adjusts daily dry matter to stress	crpmd
veget.f	vegmd()	this subroutine predicts daily potential growth of total plant biomass and roots and calculates the leaf area index	hydrotop
vegfun.f	wstress()	this subroutine distributes potential plant transpiration through the root zone and calculates actual plant water use based on soil water availability. It estimates water stress factor for crops.	crpmd, vegmd
	tstress()	this subroutine computes temperature stress for crop growth	growth, vegmd
	npstress()	this subroutine computes N & P stress factor	nuptake, puptake
	scurve()	S-curve function	growth, adjustbe
	ascrv()	S-curve function	readcrp
	adjustbe()	this subroutine adjusts biomass-energy ration to CO ₂ concentration	growth
cropyld.f	cryld_brb	this subroutine calculates crop yield for districts in BRB, closed if not Brandenburg	main

Continued on next page

Table 3.5 – *continued from previous page*

File	Subroutine	Subroutine description	Called in
ncycle.f	ncycle()	this subroutine calculates N cycle: daily N mineralisation and immobilisation considering fresh organic material (crop residue) and active and stable humus	hydrotop
	nlch()	this subroutine computes nitrate leaching from soil	hydrotop
	nuptake()	this subroutine computes N-uptake by crops and natural plants	growth, vegmd
	fert()	this subroutine applies N and P specified by date and amount	hydrotop
pcycle.f	pcycle	this subroutine computes P cycle: P flux between labile, active mineral and stable mineral P pools	hydrotop
	psollch	this subroutine computes soluble P leaching	hydrotop
	puptake	this subroutine computes P-uptake by crops and natural vegetation	growth, vegmd
route.f	route()	this subroutine controls the channel routing	main
	add()	this subroutine adds outputs for	main
	transfer()	this subroutine controls the channel routing	main
routfun.f	rthyd()	this subroutine routes a daily flow through a reach using a constant storage coefficient	route
	rtсед()	this subroutine routes sediment from sub-basin to basin outlets, accounting for deposition (based on fall velocity) and degradation in stream	route
	enrrt()	this subroutine computes enrichment coefficient for N routing	route
	rtorgn	this subroutine computes organic N routing	route
	rtсед	this subroutine computes P routing	route
	ttcoefi()	this subroutine computes travel time coeffs phi() for the simplified routing	main
	coefs()	this subroutine calculates routing coefficients	ttcoefi

Continued on next page

Table 3.5 – *continued from previous page*

File	Subroutine	Subroutine description	Called in
	qman()	this subroutine computes flow using Manning equation	ttcoefi
open.f	open	this subroutine opens main input files	main
	opensub	this subroutine opens sub-basin input files	readsub
	opensoil	this subroutine opens soil data files 15	readsol
	openstruct	this subroutine opens 16 - structure file	readbas
	closef	this subroutine closes files 11,12,13,14	main
	caps()	this subroutine removes extra blanks	open, opensub, opensoil, open- struct
readcod.f	readcod	this subroutine reads codes for printing, routing	main
readbas.f	readbas	this subroutine reads basin parameters and calibration parameters	main
readcrp.f	readcrp	this subroutine reads crop parameters	main
readsub.f	readsub	this subroutine reads sub-basin input parameters	main
readsol.f	readsol	this subroutine reads soil input parameters	main
	rflowtt()	this subroutine computes return flow travel time	readsol
readwet.f	readwet()	this subroutine reads monthly statistical weather parameters, provided by user	readsub
init.f	block data	block data	
	init	this subroutine initialises variables in main	main
	initsums	this subroutine initialises variables for GIS output	main
	initsub	this subroutine initialises sub-basin variables	sub-basin
initcrop.f	initcrop()	this subroutine initialises crop management	main
genres.f	wr_daily	this subroutine writes daily general results	main
	wr_month()	this subroutine writes monthly general results	main
	wr_annual	this subroutine writes annual general results	main
flohyd.f	flomon()	this subroutine writes monthly water and N flows for selected hydrotopes	main

Continued on next page

Table 3.5 – *continued from previous page*

File	Subroutine	Subroutine description	Called in
	floann	this subroutine writes annual water and N flows for selected hydrotopes	main
	floave	this subroutine writes average annual water and N flows for selected hydrotopes	main
	crop_gis	this subroutine writes crop yield for GRASS	sub-basin
	hydro_gis	this subroutine writes annual sums of water flows for hydrotopes (for GRASS)	sub-basin
stat.f	alpha()	this subroutine computes alpha, the fraction of total rainfall that occurs during 0.5h	sub-basin, clicon
	gammad()	this function provides numbers from gamma distribution	alpha
	distn()	this function computes the distance from the mean of a normal distribution	clgen
	gcycl()	this function cycles the random number generator	main
	randn()	this function provides random numbers ranging from 0. to 1.	init, readsub, gcycl, clicon, clgen, gammad
	xmonth	this subroutine calculates the month, given the day of the year	main
	xnash()	this subroutines computes criteria of fit	main

3.2.3 Main Administrative Subroutines and the Parameter Read Part

The subroutine main performs initialisation of the simulation run by reading input data and initialising variables and parameters. It establishes annual and daily loops, and inside the daily loop it calls sequentially the sub-basin subroutine for every sub-basin to calculate all processes in sub-basin, and then routes lateral flows to the basin outlet following the routing structure file xxx.fig. The main subroutine also writes daily, monthly and annual results for the basin.

The subroutine sub-basin performs sub-basin operations: initialisation of variables for hydrotopes, calling of hydrotope subroutine, aggregation of hydrotope outputs, and setting lateral flows for routing.

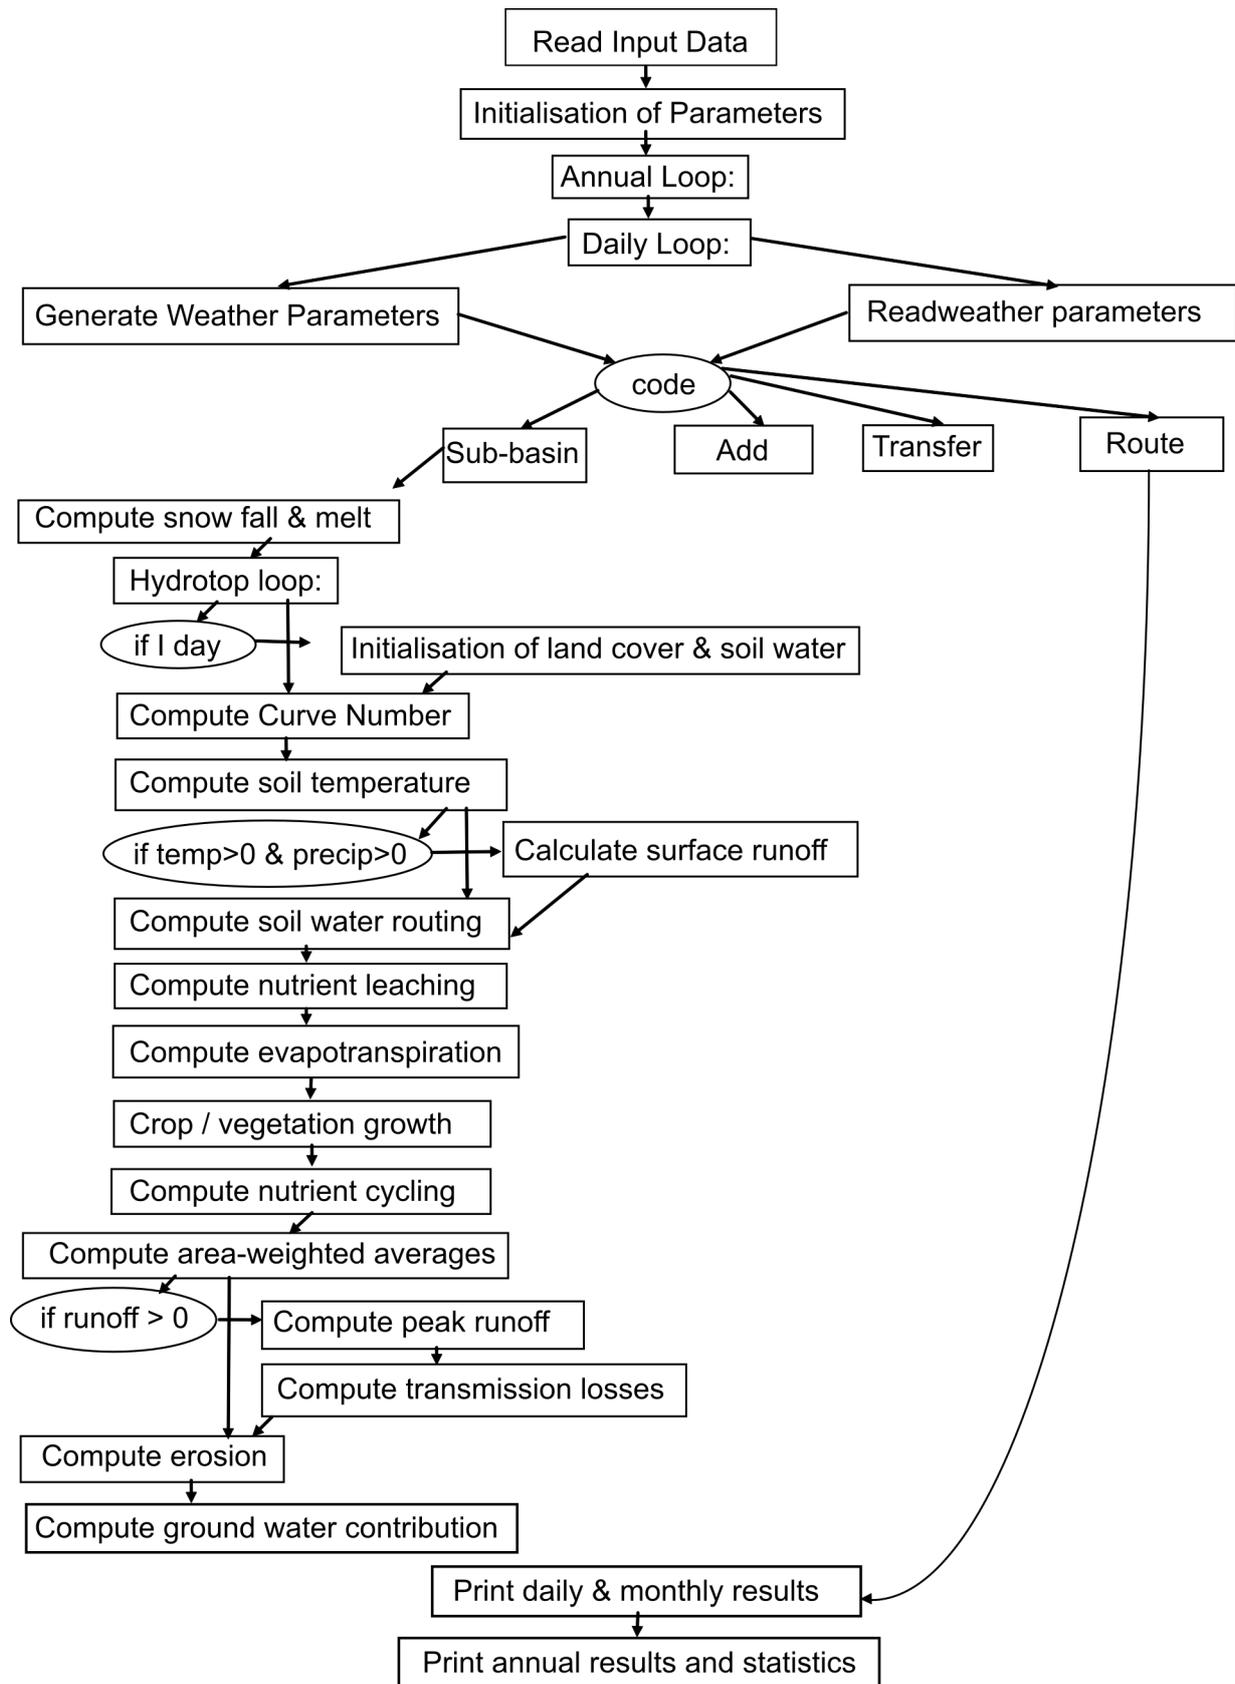


Figure 3.2: Scheme of operations in the simulation part of SWIM

The subroutine hydrotop controls simulation of all hydrological, vegetation and nutrient cycling processes in hydrotopes, by calling different related subroutines.

The structure of main, sub-basin and hydrotop subroutines is shown in the following Section 3.2.3, Section 3.2.3 and Section 3.2.3. The user has to keep in mind that some of the calls are conditional, though it is not indicated in the Tables.

Table 3.6: Structure of the subroutine MAIN

MAIN PROGRAM BEGIN:

call open

call readcod

call gcycl(ign,xx)

call readbas

call sub2prst

call readsub

call readsol

call init

call ttcoefi(j), j=1,lu

call closef

ANNUAL LOOP: CYCLE 540:iy = 1, nbyr

 call initcrop(iy)

 DAILY LOOP: CYCLE 530: i = id1, nd

 call initsums

 call cliread

 SWITCH: icode: (1,2,5)

 call sub-basin(icode,ihout,inum1,inum2,inum3,rnum1)

 call route(icode,ihout,inum1,inum2,inum3,rnum1,nrch)

 call transfer (icode,ihout,inum1,inum2,inum3)

 call add (icode,ihout,inum1,inum2,inum3)

 call wr_daily

 call xmonth

 call flomon(mo1)

 call wr_month(mo1)

Continued on next page

Table 3.6 – *Continued from previous page*

```
call floann
call wr_annual
END OF CYCLE 530
call xnash(runo,runs,365)
call cryld_brb
END OF CYCLE 540
call floave
MAIN PROGRAM END
```

Table 3.7: Structure of the subroutine SUB-BASIN

```
SUB-BASIN BEGIN:
call initsub
call snom(j)
call alpha(j)
EAP LOOP: CYCLE 100: jea = 1, neap(j)
    call hydrotop(j,jea,k,n)
        call crop_gis(j,jea,k)
        call hydro_gis(j,jea)
END OF EAP LOOP 100
call peakq(j)
call tran(j)
call ysed(j)
call enrsb(j)
call orgnsed(j)
call psed(j)
call gwmod(j)
SUB-BASIN END
```

Table 3.8: Structure of the subroutine HYDROTOP

```

HYDROTOP BEGIN:
call curno(cn2(k,n),j,jea,k,n)
call solt(zz,j,jea,k,n)
call volq(j,jea,k,n)
call ecklsp(j,jea,k,n)
call purk(j,jea,k,n)
    call perc(j,je,k,n,j1,j2)
call evap((j,jea,k,n)
call fert(j,jea,k,n,ii)
SWITCH n:
    call crpmd(j,jea,k,n)
        call operat(j,je,k,n)
        call wstress(j,je,k,n)
        call growth(j,je,k,n)
            call tstress(tgx,j,n)
            call adjustbe()
            call nuptake(j,je,k,n)
                call npstress(uno3,uno3pot,uu)
            call puptake(j,je,k,n)
                call npstress(uap,uapot,uu)
            call scurve()
    call vegmd(j,jea,k,n)
        call wstress(j,je,k,n)
        call tstress(tgx,j,n)
        call nuptake(j,je,k,n)
            call npstress(uno3,uno3pot,uu)
        call puptake(j,je,k,n)
            call npstress(uap,uapot,uu)
call nlch(j,jea,k,n)
call psollch(j,jea,k,n)

```

Continued on next page

Table 3.8 – *Continued from previous page*

```
call ncycle(j,jea,k,n)
call pcycle(j,jea,k,n)
HYDROTOP END
```

Table 3.9: Structure of the subroutines OPEN, READCOD, READBAS, READCRP, READSUB, READSOL, READWET

Subroutine	Objective	Internal structure*
open	open files	read 1 - file = file.cio call caps
readcod	read codes	read 2 - file = codedat read 3 - file = routin
readbas	read basin parameters, crop parameters and basin structure file	read 4 - file = basndat read 7 - file = struct.dat call openstruct:: read 8 - file = str.cio call caps open 9 - file = strdat write 9 call openstruct:: read 8 - file = str.cio call caps open 9 - file = strdat read 9 - file = strdat
readcrp	reads crop parameters	read 5 - file = crop.dat call ascrv() call ascrv() call ascrv()

Continued on next page

Table 3.9 – *Continued from previous page*

Subroutine	Objective	Internal structure*
readsub	reads sub-basin parameters	call opensub call caps call readwet read 12 - file = subdat read 13 - file = gwdat read 14 - file = routdat
readwet	reads weather parameters	read 11 - file = wgendat
readsol	reads soil parameters	call opensoil call caps call rflowtt()

* for some files an internal name is indicated (e.g. routin), see Section 3.3.15 for clarification

3.3 Input and Output Files

For application of the model the user has to prepare a number of input files. Regarding the way of data preparation, all the files can be subdivided into following categories:

3.3.1 catchment

column	description	default
catchment_id		
ecal		
thc		
roc2		
roc4		
cncor		
sccor		
tsnfall		
tmelt		
smrate		
gmrate		
bff		
abf		
delay		
revapc		
rchrge		
revapmn		
station_id		

3.3.2 climate

column	description	default
time		
subbasin_id		
tmean		
tmin		
tmax		
precipitation		
radiation		
humidity		

3.3.3 crop

column	description	default
icnum		
cpnm		
ird		
be		
hi		
to		
tb		
blai		
dlai		
dlp1		
dlp2		
bn1		
bn2		
bn3		
bp1		
bp2		
bp3		
cnyld		
cpyld		
rdmx		
cvm		
almn		
sla		
pt2		
hun		

3.3.4 crop_management

column	description	default
rotation_id		
manag_id		
name		
nop		
year		
lu_id		
idop1		
iopc1		
ncrp1		
idfe1		
fen1		
feno1		
fep1		
idop2		
iopc2		
ncrp2		
idfe2		
fen2		
feno2		
fep2		
idop3		
iopc3		
ncrp3		
idfe3		
fen3		
feno3		
fep3		
idop4		
iopc4		
ncrp4		
idfe4		
fen4		
feno4		

3.3.5 discharge

column	description	default
time		
<subbasin label>		

3.3.6 hydrotope

column	description	default
hydrotope_id		
subbasin_id		
landuse_id		
soil_id		
elevation		
glacier_thickness		
area		
irrigation_user_id		
output_label		

3.3.7 landuse

column	description	default
landuse_id		
name		
icnum		
type		
canmx		
cn2a		
cn2b		
cn2c		
cn2d		
lu_ETcor		

3.3.8 management

column	description	default
user_id		
name		
first_year		
last_year		
ts		
source		
destination		
trs_eff		
irr_opt		
irr_practice		

3.3.9 reservoir

column	description	default
reservoir_id		
subbasins_id		
rsv_reservoir_name		
capac_max		
dead_stor		
start_fill		
res_active		
res_activate_thresh		
level_max		
level_min		
level_hpp		
cap_hpp		
efficiency		
rsv_loss_seepage		
rsv_gwc		
rsv_evapc		
rsv_start_year		
rsv_start_day		
rsv_mngmt		
rsv_shr_withdr		

3.3.10 reservoir_monthly

column	description	default
reservoir_id		
month		
rsv_cap_act		
rsv_fill_min		
rsv_dis_min_fill		
rsv_dis_min_act		
withdr_mon		
ann_cycle		

3.3.11 reservoir_storage

column	description	default
reservoir_id		
storage_step		
pol_l		
pol_l2		
pol_a		
pol_v		
pol_hp		

3.3.12 soil

column	description	default
soil_id		
soil_file		

3.3.13 subbasin

column	description	default
subbasin_id		
chl		
chs		
chw		
sl		
stp		
lat		
chd		
station_id		
output_label		
catchment_id		

3.3.14 subbasin_climate_grid

column	description	default
subbasinID		
lon		
lat		
weight		

3.3.15 subbasin_routing

column	description	default
instruction		
icd		
iht		
inm1		
inm2		
inm3		

- files created by SWIM/GRASS interface,
- climate and hydrological data prepared by user,
- soil data – standard (BÜK-1000) or created by user in the same format
- standard crop database (file crop.dat is ready),
- four additional files prepared by user from example files.

The following input files are prepared by SWIM/GRASS interface (see Section 3.3.15):

- file.cio – 1 file,
- str.cio – 1 file,
- xxx.fig – 1 file,
- xxx.str – 1 file,
- xxxNN.sub – M files, where M is the number of sub-basins,
- xxxNN.gw – M files, where M is the number of sub-basins,
- xxxNN.rte – M files, where M is the number of sub-basins.

The user has to prepare either one climate/hydrological file clim.dat, which includes all climate and hydrological data (see Section 4.3.2 and Section 4.3.5), or four files

- prec.dat,
- temp.dat,
- radi.dat,
- runoff.dat,

which include separately all precipitation, temperature, radiation, and runoff data for the basin. In addition, a file sub2prst.dat may be prepared, which indicates the correspondence between sub-basins and precipitation stations. This is especially useful in case of a large number of sub-basins.

The user has either to prepare all soil data, or to use available soil database for the Elbe, BÜK-1000, if this map is used. In addition, a file soil.cio has to be prepared or copied, which includes a list of all soil data file names.

The rest four files are the following:

- xxx.cod, which includes program codes for printing;

3.3 Input and Output Files

- xxx.bsn, which includes a set of basin parameters and a set of calibration parameters,
- wstor.dat, which includes initial water storages for the reaches (may be all put to 0, or taken from the test model run at the end of the year), and
- wgen.dat, which includes monthly climate statistics.

The monthly statistical data are used to run the weather generator. In case if real climate data are used, SWIM requires only average monthly maximum and minimum temperatures for the basin (needed for soil temperature routine). They can be calculated using an additional program wgenpar from the available climate data, taking as long series as possible. Then the calculated average monthly maximum and minimum temperatures have to be substituted into wgen.dat file.

Table 3.10: Input files

Unit No	Internal name	External name	read in	Description	Type
1	file.cio	file.cio	open, opensub	Control Input Output file. It contains all the input file names that are used by the model.	created by SWIM/-GRASS
2	codedat	xxx.cod	readcod	This is the input control code file. In contains the number of sub-basins, the number of years of simulation, beginning year of simulation and print codes.	created by user from an example file
3	routin	xxx.fig	readcod	This is the basin configuration input file. It contains the routing commands to route and add flows through a basin.	created by SWIM/-GRASS
4	basndat	xxx.bsn	readbas	This is the general basin input file. It contains a set of general basin parameters (including drainage area) and a set of parameters that can be used for calibration.	created by user from an example file

Continued on next page

Table 3.10 – *Continued from previous page*

Unit No	Internal name	External name	read in	Description	Type
7	struct	xxx.str	readbas	This is the basin structure file. It describes sub-basins and hydrotopes by land use categories and soil types.	created by SWIM/-GRASS
8	strlist	str.cio	openstruct	This is the control file for the basin structure. It contains file names to write sub-basin structure.	created by SWIM/-GRASS
9	direc// strdat	Struc/ subbNN.str	readbas	These are sub-basin structure files created by SWIM	created by SWIM
10	sub- prst.dat	sub- prst.dat	sub2prst	This file establishes correspondence between sub-basins and precipitation stations.	created by user
5	cropdb	crop.dat	readcrp	This is the crop data base input file. It contains crop specific parameters that are input to the model.	standard file
11	wgen.dat	wgen.dat	readwet	This is the weather generator input file. It contains monthly statistical parameters required for generating daily weather. Some of the parameters are needed by the model, even if observed weather data are used.	created by user from an example file
12	direc// subdat	Sub/ xxxNN.sub	readsub	This is the general sub-basin input file. It contains general inputs specific for each sub-basin (area, land and channel slopes and lengths, etc.	created by SWIM/-GRASS

Continued on next page

Table 3.10 – *Continued from previous page*

Unit No	Internal name	External name	read in	Description	Type
13	direc// gwdat	Sub/ xxxNN.gw	readsub	This is the groundwater input file. It contains shallow aquifer data, including a recession parameter, specific yield, a revap coefficient, and a deep aquifer percolation coefficient.	created by SWIM/-GRASS
14	direc// routdat	Sub/ xxxNN.rte	readsub	This is the sub-basin routing input file. This file contains data on channel dimensions (length, slope, width, depth, etc.) for the min channel in the sub-basin.	created by SWIM/-GRASS
20	wstor.dat	wstor.dat	readsub	This file includes data on initial water storage in m3 in the reaches corresponding to the sub-basins.	created by user from an example file
15	soillist	soil.cio	opensoil	This is the control file for the soil database. It contains soil file names.	created by user or standard (BÜK-1000)
16	direct// soildat	Soil/ soilNN.dat	readsol	These are soil parameter input files. They contain soil physical and chemical parameters.	created by user or standard (BÜK-1000)
21	clim.dat	clim.dat	cliread	This is climate (and) hydrological input data file. It may include all necessary climate and hydrological data, or only climate data for the basin.	created by user
22	prec.dat	prec.dat	cliread	This is precipitation input data file. It includes precipitation data from all used precipitation stations in/close to the basin.	created by user

Continued on next page

Table 3.10 – *Continued from previous page*

Unit No	Internal name	External name	read in	Description	Type
23	temp.dat	temp.dat	cliread	This is temperature input data file. It includes temperature data from all used climate stations in/close to the basin.	created by user
24	radi.dat	radi.dat	cliread	This is radiation input data file. It includes radiation data from all used climate stations in/close to the basin.	created by user
25	runoff.dat	runoff.dat	cliread	This is hydrological input data file. It includes water discharge in the basin outlet (used for the hydrological validation).	created by user

Table 3.11: Output files

Unit No	File name	Where used	Description
GENERAL OUTPUT			
31	Res/wgen.out	readwet	Weather generator output
32	Res/rin.out	readbas, readsub, readsol	Write input parameters
SUBROUTINES OUTPUT			
41	Res/curn.out	curno, volq	specific subroutine output
42	Res/solt.out	solt	specific subroutine output
43	Res/tran.out	tran	specific subroutine output
44	Res/perc.out	purk, perc	specific subroutine output
45	Res/evap.out	evap	specific subroutine output
46	Res/crop.out	crop, cropyld	specific subroutine output

Continued on next page

Table 3.11 – *Continued from previous page*

Unit No	File name	Where used	Description
47	Res/eros.out	ecklsp, ysed, sub-basin	specific subroutine output
48	Res/nutr.prn	ncycle, sub-basin	specific subroutine output
49	Res/rout.out	ttcoefi, rtsed	specific subroutine output
50	Res/wstr.out	wstress	specific subroutine output
HYDROTOPE OUTPUT			
51	Res/htp-1.prn	subbasin	Daily water outputs for a hydrotop (chosen by user)
52	Res/htp-2.prn	subbasin	Daily water outputs for a hydrotop (chosen by user)
53	Res/htp-3.prn	subbasin	Daily water outputs for a hydrotop (chosen by user)
54	Res/htp-4.prn	subbasin	Daily water outputs for a hydrotop (chosen by user)
55	Res/htp-5.prn	vegmd	Daily water outputs for a hydrotop (chosen by user)
56	Res/htp-6.prn	vegmd	Daily water outputs for a hydrotop (chosen by user)
57	Res/htp-7.prn	vegmd	Daily water outputs for a hydrotop (chosen by user)
SUB-BASIN OUTPUTS			
61	Res/subd.prn	subbasin	Daily water flow outputs for all sub-basins
62	Res/subm.prn	wr_month, wr_annual	Monthly sub-basin outputs for all sub-basins
63	Res/sub-1.prn	subbasin	Daily water outputs for a chosen sub-basin
64	Res/sub-2.prn	subbasin	Daily water outputs for a chosen sub-basin
65	Res/sub-3.prn	subbasin	Daily water outputs for a chosen sub-basin
BASIN & RIVER OUTPUTS			
71	Res/bad.prn	wr_daily	Daily water outputs for basin
72	Res/bam.prn	wr_month	Monthly water outputs for basin
73	Res/bay.prn	wr_annual	Annual water outputs for basin

Continued on next page

Table 3.11 – *Continued from previous page*

Unit No	File name	Where used	Description
74	Res/rch.prn	route	Reach outputs
75	Res/rvQ.prn	route	Reach outputs (from route)
76	Res/rvaddQ.prn	add	Reach outputs (from add)
70	Res/rvQ-mn.prn	main	Monthly reach outputs (from route)
80	Res/rvQ-ev.out	xnash	Evaluation of hydrological results
MONTHLY, ANNUAL & AVERAGE ANNUAL WATER and N FLOWS			
77	Flo/floMON.prn	flomon	Monthly water and N flows for 3 hydrotopes
78	Flo/floANN.prn	floann	Annual water and N flows for 3 hydrotopes
79	Flo/floAVE.prn	floave	Average water and N flows for 9 hydrotopes
MONTHLY WATER and N FLOWS for 9 CHOSEN SOILS/HYDROTOPES			
81	Flo/fm-s1	main, flomon	Monthly water and N flows for a chosen hydrotope
82	Flo/fm-s2	main, flomon	Monthly water and N flows for a chosen hydrotope
83	Flo/fm-s3	main, flomon	Monthly water and N flows for a chosen hydrotope
84	Flo/fm-s4	main, flomon	Monthly water and N flows for a chosen hydrotope
85	Flo/fm-s5	main, flomon	Monthly water and N flows for a chosen hydrotope
86	Flo/fm-s6	main, flomon	Monthly water and N flows for a chosen hydrotope
87	Flo/fm-s7	main, flomon	Monthly water and N flows for a chosen hydrotope
88	Flo/fm-s8	main, flomon	Monthly water and N flows for a chosen hydrotope
89	Flo/fm-s9	main, flomon	Monthly water and N flows for a chosen hydrotope
ANNUAL WATER and N FLOWS for 9 CHOSEN SOILS/HYDROTOPES			

Continued on next page

Table 3.11 – *Continued from previous page*

Unit No	File name	Where used	Description
91	Flo/fa-s1	floann	Annual water and N flows for a chosen hydrotope
92	Flo/fa-s2	floann	Annual water and N flows for a chosen hydrotope
93	Flo/fa-s3	floann	Annual water and N flows for a chosen hydrotope
94	Flo/fa-s4	floann	Annual water and N flows for a chosen hydrotope
95	Flo/fa-s5	floann	Annual water and N flows for a chosen hydrotope
96	Flo/fa-s6	floann	Annual water and N flows for a chosen hydrotope
97	Flo/fa-s7	floann	Annual water and N flows for a chosen hydrotope
98	Flo/fa-s8	floann	Annual water and N flows for a chosen hydrotope
99	Flo/fa-s9	floann	Annual water and N flows for a chosen hydrotope
GIS OUTPUTS			
33	GIS/yld-gis.out	crop_gis	Crop yield for all hydrotopes – as GRASS input
34	GIS/wat-gis.out	crop_gis	Water stress factor for hydrotopes – as GRASS input
35	GIS/tem-gis.out	crop_gis	Temperature stress factor for hydrotopes – as GRASS input
36	GIS/pre-gis.out	hydro_gis	Annual precipitation for hydrotopes – as GRASS input
37	GIS/eva-gis.out	hydro_gis	Annual evapotranspiration for hydrotopes – as GRASS input
38	GIS/run-gis.out	hydro_gis	Annual runoff for hydrotopes – as GRASS input

Continued on next page

Table 3.11 – *Continued from previous page*

Unit No	File name	Where used	Description
39	GIS/gwr-gis.out	hydro_gis	Annual groundwater recharge for hydrotopes – as GRASS input
CROP OUTPUT			
58	Res/cryld.prn	operat	Original calculated crop yield for every year and for every hydrotope in cropland (sub-basin, soil) (considering all applied crop types)
59	Res/cryld-av.prn	main	Averaged crop yield over period a) for every soil and sub-basin, b) for every soil, and c) for the basin (considering all applied crop types)
66	Res/yld-dst.prn	cryld_brb	Distribution function for crop yield
67	Res/yldkr-1.prn	cryld_brb	Crop yield for kreise in BRB with the weighting coefficients accounting for wheat areal distribution
68	Res/yldkr-2.prn	cryld_brb	Crop yield for kreise in BRB with the weighting coefficients accounting for barley areal distribution

3.4 Input Parameters

In this Section input parameters are described. They are arranged in accordance with the input files. Almost all files listed in Section 3.3.15 are included, except files .CIO, climate and hydrological files. The files .CIO are not included, because they are created by SWIM/-GRASS interface and do not need any editing. The format of the climate and hydrological input data is to a certain extent flexible, and preparation of this data is described in Section 4.3.

3.4.1 catchment_parameters

name	description	defaults/unit
bsubcatch		False

3.4.2 crop_parameters

name	description	defaults/unit
cnum2		1.0
icc		51.0
idlef		0.0
ipo		20.0
isba		22.0
iwb		36.0
iwr		42.0
iww		45.0
mfe		7.0
mop		7.0
nrotyrs		3.0

3.4.3 erosion_parameters

name	description	defaults/unit
chcc0		1.0
chxkc0		1.0

3.4.4 evapotranspiration_parameters

name	description	defaults/unit
ec1		0.135000
ecal0		1.000000
thc0		1.000000
idvwk		0.000000
iemeth		0.000000
pit		58.130001
radiation_switch		0.000000

3.4.5 groundwater_parameters

name	description	defaults/unit
abf0		0.5
gwq0		0.2
bff0		0.0

3.4.6 input_parameters

name	description	defaults/unit
input_dir		input/ ...

3.4.7 landuse_parameters

name	description	defaults/unit
landuse_input_file		landuse.csv ...
iicep		1

3.4.8 management_parameters

name	description	defaults/unit
management_users_input_dir		input/water_users ...
management_input_file		management.csv ...
bwam_module		False

3.4.9 nutrient_parameters

name	description	defaults/unit
degngw		0.30
degsub		0.30
degnsur		0.02
degpsur		0.02
retngw		15000.00
retsub		365.00
retnsur		5.00
retpsur		20.00

3.4.10 output_parameters

name	description	defaults/unit
nns		30
nsb		30
nvrch		18
nvsb		30
output_dir		output ...
output_write_interval		M
output_float_format		f12.4
output_space_index_format		i6
output_default_format		csv
master_logfile		swim.log ...
log_stderr_level		warning
log_stdout_level		info
log_file_level		info

3.4.11 reservoir_parameters

name	description	defaults/unit
brsvmodule		False

3.4.12 river_parameters

name	description	defaults/unit
roc2_0		9.0
roc4_0		9.0
chnnc0		1.0
chwc0		1.0
prf		1.0
roc1		0.0
roc3		0.0
spcon		0.0
spexp		1.0
storc1		0.5
tlgw		0.0
tlrch		1.0
evrch		1.0

3.4.13 snow_parameters

name	description	defaults/unit
tsnfall0		0.0
smrate0		1.0
gmrate0		10.0
prcor		1.0
snow1		0.0
xgrad1		0.0
tgrad1		0.0
ulmax0		1.0
rnew		0.08
tmelt0		0.0
bsnowmodule		True

3.4.14 soil_parameters

name	description	defaults/unit
ab		0.02083
cnum1		2.0
cnum3		2.0
ekc0		1.0
icn		0
ml		10
psp		0.5
rtn		0.15
sccor0		1.0
stinco		0.9
soil_input_dir		input/soils ...

3.4.15 subbasin_parameters

name	description	defaults/unit
climate_input_file		climate.csv ...
brunoffdat		False
discharge_input_file		discharge.csv ...
tp5_default		15.0
tp6_default		22.0
tpnyr_default		54.0
obmx		[31.4400005, 32.7099991, 34.5099983, 34.7299995...
obmn		[7.51000023, 8.72000027, 10.3400002, 11.3199997...
wim		[7.0, 7.0, 9.0, 9.0, 10.0, 10.0, 10.0, 10.0, 9....
prw		[0.0299999993, 0.589999974, 0.0599999987, 0.430...
rst		[0.200000003, 0.200000003, 0.899999976, 1.29999...

3.4.16 time_parameters

name	description	defaults/unit
iyр		2000
nbyr		10

3.4.17 vegetation_parameters

name	description	defaults/unit
co2ref		0.0
co2sce		0.0
epco		1.0
ialpha		0
ibeta		0
ic3c4		0.0
rzmaxup		0.0
ub		3.065
bdormancy		False

3.4.18 INPUT FILE - .cod

The xxx.cod file includes program codes (where xxx is the basin name given when using GRASS interface). An example of the xxx.cod input file format is presented in the following Table:

Table 3.12: Example of the xxx.cod input file

PROGRAM CODES:													
nbyr	iyр	idaf	idal	lu	irch	nsim	msim	ign	ipd	prn	iiwst	isst	
6	1983	1	365	64	1	4	4	5	1	0	1	1	
HYDROTOPE PRINT: sub No & hyd No													
isb1	ih1	isb2	ih2	isb3	ih3	isb4	ih4	isb5	ih5	isb6	ih6	isb7	ih7
1	5	1	10	1	7	12	14	1	5	2	8	4	8

Continued on next page

Table 3.12 – *Continued from previous page*

SUBBASIN PRINT: sub No						
isu1	isu2	isu3				
0	0	0				
PROCESS PRINT: 1/0 print/not print, sub No & hyd No						
0	1		icurn	icursb		
0	1		isolt	isosb		
0			itran			
0	1	5	iperc	ipesb	ipehd	
0	1	5	ievap	ievsb	ievhd	
0	2	26	icrop	icrsb	icrso	
0	7		ieros	iersb		
0	1	1	inutr	inusb	inuhd	
0			irout			
0	1	5	iswu	iwssb	iwshd	
SPECIAL PRINT:						
0			igis	- print to GIS output?		
0			iflom	- print monthly water and N flows?		
0			ifloa	- print annual water and N flows?		

Parameters included in the .cod file are:

nbyr Number of years of simulation. It can range from 1 to 100 years. Beginning year of simulation. Usually the actual beginning year of record is used.

nbyr Number of years of simulation. It can range from 1 to 100 years.

iyr Beginning year of simulation. Usually the actual beginning year of record is used.

idaf Beginning (julian) day of simulation. Usually equal to 1.

- idal** Last (julian) day of simulation. Usually equal to 365 or 366.
- lu** Number of subbasins in the basin. Corresponds to the subbasin map specified for SWIM/GRASS interface and can be taken from .cod file created by the interface.
- irch** Reach of measured water and sediment yields. Usually equal to 1 (corresponds to the subbasin in the basin outlet).
- nsim** Code for rainfall input, if weather generator is used as climate input (clicon).
[2] = simulated single precipitation for entire basin,
[4] = simulated multiple precipitation for entire basin.
- msim** Code for temperature input, if weather generator is used as climate input (clicon).
[2] = simulated single temperature for entire basin,
[4] = simulated multiple temperature for entire basin.
- ign** number of times to cycle random number generator (used in main). The random number generator seeds are contained in the SWIM program data statements. If $IGN = 0$, the simulation begins with these seeds. Setting $IGN > 0$ allows the user to start each simulation with different seeds, if desired. Each time the generators cycle, they produce a new set of seeds. This feature is convenient for simulating several different weather sequences at a particular location.
- ipd** Print code for general results (in genres) (0= monthly, 1=daily, 2=yearly).
- iprn** Print code for rin.out and wgen.out files
[0] = print subbasin parameters in the file rin.out (from readsub),
[1] = print weather parameters in the file wgen.out (from readwet).
- iwst** Code for stat collection on monthly water yield
[0] = to skip statistical comparison,
[1] = to calculate statistics on the simulated water yield.
- isst** Code for stat collection on monthly sediments yield
[0] = to skip statistical comparison,
[1] = to calculate statistics on the simulated sediment yield.

isb1, isb2, isb3, isb4 subbasin number for hydrotope output (used in subbsin).

isb5, isb6, isb7 subbasin number for hydrotope output (used in vegmd).

ih1, ih2, ih3, ih4 hydrotope number for hydrotope output (corresponding to subbasins is1, is2, is3, and is4, used in subbsin)

ih5, ih6, ih7 hydrotope number for hydrotope output (corresponding to subbasins is5, is6, is7, used in vegmd)

isu1, isu2, isu3 subbasin number for subbasin output (used in subbsin)

icurn code = 1/0 to print or not from the subroutines curno and volq

icursb subbasin number for printing from the subroutines curno and volq

isolt code = 1/0 to print or not from the subroutine solt

isosb subbasin number for printing from the subroutine solt

itrans code = 1/0 to print or not from the subroutine tran

ipercc code = 1/0 to print or not from the subroutine purk()

ipesb subbasin number for printing from the subroutine purk()

ipehd hydrotope number for printing from the subroutine purk()

ievap code = 1/0 to print or not from the subroutine evap

ievsb subbasin number for printing from the subroutine evap

ievhd hydrotope number for printing from the subroutine evap

icrop code = 1/0 to print or not from the subroutine crpmd

icrsb subbasin number for printing from the subroutine crpmd

icrso soil number for printing from the subroutine crpmd

ieros code = 1/0 to print or not from the subroutines ecklsp(), ysed()

iersb subbasin number for printing from the subroutines ecklsp(), ysed()

inutr code = 1/0 to print or not from the subroutine ncycle()

inusb subbasin number for printing from the subroutine ncycle(), and for printing water and nutrient flows from subroutines flomon(), floann(), and floave()

inuhd hydrotope number for printing from the subroutine ncycle(), and initial hydrotope number for printing water and nutrient flows from subroutines flomon(), floann(), and floave(). Water and nutrient flows will be written for hydrotopes inuhd, inuhd+1, ... inuhd+8.

irout code = 1/0 to print or not from the subroutines rthyd() and rtsed()

iwstr code = 1/0 to print or not from the subroutine wstress()

iwssb subbasin number for printing from the subroutine wstress()

iwshd hydrotope number for printing from the subroutine wstress()

igis code = 1/0 to call or not crop_gis() and hydro_gis() from the subroutine subbasin. If igis = 1, crop_gis() and hydro_gis() will print crop yield and hydrological flows for GRASS input.

iflom code = 1/0 to call or not flomon() from main. If iflom = 1, monthly water and nutrient flows will be written for the subbasin inusb and the hydrotopes inuhd, ... , inuhd+8.

ifloa code = 1/0 to call or not floann() and floave() from main. If ifloa = 1, annual and average annual water and nutrient flows will be written for the subbasin inusb and the hydrotopes inuhd, ... , inuhd+8.

3.4.19 INPUT FILE - .fig

The xxx.fig file describes the basin routing structure (where xxx is the basin name given when using GRASS interface). An example of the xxx.fig input file format is presented in the following Table. The first line includes parameter names used by SWIM. The first two lines are not included in the actual files.

Table 3.13: Example of the xxx.fig input file

	icodes()	ihouts()	inum1s()	inum2s()	inum3s()	inum4s()
subbasin	1	1	1	1		
subbasin	1	2	2	2		
subbasin	1	3	3	3		
subbasin	1	4	4	4		
subbasin	1	5	5	5		
subbasin	1	6	6	6		
subbasin	1	7	7	7		
subbasin	1	8	8	8		
subbasin	1	9	9	9		
subbasin	1	10	10	10		
add	5	11	7	8	8	1
route	2	12	6	11	6	3
add	5	13	12	6	6	3
add	5	14	13	9	6	3
route	2	15	5	14	5	5
add	5	16	15	5	5	5
add	5	17	16	4	5	5
route	2	18	3	17	3	7
add	5	19	18	3	3	7
add	5	20	19	10	3	7
route	2	21	2	20	2	9
add	5	22	21	2	2	9
route	2	23	1	22	1	10

Continued on next page

Table 3.13 – *Continued from previous page*

	icodes()	ihouts()	inum1s()	inum2s()	inum3s()	inum4s()
add	5	24	23	1	1	10
finish	0					

Parameters included in the .fig file are:

icodes() code to switch between routing subroutines

[1] = subbasin

[2] = route flow

[5] = add flows

ihouts() Hydrological Storage Location

inum1s() Subbasin No. (if subbasin), or Reach No. (if route), or Inflow hydrograph 1 (if add)

inum2s() Inflow Hydrograph (if route), or Inflow hydrograph 2 (if add)

inum3s() Subbasin No. (if add and route)

inum4s() Fractional Dimension (if add and route)

3.4.20 INPUT FILE - .bsn

The xxx.bsn file includes general basin parameters and calibration parameters (where xxx is the basin name given when using GRASS interface). An example of the xxx.bsn input file format is presented in the following Table.

Table 3.14: Example of the xxx.bsn input file

SWITCH PARAMETERS		
1	isc	=0/1, SC: read/calc

Continued on next page

Table 3.14 – *Continued from previous page*

0	icn				=0/1, CN: dif for soils/cnum1,cnum3 for all soils
0	idlef				=0/1, day length effect in crop: without/with
0.6	thc				=0...1., evap correction on sky emissivity
BASIN, INITIALIZATION & CALIBRATION PARAMETERS					
da	p2(1)	bff	brt	ffcb	Original basin parameters
574.76	1.000	1.000	0.500	0.000	
cnum1	cnum2	cnum3			Curve number, if icn=1
50.	55.	80.			
gwq0	abf0				Groundwater parameters
0.200	0.5				
ekc0	prf	spcon	spexp		Erosion parameters
1.0	1.000	0.0001	1.000		
snow1	storc1	stinco			Initial water storage
0.	0.5	0.90			
chwc0	chxk0	chcc0			Channel parameters
0.700	0.05	0.0			
roc1	roc2	roc3	roc4		Routing coefficients
0.	3.0	0.	13.0		
seccor	prcor	rdcor			Correction factors
1.20	1.00	1.00			

Parameters included in the .bsn file are:

isc code for saturated conductivity

[0] – read from database

[1] – calculated in SWIM from clay content, sand content and porosity using the method of Brakensiek

icn code for curve number method

[0] – modified CN-method as in SWAT,

[1] – CN = const for all soil and land use categories. In the case icn = 1 the user can set CN for conditions 1 equal to cnum1, and CN for conditions 3

equal to `cnum3`. The parameters `cnum1` and `cnum3` can be used as calibration parameters.

idlef code for taking into account day length effect on crop development
 [0] – without the day length effect on crop development (as in SWAT),
 [1] – with the day length effect on crop development.

thc correction factor for potential evapotranspiration on sky emissivity
 [0] – without the sky emissivity factor,
 [1] – with the sky emissivity factor. The user can set also `thc` to intermediate values in the range 0 – 1 and use this parameter for calibration.

da basin area in km². This parameter should be taken from `.bsn` file produced by GRASS interface.

p2(1) rainfall correction factor, equal to the ratio of average rainfall to average annual rainfall for the gage in the basin outlet. When daily rainfall data is taken from a rain gauge located at a considerable distance from the basin, it may be necessary to use a rainfall correction factor other than one. If the difference between annual precipitation in the basin and rain gauge is known, a rainfall correction factor from 0.5 to 1.5 can be used. This parameter should be taken from `.bsn` file produced by GRASS interface. Usually is not used in SWIM.

bff baseflow factor for basin, is used to calc return flow travel time. The return flow travel time is then used to calculate percolation in soil from layer to layer. The `bff` factor is given in Table 3.15 for different streams:

brt basin lag time in days. Basin lag time lags the subsurface flow. For `BRT= 0` all subsurface flow reaches the sub-basin outlets on the day it occurs. Judgment is required to set `BRT` to as many days as subsurface flow from

Table 3.15: Baseflow factor `bff`

Flow Characteristics	BFF
Perennial streams, flow >75% time	1.00
Flow 55-75% time	0.75
Flow 40-55% time	0.50
Flow 20-40% time	0.25
Ephemeral streams	0.00

a precipitation event is expected to contribute to streamflow. This parameter should be taken from .bsn file produced by GRASS interface. It is not used in the current model version.

ffcb fraction of field capacity as initial water storage. This parameter should be taken from .bsn file produced by GRASS interface. It is not used in the current SWIM version.

cnum1 CN, conditions 1 for the case if $icn = 1$.

cnum2 CN, conditions 2 for the case if $icn = 1$.

cnum3 CN, conditions 3 for the case if $icn = 1$.

gwq0 initial groundwater flow contribution to streamflow, mm/day

abf0 alpha factor for groundwater. This parameter characterizes the groundwater recession (the rate at which groundwater flow is returned to the stream).

ekc0 soil erodibility correction factor. This parameter is used to correct all values $ek()$ of soil erodibility obtained from soil database.

prf coefficient to estimate peak runoff in stream, used in calculation of sediment routing.

spcon rate parameter for estimation of sediment transport (between 0.0001 and 0.01).

spexp exponent for estimation of sediment transport (between 1. and 1.5).

snw1 initial snow content in the basin (mm).

storc1 initial water storage in streams correction coefficient.

stinco initial water content in the basin as a fraction of field capacity.

chwc0 coefficient to correct the channel width for all reaches. The channel width is estimated by GRASS interface.

chxk0 correction coefficient for channel USLE K factor

chcc0 correction coef. for channel USLE C factor

roc1, roc2 routing coefficients to calculate the storage time constant for the reach for the surface flow, xkm, from the initial estimation phi(10) and phi(13) based on channel length and celerity (in subroutine ttcoefi(j))

roc3, roc4 routing coefficients to calculate the storage time constant for the reach for the subsurface flow, xkm, from the initial estimation phi(10) and phi(13) based on channel length and celerity (in subroutine ttcoefi(j))

sccor correction factor for saturated conductivity (applied for all soils)

prcor correction factor for precipitation. Usually is not used in SWIM.

rdcor correction factor for the maximum plant root depth. Used in subroutine readcrp.

3.4.21 INPUT FILE - .str

The xxx.str file includes basin hydrotope structure parameters (where xxx is the basin name given when using GRASS interface), considering sub-basin, land use and soil. An example of the xxx.str input file format is presented in the following Table. The first line includes parameter names used by SWIM. The first two lines are not included in the actual files.

Table 3.16: Example of the xxx.str input file

j	n	k	ar()	ncell
1	1	26	40000	1
1	2	12	120000	3
1	5	12	1160000	29
1	5	26	1760000	44
1	8	26	840000	21
1	9	12	1040000	26
1	9	26	80000	2

Continued on next page

Table 3.16 – *Continued from previous page*

j	n	k	ar()	ncell
1	12	12	160000	4
1	12	26	40000	1
2	5	12	200000	5
2	5	26	320000	8
2	9	12	200000	5
2	12	12	80000	2
3	1	12	40000	1
3	2	17	40000	1
3	4	26	40000	1
3	5	12	760000	19
3	5	17	800000	20
3	5	19	480000	12
3	5	26	5400000	135
3	7	17	40000	1
3	7	26	40000	1
3	8	19	120000	3
3	9	26	840000	21
3	12	12	80000	2
4	1	26	80000	2
4	5	12	160000	4
4	5	26	680000	17
4	8	26	40000	1
4	9	26	80000	2
4	12	26	40000	1
5	1	26	320000	8
5	4	26	240000	6
5	5	19	40000	1
5	5	26	6560000	164
5	8	26	760000	19
5	9	26	2120000	53

Continued on next page

Table 3.16 – *Continued from previous page*

j	n	k	ar()	ncell
5	12	26	160000	4
6	5	26	80000	2
6	8	26	40000	1
6	9	26	40000	1
6	12	26	40000	1

Parameters included in the .str file are:

j subbasin number (from SWIM/GRASS interface)

n land use category number (from SWIM/GRASS interface)

n = 1 - water

n = 2 - settlement

n = 3 - industry

n = 4 - road

n = 5 - cropland

n = 6 - set-aside

n = 7 - grassland, extensive use (meadow)

n = 8 - grassland, intensive use (pasture)

n = 9 - forest mixed

n = 10 - forest evergreen

n = 11 - forest deciduous

n = 12 - wetland nonforested

n = 13 - wetland forested

n = 14 - heather (grass + brushland)

n = 15 - bare soil

k soil type (from SWIM/GRASS interface)

ar hydrotope area, corresponding to the hydrotope with the land use n and the soil k in the subbasin j. (from SWIM/GRASS interface)

ncell number of cells, corresponding to the hydrotope with the land use n and the soil k in the subbasin j. (from SWIM/GRASS interface)

3.4.22 INPUT FILE - sub-prst.dat

The sub-prst.dat file establishes the correspondence between sub-basins and precipitation stations in case if only one precipitation station is used for every sub-basin. It lists all sub-basins and the corresponding precipitation stations numbered from 1 to nst, where nst is the total number of precipitation stations used.

is1() subbasin No.

ip2() precip. stat No., corresponding to the subbasin is1() (chosen as the closest the the subbasin central point)

3.4.23 INPUT FILE - crop.dat

The crop.dat file provides crop/vegetation parameters for 71 crops/vegetation types, including some aggregated types of vegetation, like deciduous forest. This is the standard file. It is presented in Section 3.4.23 Then Section 3.4.23 lists abbreviated crop names, full crop names, and land cover categories.

Table 3.18: Crop abbreviated names, full names and the corresponding land cover categories

Crop number	Abbreviated crop name	seasonal-ity identifier	Crop name	Land cover category
Annual crops				
1	AGRL	1	agricultural land	row crop
2	ASPR	1	asparagus	row crop
3	BROC	1	broccoli	row crop
4	CABG	1	cabbage	row crop
5	CANT	1	cantaloupe	row crop
6	CAUF	1	cauliflower	row crop
7	CELR	1	celery	row crop
8	CORN	1	corn for grain	row crop
9	CORN	1	corn for grain	row crop
10	COTP	1	cotton, stripped	row crop

Continued on next page

Table 3.18 – *Continued from previous page*

Crop number	Abbreviated crop name	Crop seasonality identifier	Crop name	Land cover category
11	COTS	1	cotton, picked	row crop
12	CRRT	1	carrot	row crop
13	CUCM	1	cucumber	row crop
14	EGGP	1	eggplant	row crop
15	GRSG	1	sorghum	row crop
16	HMEL	1	honey melon	row crop
17	ONIO	1	onion	row crop
18	PEPR	1	pepper	row crop
19	POTA	1	potatoes	row crop
20	POTA	1	potatoes	row crop
21	RICE	1	rice	small grain
22	SBAR	1	spring barley	small grain
23	SGBT	1	sugar beet	row crop
24	SGHY	1	sorghum hay	row crop
25	SLMA	1	silage maize	row crop
26	SPIN	1	spinach	row crop
27	STRW	1	strawberries	row crop
28	SUGC	1	sugarcane	row crop
29	SUNF	1	sunflower	row crop
30	SWHT	1	spring wheat	small grain
31	TOBC	1	tobacco	row crop
32	TOMA	1	tomato	row crop
33	WMEL	1	water melon	row crop
Annual winter crops				
34	BARL	2	barley	small grain
35	BARL	2	barley	small grain
36	BARL	2	winter barley	small grain
37	LETT	2	lettuce	row crop
38	LETL	2	lettuce, leaf	row crop

Continued on next page

Table 3.18 – *Continued from previous page*

Crop number	Abbreviated crop name	Crop seasonality identifier	Crop name	Land cover category
39	OATS	2	oats	small grain
40	RAPE	2	rape	row crop
41	RYE	2	rye	small grain
42	RYE	2	winter rye	small grain
43	WHTD	2	durum wheat	small grain
44	WWHT	2	winter wheat	small grain
45	WWHT	2	winter wheat	small grain
Perennial land cover (non-forested)				
46	HAY	3	hay	perennial grass
47	PAST	3	pasture	perennial grass
48	SPAS	3	summer pasture	perennial grass
49	WPAS	3	winter pasture	perennial grass
50	RNGB	3	range-brush	brush
51	COVC	3	cover crop	grass
52	URBN	3	urban	urban
53	WATR	3	water	water
54	WETL	3	wetland	perennial grass
55	WETN	3	wetland nonforested	perennial
Woods				
56	FRSD	4	forest deciduous	woods
57	FRSE	4	forest evergreen	woods
58	FRST	4	forest	woods
59	FORD	4	forest deciduous	woods
60	FORE	4	forest evergreen	woods
61	FORM	4	forest mixed	woods
62	PINE	4	pine	woods
63	WETF	4	wetland forested	woods
Annual legumes				
64	GRBN	5	green beans	row crop

Continued on next page

Table 3.18 – *Continued from previous page*

Crop number	Abbreviated crop name	seasonal-ity identifier	Crop name	Land cover category
65	LIMA	5	lima	row crop
66	PEAS	5	peas	row crop
67	PNUT	5	peanut	row crop
68	SOYB	5	soybean	row crop
Annual winter legumes				
69	LEN1	6	lentil	row crop
70	WPEA	6	winter peas	row crop
Perennial legumes				
71	ALFA	7	alfalfa	perennial grass

Parameters included in the crop.dat file are:

icnum(ic) crop number. This is a reference number only

ic crop number in the database (file crop.dat)

cpnm(ic) crop name. This is a four character name to represent the crop.

ilcc(ic) land cover category: [1] annual crop (row crop / small grain) [2] annual winter crop (row crop / small grain) [3] perennial (grass, brush, urban, water) [4] woods [5] annual legumes (row crop) [6] annual winter legumes (row crop) [7] perennial legumes (grass)

be(ic) biomass-energy ratio. This is the potential (unstressed) growth rate (including roots) per unit of intercepted photosynthetically active radiation. This parameter should be one of the last to be adjusted. Adjustments should be based on research results. This parameter can greatly change the rate of growth, incidence of stress during the season and the resultant crop yield. Care should be taken to make adjustments in the parameter only based on data with no drought, nutrient or temperature stress.

2	ASPR	1	90	0.8	35	10	4.2	1	25.23	40.86	0.062	0.05	0.04	0.005	0.004	0.002	0.07	0.0065	1.5	0.2	0	0	660.95	1500	
3	BROC	1	26	0.8	24	4	4.2	1	25.23	40.86	0.062	0.007	0.005	0.004	0.003	0.003	0.053	0.0073	0.7	0.2	0	0	660.95	1500	
4	CABG	1	19	0.8	24	4	3	1	25.23	40.86	0.062	0.007	0.004	0.005	0.0035	0.002	0.025	0.0033	0.7	0.2	0	0	660.95	1500	
5	CANT	1	30	0.5	32	16	3	0.6	15.05	50.95	0.0663	0.0255	0.0148	0.0053	0.002	0.0012	0.025	0.0022	1.3	0.03	0	0	660.39	1500	
6	CAUF	1	21	0.8	24	7	2.5	1	25.23	40.86	0.062	0.007	0.004	0.005	0.0035	0.002	0.04	0.0057	0.7	0.2	0	0	660.95	1500	
7	CELR	1	27	0.8	24	7	2.5	1	25.23	40.86	0.062	0.015	0.01	0.006	0.005	0.003	0.022	0.0052	0.7	0.2	0	0	660.95	1500	
8	CORN	1	40	0.5	25	8	3	0.5	15.05	50.95	0.044	0.0164	0.0128	0.0062	0.0023	0.0018	0.0175	0.0025	2	0.2	0	0	660.44	1500	
9	CORN	1	39	0.55	35	8	3	0.5	15.05	50.95	0.047	0.0177	0.0138	0.0048	0.0018	0.0014	0.021	0.0027	2	0.2	0	0	660.44	1500	
10	COTP	1	15	0.4	27.5	10	4	0.95	15.01	50.95	0.058	0.0192	0.0177	0.0081	0.0027	0.0025	0.019	0.0029	2.2	0.2	0	0	660.19	1500	
11	COTS	1	15	0.5	27.5	10	4	0.95	15.01	50.95	0.058	0.0192	0.0177	0.0081	0.0027	0.0025	0.014	0.002	2.2	0.2	0	0	660.19	1500	
12	CRRT	1	30	1.12	24	7	3.5	0.6	15.01	50.95	0.055	0.0075	0.0012	0.006	0.003	0.002	0.013	0.0037	1.1	0.2	0	0	660.2	1500	
13	CUCM	1	30	0.27	32	16	1.5	0.6	15.05	50.95	0.0663	0.0075	0.0048	0.0053	0.0025	0.0012	0.02	0.0042	1.1	0.03	0	0	660.39	1500	
14	EGGP	1	30	0.59	35	18	3	0.6	15.05	50.95	0.0663	0.0255	0.0075	0.0053	0.002	0.0015	0.022	0.0041	1.1	0.03	0	0	660.39	1500	
15	GRSG	1	35	0.5	27.5	10	5	0.8	15.05	50.95	0.044	0.0164	0.0128	0.006	0.0022	0.0018	0.02	0.0028	2	0.2	0	0	660.38	1500	
16	HMEL	1	30	0.55	35	16	4	0.6	15.05	50.95	0.007	0.004	0.002	0.0026	0.002	0.0017	0.008	0.001	1.1	0.03	0	0	660.39	1500	
17	ONIO	1	30	1.25	29	7	1.5	0.6	15.01	50.95	0.04	0.03	0.002	0.0021	0.002	0.0019	0.021	0.0032	0.7	0.2	0	0	660.2	1500	
18	PEPR	1	30	0.6	27	18	5	0.6	15.05	50.95	0.06	0.035	0.025	0.0053	0.002	0.0012	0.003	0.002	1.1	0.03	0	0	660.39	1500	
19	POTA	1	30	0.95	18	7	5	0.6	15.01	50.95	0.055	0.02	0.012	0.006	0.0025	0.0019	0.013	0.002	2	0.2	0	0	660.2	1500	
20	POTA	1	30	1.41	18	3	5	0.95	15.01	50.95	0.055	0.02	0.012	0.006	0.0025	0.0019	0.013	0.002	2	0.2	0	0	660.2	2000	
21	RICE	1	25	0.5	25	10	6	0.8	30.01	70.95	0.05	0.02	0.01	0.006	0.003	0.0018	0.02	0.003	0.9	0.03	0	0	660.31	1500	
22	SBAR	1	30	0.42	15	0	6	0.8	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.01	0	0	660.45	1900	
23	SGBT	1	30	2	18	4	5	0.6	5.05	50.95	0.055	0.02	0.012	0.006	0.0025	0.0019	0.013	0.002	2	0.2	0	0	660.2	1500	
24	SGHY	1	35	0.5	27.5	10	5	0.85	15.01	50.95	0.044	0.0164	0.0128	0.006	0.0022	0.0018	0.02	0.0028	2	0.03	0	0	660.38	1500	
25	SLMA	1	60	1	20	5	8	0.7	15.05	50.95	0.044	0.0164	0.0128	0.0062	0.0023	0.0018	0.0175	0.0025	1	0.2	0	0	660.44	2400	
26	SPIN	1	30	0.95	24	4	4.2	0.95	10.05	90.95	0.062	0.04	0.03	0.005	0.004	0.0035	0.058	0.0061	0.7	0.2	0	0	660.95	1500	
27	STRW	1	30	0.45	32	10	3	0.6	15.05	50.95	0.0663	0.0255	0.0148	0.0053	0.002	0.0012	0.012	0.0024	0.7	0.03	0	0	660.39	1500	
28	SUGC	1	25	0.5	25	11	6	0.75	15.01	50.95	0.01	0.004	0.0025	0.0075	0.003	0.0019	0	0	2	0.001	0	0	660.4	1500	
29	SUNF	1	35	0.4	25	6	5	0.55	15.01	50.95	0.05	0.023	0.0146	0.0063	0.0029	0.0023	0.028	0.0061	2.2	0.2	0	0	660.45	1500	
30	SWHT	1	30	0.4	15	0	6	0.8	15.01	50.95	0.06	0.0231	0.013	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.03	0	0	660.39	1500	
31	TOBC	1	39	0.55	25	8	4.5	0.7	15.05	50.95	0.047	0.0177	0.0138	0.0048	0.0018	0.0014	0.014	0.0016	2	0.2	0	0	660.44	1500	
32	TOMA	1	30	0.33	27	10	3	0.95	15.05	50.95	0.0663	0.03	0.025	0.0053	0.0035	0.0025	0.024	0.0038	1.5	0.03	0	0	660.39	1500	
33	WMEL	1	30	0.5	35	18	1.5	0.6	15.05	50.95	0.0663	0.0075	0.0048	0.0053	0.0025	0.0012	0.011	0.0014	1.1	0.03	0	0	660.39	1500	
34	BARL	2	30	0.4	15	0	6	0.8	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.03	0	0	660.45	1500	
35	BARL	2	35	0.42	25	0	3.5	0.6	20.1	49.95	0.059	0.0226	0.0131	0.0057	0.0022	0.0013	0.021	0.0017	2	0.01	0	0	660.39	1500	
36	BARL	2	30	0.42	15	0	6	0.9	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.01	0	0	660.45	2300	
37	LEFT	2	23	0.8	18.2	0	4.2	1	25.23	40.86	0.036	0.025	0.021	0.0084	0.0032	0.0019	0.026	0.0049	0.8	0.01	0	0	660.25	1500	
38	LETL	2	19	0.8	18.2	0	4.2	1	25.23	40.86	0.036	0.025	0.021	0.0084	0.0032	0.0019	0.026	0.0049	0.8	0.01	0	0	660.25	1500	
39	OATS	2	30	0.35	15	0	6	0.8	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.03	0	0	660.45	1500	
40	RAPE	2	35	0.3	14	0	4.5	0.6	15.01	50.95	0.05	0.02	0.011	0.007	0.0025	0.0015	0.035	0.0067	2	0.05	0	0	660.4	1500	
41	RYE	2	35	0.4	12.5	0	6	0.8	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.03	0	0	660.45	1500	
42	RYE	2	35	0.4	12.5	0	6	0.8	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.3	0	0	660.45	2000	
43	WHTD	2	30	0.4	15	0	6	0.8	15.01	50.95	0.06	0.0231	0.013	0.0084	0.0032	0.0019	0.0209	0.005	2	0.03	0	0	660.45	1500	
44	WHTT	2	30	0.4	15	0	6	0.6	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.03	0	0	660.39	1500	
45	WHTT	2	30	0.42	15	0	6	0.8	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.03	0	0	660.39	2300	
46	HAY	3	35	0.01	25	12	5	0.99	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.003	0	0	660.38	1500	
47	PAST	3	35	0.01	25	12	5	0.99	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.003	0	0	660.38	1500	
48	SPAS	3	35	0.01	25	8	5	0.99	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.003	0	0	660.38	1500	
49	WPAS	3	30	0.01	15	0	5	0.99	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.003	0	0	660.39	1500	
50	RNGB	3	30	0.01	25	8	5	0.99	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.003	0	0	660.33	1500	
51	COVC	3	35	0.01	25	8	5	0.99	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.003	0	0	660.38	1500	
52	URBN	3	8	0.01	25	8	4	0.99	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.003	0	0	660.33	1500	
53	WATR	3	0	0.01	25	8	0	0.99	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.003	0	0	660.33	1500	
54	WETL	3	30	0.01	25	8	3	0.99	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.003	0	0	660.33	1500	
55	WETN	3	30	0.01	25	8	3	0.99	15.01	50.95	0.06	0.0231	0.0134	0.0084	0.0032	0.0019	0.0234	0.0033	2	0.003	0	0	660.33	1500	
56	FRSD	4	16	0.01	20	6	2	0.85	10.5	25.99	0.006	0.002	0.0015	0.0007	0.0004	0.0003	0.0015	0.0015	0.0003	2	0.001	1.8	4.5	660.2	1500
57	FRSE	4	16	0.01	20	2	6	0.85	10.5	25.99	0.006	0.002	0.0015	0.0007	0.0004	0.0003	0.0015	0.0015	0.0003	2	0.001	1.8	4.5	660.2	1500
5																									

- hi(ic)** harvest index. This crop parameter is based on experimental data where crop stresses have been minimized to allow the crop to attain its potential. The model adjusts hi() as water stress occurs in the period near flowering.
- to(ic)** optimal temperature for plant growth, degrees C. This parameter is very stable for cultivars within a species. It should not be changed once it is determined for a species. Varietal or maturity type differences are accounted for by different sums of heat units.
- tb(ic)** base temperature for plant growth, degrees C. This parameter is very stable for cultivars within a species. It should not be changed once it are determined for a species. Varietal or maturity type differences are accounted for by different sums of heat units.
- blai(ic)** Maximum potential leaf area index. BLAI may need to be adjusted for drought prone regions where planting densities are much smaller or irrigated conditions where densities are much greater.
- dlai(ic)** Fraction of growing season when leaf area declines. The fraction of the growing season in heat units in divided by the total heat units accumulated between planting and crop maturity. If the date at which leaf area normally declines is known, one of the drought options in SWIM can be used to estimate the fraction of heat units accumulated. The estimated heat units at maximum leaf area can then be divided by the heat units at maturity to estimate the fraction of the growing season at which leaf area index start to decline.
- dlp1(ic)** complex number: before decimal: fraction of growing season, after decimal: max corresponding LAI. First point on optimal leaf area development curve.
- dlp2(ic)** complex number: before decimal: fraction of growing season, after decimal: max corresponding LAI. Second point on optimal leaf area development curve. Explanation: Two points on optimal (non-stress) leaf area development curve. Numbers before decimal are % of growing season. Numbers after decimal are fractions of maximum potential LAI. These two points are based on research results on the % of maximum leaf area at two points in the development of leaf area.
- bn1(ic)** nitrogen uptake parameter #1: normal fraction of N in crop biomass at emergence, kg N/kg biomass.

bn2(ic) nitrogen uptake parameter #2: normal fraction of N in crop biomass at 0.5 maturity, kg N/kg biomass.

bn3(ic) nitrogen uptake parameter #3: normal fraction of N in crop biomass at maturity, kg N/kg biomass.

bp1(ic) phosphorus uptake parameter #1: normal fraction of P in crop biomass at emergence, kg P/kg biomass.

bp2(ic) phosphorus uptake parameter #2: normal fraction of P in crop biomass at 0.5 maturity, kg P/kg biomass.

bp3(ic) phosphorus uptake parameter #3: normal fraction of P in crop biomass at maturity, kg P/kg biomass.

cnfld(ic) fraction of nitrogen in crop yield, kg N/kg yield.

cpyld(ic) fraction of phosphorus in crop yield, kg P/kg yield.

rdmx(ic) maximum plant rooting depth (m)

cvm(ic) minimum value of C factor for water erosion. This parameter should be adjusted with intercropping or no tillage simulations to reflect the added cover.

almn(ic) LAI minimum (for forest and natural perennial vegetation).

sla(ic) specific leaf area (m²/kg). It is in SWIM used for forest and natural perennial vegetation.

pt2(ic) 2nd point on radiation use efficiency curve: complex number: The value to the left of the decimal is a CO₂ atmospheric concentration higher than the ambient (in units of microliters CO₂/liter air, i.e. 450 or 660). The value to the right of the decimal is the corresponding biomass-energy ratio divided by 100. Typical values of the ratio are 1.1 to 1.2 for C₄ crops and 1.3 to 1.4 for C₃ crops. (Kimball, B.A. 1983).

3.4.24 INPUT FILE - wgen.dat

The wgen.dat file includes monthly statistical weather parameter for basin or sub-basins. An example of the wgen.dat input file is presented in the following Table. The lines 3 – 13 include 12 monthly values.

Table 3.19: Example of the wgen.dat input file

SYTHETIC WEATHER DATA											
45.000	66.000	54.000	31.770								
2.28	2.09	6.13	12.10	18.09	19.70	22.28	21.85	17.36	13.16	6.42	4.16
-2.33	-3.22	.10	3.65	7.92	10.25	12.66	12.42	9.84	6.73	1.76	.15
0.18	0.14	0.11	0.10	0.09	0.08	0.07	0.07	0.08	0.10	0.13	0.15
56.	104.	213.	267.	512.	471.	417.	351.	282.	152.	74.	42.
7.	7.	9.	9.	10.	10.	10.	10.	9.	9.	7.	7.
0.37	0.34	0.35	0.33	0.32	0.29	0.35	0.41	0.51	0.55	0.56	0.38
0.69	0.67	0.69	0.64	0.64	0.61	0.65	0.70	0.72	0.78	0.79	0.4577
0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
2.7	2.6	2.7	3.2	4.2	5.0	4.9	5.0	3.7	3.2	3.0	3.0
3.3	3.05	2.54	2.79	2.54	3.30	5.08	5.84	4.57	4.57	3.81	3.05
2.86	4.07	3.49	2.19	1.70	2.02	2.51	1.84	2.00	2.90	2.14	2.04

The next Table describes format of the example file wgen.dat, including parameter names given above the values.

Table 3.20: Description of wgen.dat

SYTHETIC WEATHER DATA											
tp5	tp6	tp24	ylt								
45.000	66.000	54.000	31.770								
obmx(mo,j)											
2.28	2.09	6.13	12.10	18.09	19.70	22.28	21.85	17.36	13.16	6.42	4.16

Continued on next page

Table 3.20 – *Continued from previous page*

obmn(mo,j)											
-2.33	-3.22	.10	3.65	7.92	10.25	12.66	12.42	9.84	6.73	1.76	.15
cvt(mo,j)											
0.18	0.14	0.11	0.10	0.09	0.08	0.07	0.07	0.08	0.10	0.13	0.15
obsl(mo,j)											
56.	104.	213.	267.	512.	471.	417.	351.	282.	152.	74.	42.
wim(mo)											
7.	7.	9.	9.	10.	10.	10.	10.	9.	9.	7.	7.
prw(1,mo,j)											
0.37	0.34	0.35	0.33	0.32	0.29	0.35	0.41	0.51	0.55	0.56	0.38
prw(2,mo,j)											
0.69	0.67	0.69	0.64	0.64	0.61	0.65	0.70	0.72	0.78	0.79	0.4577
wvl(mo,j)											
0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
rst(mo,1,i)											
2.7	2.6	2.7	3.2	4.2	5.0	4.9	5.0	3.7	3.2	3.0	3.0
rst(mo,2,j)											
3.3	3.05	2.54	2.79	2.54	3.30	5.08	5.84	4.57	4.57	3.81	3.05
rst(mo,3,j)											
2.86	4.07	3.49	2.19	1.70	2.02	2.51	1.84	2.00	2.90	2.14	2.04

Parameters included in the wgen.dat file are:

tp5(j) 10 year frequency of 0.5 h rainfall (mm). Maybe basin- or subbasin-specific.

tp6(j) 10 year frequency of 6.0 h rainfall (mm). Maybe basin- or subbasin-specific.

tp24(j) Number of years of records for estimating max 0.5 h rainfall. Maybe basin- or subbasin-specific.

ylt(j) latitude of the basin or subbasin centre

obmx(mo,j) average monthly maximum air temperature, degree C.

onmn(mo,j) average monthly minimum air temperature, degree C.

cvt(mo,j) coefficient of variation for monthly temperature

obsl(mo,j) monthly average of daily solar radiation (ly)

wim monthly maximum 0.5 h rainfall (mm) for the period of record

prw(1,mo,j) monthly probability of wet day after dry day.

prw(2,mo,j) monthly probability of wet day after dry day.

wvl(mo,j) monthly number days of precipitation in a month.

rst(mo,1,j) monthly mean event of daily rainfall.

rst(mo,2,,j) monthly standard deviation of daily rainfall.

rst(mo,3,,j) monthly skew coefficient of daily rainfall.

3.4.25 INPUT FILE - .sub

The xxxNN.sub file includes sub-basin parameters (where xxx is the basin name given when using GRASS interface, NN is the sub-basin number -1). An example of the xxxNN.sub input file format is presented in the following Table.

The next Table describes format of the example file xxxNN.sub , including parameter names given above the values.

Parameters included in the xxxNN.sub file are:

Table 3.21: example of the xxxNN.sub input file

SUBBasin DATA 15 16									
0.006	0.000	0.150	0.000	3.785	0.002	2.494	0.370	0.075	0.150
0.000	500.000	0.500	104.573	0.007					

Table 3.22: example file xxxNN.sub, including parameter names

SUBBasin DATA 15 16									
flu(j)	dum	salb(j)	sno(j)	chl(1,j)	chs(j)	chw(1,j)	chk(1,j)	chn(j)	ovn(j)
0.006	0.000	0.150	0.000	3.785	0.002	2.494	0.370	0.075	0.150
rt(j)	css(j)	ecp(j)	sl(j)	stp(j)					
0.000	500.000	0.500	104.573	0.007					

flu(j) fraction of subbasin area in the whole basin

salb(j) soil albedo.

sno(j) initial water content of snow (mm). For long term simulations the water content of snow on the ground at the beginning of simulation, SNO is usually not known, but in most cases the estimate is not critical after the first year. If a measured value of SNO is available at the beginning of the simulation, it should be used.

chl(1,j) main channel length (km). The channel length is the distance along the channel from the sub-basin outlet to the most distant point in the sub-basin. It is estimated from a topographic map by GRASS interface and used to calculate the sub-basin time of concentration.

chs(j) main channel slope (m/m). The average channel slope is computed by dividing the difference in elevation between the sub-basin outlet and the most distant point in the sub-basin. It is estimated from a topographic map by GRASS interface and used to calculate the sub-basin time of concentration.

chw(1,j) average width of main channel (m). It is estimated from a topographic map by GRASS interface. Not used by the current model version.

chk(1,j) effective hydraulic conductivity in channel alluvium (mm/hr). It is set to a default value of 0.37 by GRASS Interface. Not used by the current model version.

chn(j) Channel N value. The channel "n" value is Mannings's "n" value. It is set to a default value 0.075 by GRASS interface and used to calculate the sub-basin time of concentration. This value may be corrected by user.

ovn(j) Overland flow N value. The surface roughness factor is Manning's "n" values. It is set to a default value 0.150 by GRASS interface and used to

calculate the sub-basin time of concentration. This value may be corrected by user. The following Tab. 3.15 contains suggested values of Manning's "n" for various condition.

rt(j) Return flow travel time(days). Return flow travel time is required for sub-surface flow from the centroid of the sub-basin to reach the sub-basin outlet. The value of RT is input for each sub-basin by the SWIM user, or can be calculated by SWIM if $rt=0.0$ from soil hydraulic properties and flow characteristics. Experienced hydrologists familiar with the base flow characteristics of watersheds within a region should have little problem assigning reasonable values to RT. However, if the user is not familiar with the watershed, SWIM will estimate RT based on the soil's saturated conductivity and a parameter called the baseflow factor.

css(j) Sediment concentration in return flow (ppm). Sediment concentration in return flow is usually very low and does not contribute significantly to total sediment yields unless return flow is very high. Unless the user is aware of unusual situations where CSS is extremely high, a value of [500.] ppm is a good estimate and will yield realistic results.

ecp(j) USLE erosion control practice factor P. Values of the USLE erosion control practice factor provided by Wischmeier and Smith are contained in Table 3.24.

Table 3.23: Values of Manning's "n" for overland flow

Overland Flow	Value Chosen	Range
Fallow, no residue	0.0100	0.008-0.012
Conventional tillage, no residue	0.0900	0.06-0.12
Conventional tillage, residue	0.1900	0.16-0.22
Chisel plow, no residue	0.0900	0.06-0.12
Chisel plow, residue	0.1300	0.10-0.16
Fall disking, residue	0.4000	0.30-0.50
No-till, no residue	0.0700	0.04-0.10
No-till, (0.5-1.0 t/ha)	0.1200	0.07-0.17
No-till (2.0-9.0 t/ha)	0.3000	0.17-0.47
Rangeland (20% cover)	0.6000	0.40-0.70
Short grass prairie	0.1500	0.10-0.20
Dense grass	0.2400	0.17-0.30
Bermuda grass	0.4100	0.30-0.48

Table 3.24: Water erosion control practice factor P and slope length limits for contouring

Land Slope (%)	P Value	Max length* (ft.)
1 to 2	0.60	400
3 to 5	0.50	300
6 to 8	0.50	200
9 to 12	0.60	120
13 to 16	0.70	80
17 to 20	0.80	60
21 to 25	0.90	50

* Limit may be increased by 25% if residue cover after crop seedlings will regularly exceed 50%.

sl(j) Average slope length (m). The average slope length is estimated for each sub-basin with the Contour Extreme Point Method (Williams and Berndt, 1977).

stp(j) Average slope steepness (m/m)-

rsdin(j) Initial residue cover (kg/ha). The RSDIN is the initial residue cover at the start of simulation

3.4.26 INPUT FILE - .gw

The xxxNN.gw file includes groundwater parameters (where xxx is the basin name given when using GRASS interface, NN is the sub-basin number -1). An example of the xxxNN.gw input file format is presented in the following Table.

The next Table describes the format of the example file xxxNN.gw, including parameter names given above the values.

Parameters included in the xxxNN.gw file are:

gwht(j) Initial groundwater height (m)

gwq(j) Initial groundwater flow contribution to streamflow (mm/day)

In SWIM: $gwq(j) = gwq0$

Table 3.25: example of the xxxNN.gw input file

Groundwater DATA 15 16							
1.0000	0.5000	0.0480	0.0030	200.0000	0.2000	0.0500	0.0000

Table 3.26: example of the xxxNN.gw input file, including parameter names

Groundwater DATA 15 16							
gwht(j)	gwq(j)	abf(j)	syld(j)	delay(j)	revapc(j)	rchrgc(j)	revapmn(j)
1.0000	0.5000	0.0480	0.0030	200.0000	0.2000	0.0500	0.0000

abf(j) alpha factor for groundwater. ABF characterizes the groundwater recession and the rate at which groundwater flow is returned to the stream.

In SWIM: $abf(j) = abf0$

syld(j) Specific yield

delay(j) groundwater delay (days). The time it takes for water leaving the bottom of the root zone until it reaches the shallow aquifer where it can become groundwater flow.

In SWIM: $delay(j) = \exp(-1./(\text{delay}(i)+1.e-6))$

revapc(j) Revap coefficient (0-1) is the fraction of recharge (root zone percolation) that goes to REVAP. The amount of evaporation from the shallow aquifer is determined by multiplying potential ET by REVAPC.

rchrgc(j) Deep aquifer percolation coefficient (0-1). The amount of water that percolates into the deep aquifer (from the shallow aquifer) is determined by multiplying root zone percolation by RCHRGC.

revapmn(j) Revap storage (mm). Shallow aquifer storage must exceed REVAPMN before groundwater flow can begin.

3.4.27 INPUT FILE - .rte

The xxxNN.rte file includes channel routing parameters (where xxx is the basin name given when using GRASS interface, NN is the sub-basin number -1). An example of the xxxNN.rte input file format is presented in the following Table.

Parameters included in the xxxNN.rte file are:

Table 3.27: example of the xxxNN.rte input file

SUBBasin Routing DATA 15 16							
19.447	0.793	0.002	3.785	0.050	1.000	0.280	1.000

Table 3.28: example of the xxxNN.rte input file, including parameter names

SUBBasin Routing DATA 15 16							
chw(2,j)	chd(j)	chss(j)	chl(2,j)	chnn(j)	chk(2,j)	chxk(j)	chc(j)
19.447	0.793	0.002	3.785	0.050	1.000	0.280	1.000

chw(2,j) Average channel width (m). It is estimated from a topographic map by GRASS interface and used for routing. May be substituted by actual channel width if available.

chd(j) Average channel depth (m). If detailed channel cross section data is unavailable, this parameter is estimated from a topographic map by GRASS interface and used for routing. May be substituted by actual channel depth if available.

chss(j) Channel slope (m/m). If detailed channel cross section data is unavailable, this parameter is estimated from a topographic map by GRASS interface and used for routing. May be substituted by actual channel slope if available.

chl(2,j) Channel length (km). If detailed channel data is unavailable, this parameter is estimated from a topographic map by GRASS interface and used for routing. May be substituted by actual channel length if available.

chnn(j) Channel n value (mm/hr). The channel "n" value is Mannings' "n" value. It is set to a default value 0.050 (as for natural streams with few trees, stones and brush) by GRASS interface and used to calculate routing. This value may be corrected by user. The typical values of chnn() are given in Section 3.4.27 for different streams.

Table 3.29: Values of Manning's "n" for channels

Channel Flow	Value Chosen	Range
Excavated or dredged		
Earth, straight and uniform	0.0250	0.016-0.033
Earth, winding and sluggish	0.0350	0.023-0.05
Not maintained, weeds and brush	0.0750	0.04-0.14
Natural streams		

Continued on next page

Table 3.29 – *Continued from previous page*

Few trees, stones, or brush	0.0500	0.025-0.065
Heavy timber and brush	0.1000	0.05-0.15

chk(2,j) Effective hydraulic conductivity in channel alluvium (mm/hr). It is set to a default value 1.0 (as for very low loss rate) by GRASS interface and used to calculate routing. This value may be corrected by user. Effective hydraulic conductivity of the channel alluvium is given in Section 3.4.27 for various channel bed material.

Table 3.30: Effective hydraulic conductivity of the channel alluvium

Bed Material Group	Bed Material Characteristics	Effective Hydraulic Conductivity (mm/hr)
1 Very high loss rate	Very clean gravel and large sand d ₅₀ >2 mm	>127
2 High loss rate	Clean sand and gravel under field conditions, d ₅₀ >2 mm	51-127
3 Moderate high loss rate	Sand and gravel mixture with less than a few percent silt-clay	25-76
4 Moderate loss rate	Mixture of sand and gravel with sig- nificant amounts of silt-clay	6.4-25
5 Very low loss rate	Consolidated bed material with high silt-clay content	0.025-2.5

chxk(j) erodibility of stream channel, or USLE soil factor K for channel (range: 0-1). chxk=0 indicates a nonerosive channel, while chxk = 1 indicates no resistance to erosion. It is set to a default value 0.28 by GRASS interface and used in calculating routing. This value may be corrected by user.

chc(j) Cover factor for stream channel, or USLE soil factor C for channel (range: 0-1). If there is no vegetative cover, chc = 1. It is set to a default value of

1.0 (no vegetative cover) by GRASS interface and used to calculate routing. This value may be corrected by user.

3.4.28 INPUT FILE - wstor.dat

The wstor.dat file sets initial storage values for the reaches. It lists all reaches and the corresponding initial water storage in m³. The values for initialisation can be obtained from a test run, considering the simulated water storage at the end of the first year.

i1 reach, corresponding to the subbasin i1

sdt sav initial water storage in the reach i1

3.4.29 INPUT FILE - soilNN.dat

The soilNN.dat files include soil parameters (where, NN is the soil type number). An example of the soilNN.dat input file format is presented in the following Table.

Table 3.31: example of the soilNN.dat input file

36	5			
Tschernosem aus Loess				
Ap	Ap	Ahl	AhBt	Bt
Ut3	Ut3	Ut3	Lu	Ut3
10.	300.0	600.0	1000.0	1100.0
15.	15.	15.	25.	15.
75.	75.	75.	60.	75.
10.	10.	10.	15.	10.
1.40	1.40	1.50	1.70	1.6
52.5	52.5	50.5	45.5	40.5
26.5	26.5	26.	17.5	23.5
41.5	41.5	40.	39.	36.
2.0	2.0	1.2	0.9	0.
0.2	0.2	0.1	0.	0.0

Continued on next page

3.4 Input Parameters

Table 3.31 – *Continued from previous page*

0.56				
16.7	16.7	10.4	4.2	10.4

Table 3.32: example file soilNN.dat, including parameter names

k	ns(k)			
36	5			
sname(k)				
Tschernosem aus Loess				
Ap	Ap	Ahl	AhBt	Bt
Ut3	Ut3	Ut3	Lu	Ut3
z(1,k)				
10.	300.0	600.0	1000.0	1100.0
cla(1,k)				
15.	15.	15.	25.	15.
sil(1,k)				
75.	75.	75.	60.	75.
san(1,k)				
10.	10.	10.	15.	10.
por(1,k)				
1.40	1.40	1.50	1.70	1.6
poros(1,k)				
52.5	52.5	50.5	45.5	40.5
awc(1,k)				
26.5	26.5	26.	17.5	23.5
fc(1,k)				
41.5	41.5	40.	39.	36.
cbn(1,k)				
2.0	2.0	1.2	0.9	0.

Continued on next page

Table 3.32 – *Continued from previous page*

wn(l,k)				
0.2	0.2	0.1	0.	0.0
ek(k)				
0.56				
sc(l,k)				
16.7	16.7	10.4	4.2	10.4

Parameters included in the soilNN.dat file are:

k soil type number in a database

ns(k) number of soil layers for soil k. Number of soil layers for soil. The number of soil layers is assigned by the user. Usually the depths to the bottom of the layers are assigned in accordance with available database. Up to 10 layers are allowed, the first layer should be a depth of 10 mm.

snam(k) name of soil k

z(l,k) depth to bottom of layers $l=1, \dots, ns(k)$ in mm

cla(l,k) clay content in %

sil(l,k) silt content %

san(l,k) sand content, %

por(l,k) bulk density (g/cm³) (input), then recalculated to porosity

poros(l,k) porosity, % (if available). If available water capacity, field capacity or total porosity values are missing, they can be estimated based on texture as in Section 3.4.29.

3.4 Input Parameters

awc(l,k) available water capacity, %. If available water capacity, field capacity or total porosity values are missing, they can be estimated based on texture as in Section 3.4.29.

fc(l,k) field capacity, %. If available water capacity, field capacity or total porosity values are missing, they can be estimated based on texture as in Section 3.4.29.

cbn(l,k) organic carbon content (%)

wn(l,k) organic nitrogen content (%)

wno3(l,k) initial NO₃-N content (kg/ha), if available. Otherwise, it will be estimated from wn().

ap(l,k) labile (soluble) phosphorus (g/t), if available. Otherwise, it will be estimated.

ek(k) soil erodibility factor K (for USLE)

sc(l,k) saturated conductivity (mm/h)

The following Section 3.4.29 may be useful, if all necessary soil parameters are not available.

Table 3.33: Mean physical properties of soils (from Svetlosanov and Knisel, 1982)

Texture	Bulk Density (gm/cm)	Total Porosity	Field Capacity 1/3 bar	Wilting Point 15 bar	Available Water Capacity
	Volume (m/m)				
Coarse sand	1.6	0.4	0.11	0.03	0.08
Sand	1.6	0.4	0.16	0.03	0.13
Fine sand	1.5	0.43	0.18	0.03	0.15

Continued on next page

Table 3.33 – *Continued from previous page*

Texture	Bulk Density (gm/cm)	Total Porosity	Field Capacity 1/3 bar	Wilting Point 15 bar	Available Water Capacity
Very fine sand	1.5	0.43	0.27	0.03	0.25
Loamy coarse sand	1.6	0.4	0.16	0.05	0.11
Loamy sand	1.6	0.4	0.19	0.05	0.14
Loamy fine sand	1.6	0.4	0.22	0.05	0.18
Loamy very fine sand	1.6	0.4	0.37	0.05	0.32
Coarse sandy loam	1.6	0.4	0.19	0.08	0.11
Sandy loam	1.6	0.4	0.22	0.08	0.14
Fine sandy loam	1.7	0.36	0.27	0.08	0.19
Very fine sandy loam	1.6	0.4	0.37	0.08	0.29
Loam	1.6	0.4	0.26	0.11	0.15
Silt loam	1.5	0.43	0.32	0.12	0.2
Silt	1.4	0.47	0.27	0.03	0.24
Sandy clay loam	1.6	0.4	0.3	0.18	0.12
Clay loam	1.6	0.4	0.35	0.22	0.13
Silty clay loam	1.4	0.47	0.36	0.2	0.16
Sandy clay	1.6	0.4	0.28	0.2	0.13
Silty clay	1.5	0.48	0.4	0.3	0.14
Clay	1.4	0.47	0.39	0.28	0.11

3.4.30 BLOCK DATA in the file init.f

Curve Numbers for 15 land use categories are initialized in block data (file init.f). The following values summarized in Section 3.4.30 are assigned for land use categories and soil groups in SWIM. Section 3.4.30 presents SCS runoff curve numbers for a variety of land use/land cover categories.

3.4 Input Parameters

Table 3.34: Curve Numbers for land use categories and for soil groups used in SWIM

Land Use No.	Land use category	Soil group A	Soil group B	Soil group C	Soil group D	Source in SCS Tables
1	Water	100	100	100	100	
2	Settlement	72	79	85	88	Urban areas, medium density
3	Industry	81	88	91	93	Industrial
4	Road	98	98	98	98	Paved streets and roads
5	Cropland	65	75	82	86	Row crops, contoured
6	Set-aside	66	77	85	89	Rotation meadow
7	Extensive grassland (meadow)	30	58	71	78	Meadow, continuous grass
8	Intensive grassland (pasture)	49	69	79	84	Pasture, continuous forage for grazing
9	Mixed forest	36	60	73	79	Woods, fair
10	Evergreen forest	36	60	73	79	Woods, fair
11	Deciduous forest	36	60	73	79	Woods, fair
12	Wetland non-forested	85	85	85	85	
13	Wetland forested	85	85	85	85	
14	Heather (grass + brushland)	35	56	70	77	Brush-weed-grass mixture with brush the major element
15	Bare soil	77	86	91	94	

Table 3.35: SCS Curve Numbers for a variety of land use/land cover categories

Land Use/Crop	Cover	Condition	A	B	C	D
Fallow	Straight row	—	77	86	91	94
Row crops	Straight row	Poor	72	81	88	91
		Good	67	78	85	89
	Contoured	Poor	70	79	84	88
		Good	65	65	82	86
	Contoured and terraced	Poor	66	74	80	82
		Good	62	71	78	81
Small grain	Straight row	Poor	65	76	84	88
		Good	63	75	83	87
	Contoured	Poor	63	74	82	85
		Good	61	73	81	84
	Contoured and terraced	Poor	61	72	79	82
		Good	59	70	78	81
Small grain	Straight row	Poor	65	76	84	88
		Good	63	75	83	87
	Contoured	Poor	63	74	82	85
		Good	61	73	81	84
	Contoured and terraced	Poor	61	72	79	82
		Good	59	70	78	81
Close-seeded legumes* or rotation meadow	Straight row	Poor	66	77	85	89
		Good	58	72	81	85
	Contoured	Poor	64	75	83	85
		Good	55	69	78	83
	Contoured and terraced	Poor	63	73	80	83
		Good	51	67	76	80
Pasture or range	Straight row	Poor	68	79	86	89
		Fair	49	69	79	84

Continued on next page

Table 3.35 – *Continued from previous page*

Land Use/Crop	Cover	Condition	A	B	C	D
		Good	39	61	74	80
	Contoured	Poor	47	67	81	88
		Fair	25	59	75	83
		Good	6	35	70	79
Meadow		Good	30	58	71	78
Woods		Poor	45	66	77	83
		Fair	36	60	73	79
		Good	25	55	70	77
Farmsteads		—	59	74	82	86
Roads (dirt)**		—	72	82	87	89
Roads (hard surface)**		—	74	84	90	92

Chapter 4

How to Prepare Data and Run SWIM

The model runs under the UNIX environment with the daily time step. The SWIM/GRASS interface is used to initialise the model by extracting spatially distributed parameters of elevation, land use, soil types, closest climate/precipitation station, and the routing structure.

The preparation to the modelling consists of the following steps:

- preparation of spatial data in GRASS (described in Section 4.1),
- run SWIM/GRASS interface using the spatial data in GRASS (described in Section 3.1), vpreparation of relational data (described in Section 4.3), which includes:
 - climate data (in Section 4.3.2),
 - soil data (Section 4.3.3),
 - crop management data (Section 4.3.4)
 - hydrological and water quality data (Section 4.3.5)
- copy all input data in the working directory and modification of several data-handling routines, if necessary (described in Section 4.4).

After that the model can be run. The calibration parameters and some examples of the model sensitivity studies are given in Section 4.4.3.

4.1 Spatial Data Preparation

First, an overview of necessary spatial data is given in Section 4.1.1. After that, two important questions: how the resolution of the Digital Elevation Model is related to the

basin area, and how the average sub-basin area must be chosen, are discussed in Section 4.1.2 and Section 4.1.3. Then a short overview of GRASS GIS is given in Section 4.1.4, and some GRASS operations, useful for spatial data preparation, are described in Section 4.1.5 and Section 4.1.6. A specific program for watershed analysis `r.watershed` is described separately in Section 4.1.7. A DEMO data set is given in Section 4.1.8

4.1.1 GIS Data Overview

The full list of necessary spatial data (digitised maps) is the following:

1. Digital Elevation Model (DEM),
2. land use map,
3. soil map,
4. map of basin and sub-basins boundaries,
5. map of river network,
6. map of river gage stations,
7. alpha-factor map for groundwater,
8. map of climate stations,
9. map of Thiessen polygons for climate stations,
10. map of precipitation stations,
11. map of Thiessen polygons for precipitation stations
12. map of point sources of pollution.

All the maps can be provided in ARC/INFO or GRASS format.

The first four maps: DEM, land use, soil and sub-basins are absolutely necessary to run the SWIM/GRASS interface and initialise the model (see, for example, Figure 4.2).

For the DEM resolution is important (see Section 4.1.2). The soil map has to be connected to soil parameters (see a detailed description in Section 4.3.3). The land use map has to be reclassified for SWIM to a map with the following categories:

- n = 1 - water
- n = 2 - settlement
- n = 3 - industry
- n = 4 - road
- n = 5 - cropland

- n = 6 - set-aside
- n = 7 - grassland, extensive use (meadow)
- n = 8 - grassland, intensive use (pasture)
- n = 9 - forest mixed
- n = 10 - forest evergreen
- n = 11 - forest deciduous
- n = 12 - wetland nonforested
- n = 13 - wetland forested
- n = 14 - heather (grass + brushland)
- n = 15 - bare soil

The fourth, sub-basin map, can be created in GRASS based on the DEM map using the `r.watershed` program. Here the DEM resolution is important (see Section 4.1.2 for more details). There is a certain restriction on the average sub-basin area in SWIM, which has to be kept (see more details in Section 4.1.4). Together with sub-basins, the virtual river network can be calculated, which is useful for checking the routing structure.

The map of river network (5) is useful for comparison with the virtual river network calculated by `r.watershed`, and for checking the routing structure. Comparison of river networks calculated in GRASS and digitized is demonstrated in Figure 4.3 for the Mulde basin.

The map of river gage stations (6) can be used for delineation of the basin boundaries, if the sub-basin map is created in GRASS.

The alpha-factor map for groundwater (7) is useful, if the ground water table has to be modelled specifically for the basin under study.

Maps of climate and precipitation stations and the corresponding maps of Thiessen polygons (8-11) are more important for larger basins, having several climate/precipitation stations. For smaller basins this information can be extracted directly from available paper maps. The Thiessen polygons can be also calculated in GRASS version 4.2 using the functions `s.geom` or `v.geom`.

A map of point sources of pollution (12) is necessary in case of water quality modelling, when the simulated load is compared with the observed load, and the point sources of pollution contribute a significant part in the river load and must be taken into account.

An important question is how to choose an adequate spatial resolution for the mesoscale river basin under study. This problem is of fundamental significance for hydrological and hydrochemical process modelling.

First of all, the spatial resolution and the time increment of the model are interrelated. SWIM is not designed for detailed modelling of flood processes with $T < 1$ day. Also, we

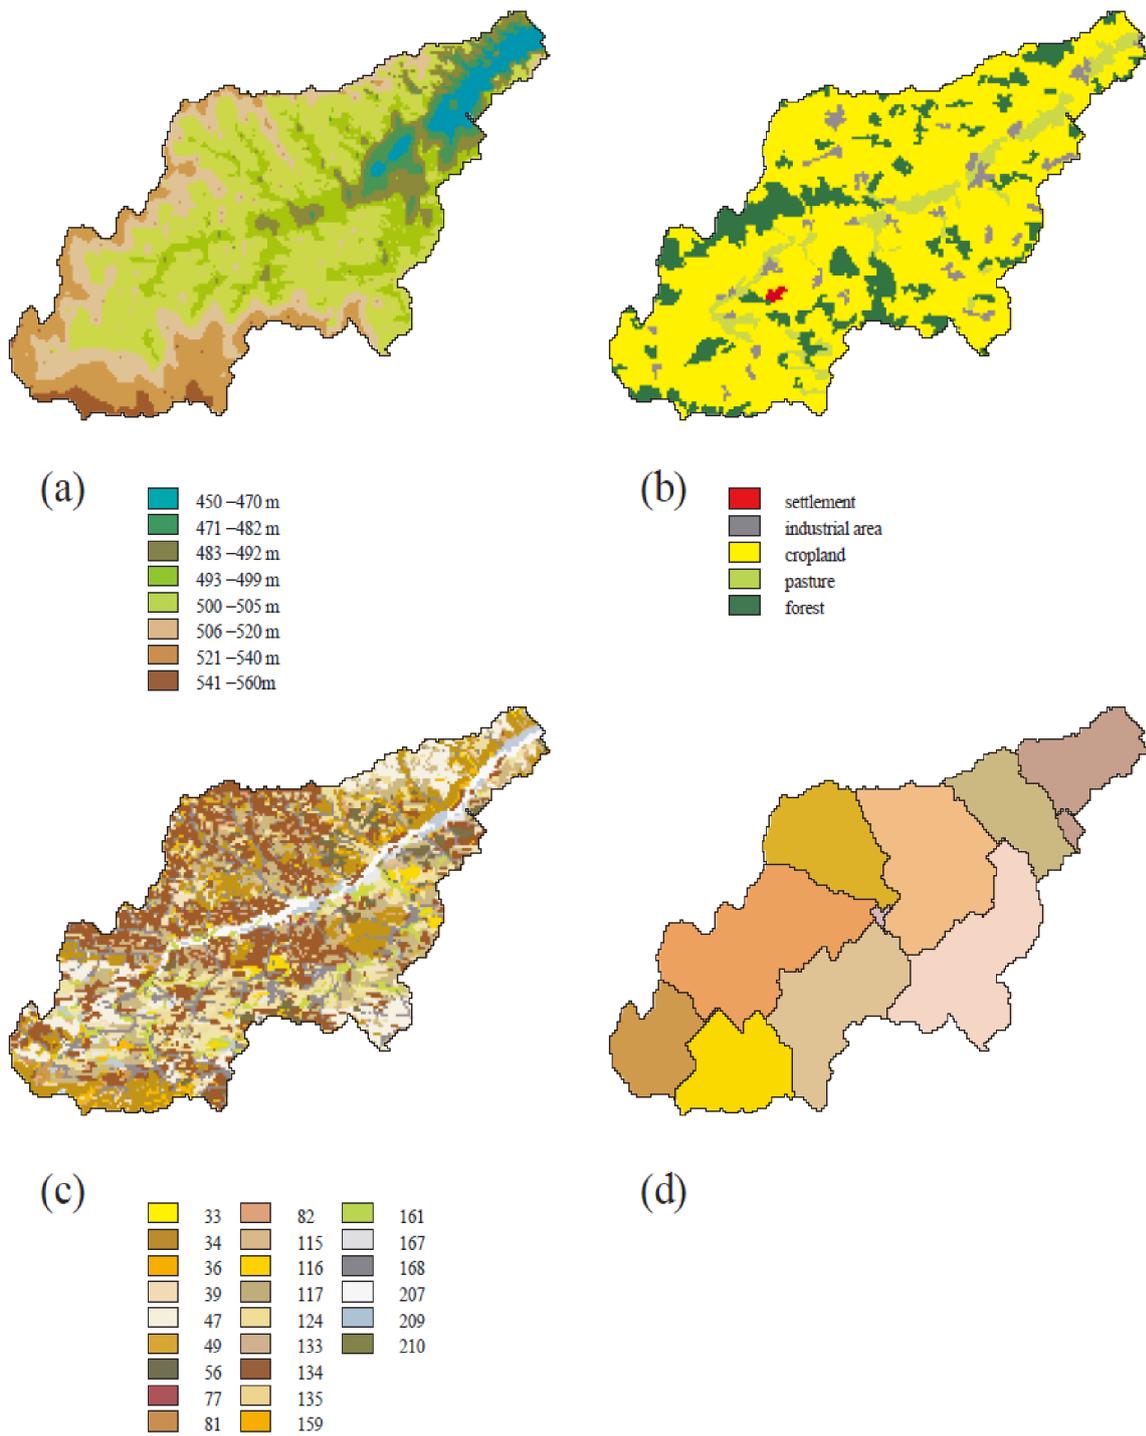


Figure 4.1: A set of four maps: Digital Elevation Model (a), land use (b), soil (c), and sub-basins (d) that are necessary to run SWIM/GRASS interface

exclude very flat areas with many lakes, where travelling time becomes too large. These problems require specific modelling tools. With these exceptions, the problem of spatial resolution appears in at least two very important questions:

- how the resolution of the Digital Elevation Model (DEM) is related to the watershed area, and

- whether an upper limit of a sub-basin area exists below which the effect of the river network can be neglected.

These two questions are discussed in Section 4.1.2 and Section 4.1.3.

4.1.2 How to Choose Spatial Resolution?

Answering the first question, Maidment (n.d.[a]) suggests using the so-called „thousand-million“ rule as a rough guide: take the area of the region under study and divide it by one million to give the appropriate cell size (area) to be used, then multiply the cell size chosen by one thousand which is then the minimum drainage area of watersheds that should be delineated from this DEM. This rule should not be understood as an absolute one, but should be treated with a certain level of approximation.

According to this rule, 930 m resolution should be used for delineation of a watershed with the drainage area of 4000 km², 460 m resolution for a 1000 km² watershed, 90 m for a 40 km² watershed, and 30 m for a 5 km² catchment. This is in agreement with our modelling experience from the studies performed in the Elbe drainage basin, where 100 m resolution was acceptable to represent a catchment of 64 km², 200 m resolution was sufficient to delineate a watershed with an area of 535 km², and 1000 m resolution was satisfactory for extracting watersheds with an area of 3,000-4,000 km².

Maidment (n.d.[a]) also provides a useful Table showing the recommended cell size of DEM for some typical applications. For example, for a region size of 1000 km² a linear cell size of 30 m, and a sub-basin size of 5 km² are recommended. In the region with an area of 8000 km² the sub-basins of 40 km² can be delineated based on 90 m resolution. For a region size of 200,000 km² the recommended resolution is 460 m, and the sub-basin size 4000 km².

Following this rule more strictly, we can suggest the following Table 4.1 for some commonly used resolutions:

Of course, in practice these recommendations should be used with some degree of freedom.

Table 4.1: Recommended resolution of DEM for some typical applications

Linear cell size, m	Cell area, km ²	Sub-basin area, km ²	Region or basin size, km ²
30	0.0009	1	1,000
100	0.01	10	10,000
200	0.04	40	40,000
500	0.25	250	250,000
1000	1.	1,000	1,000,000

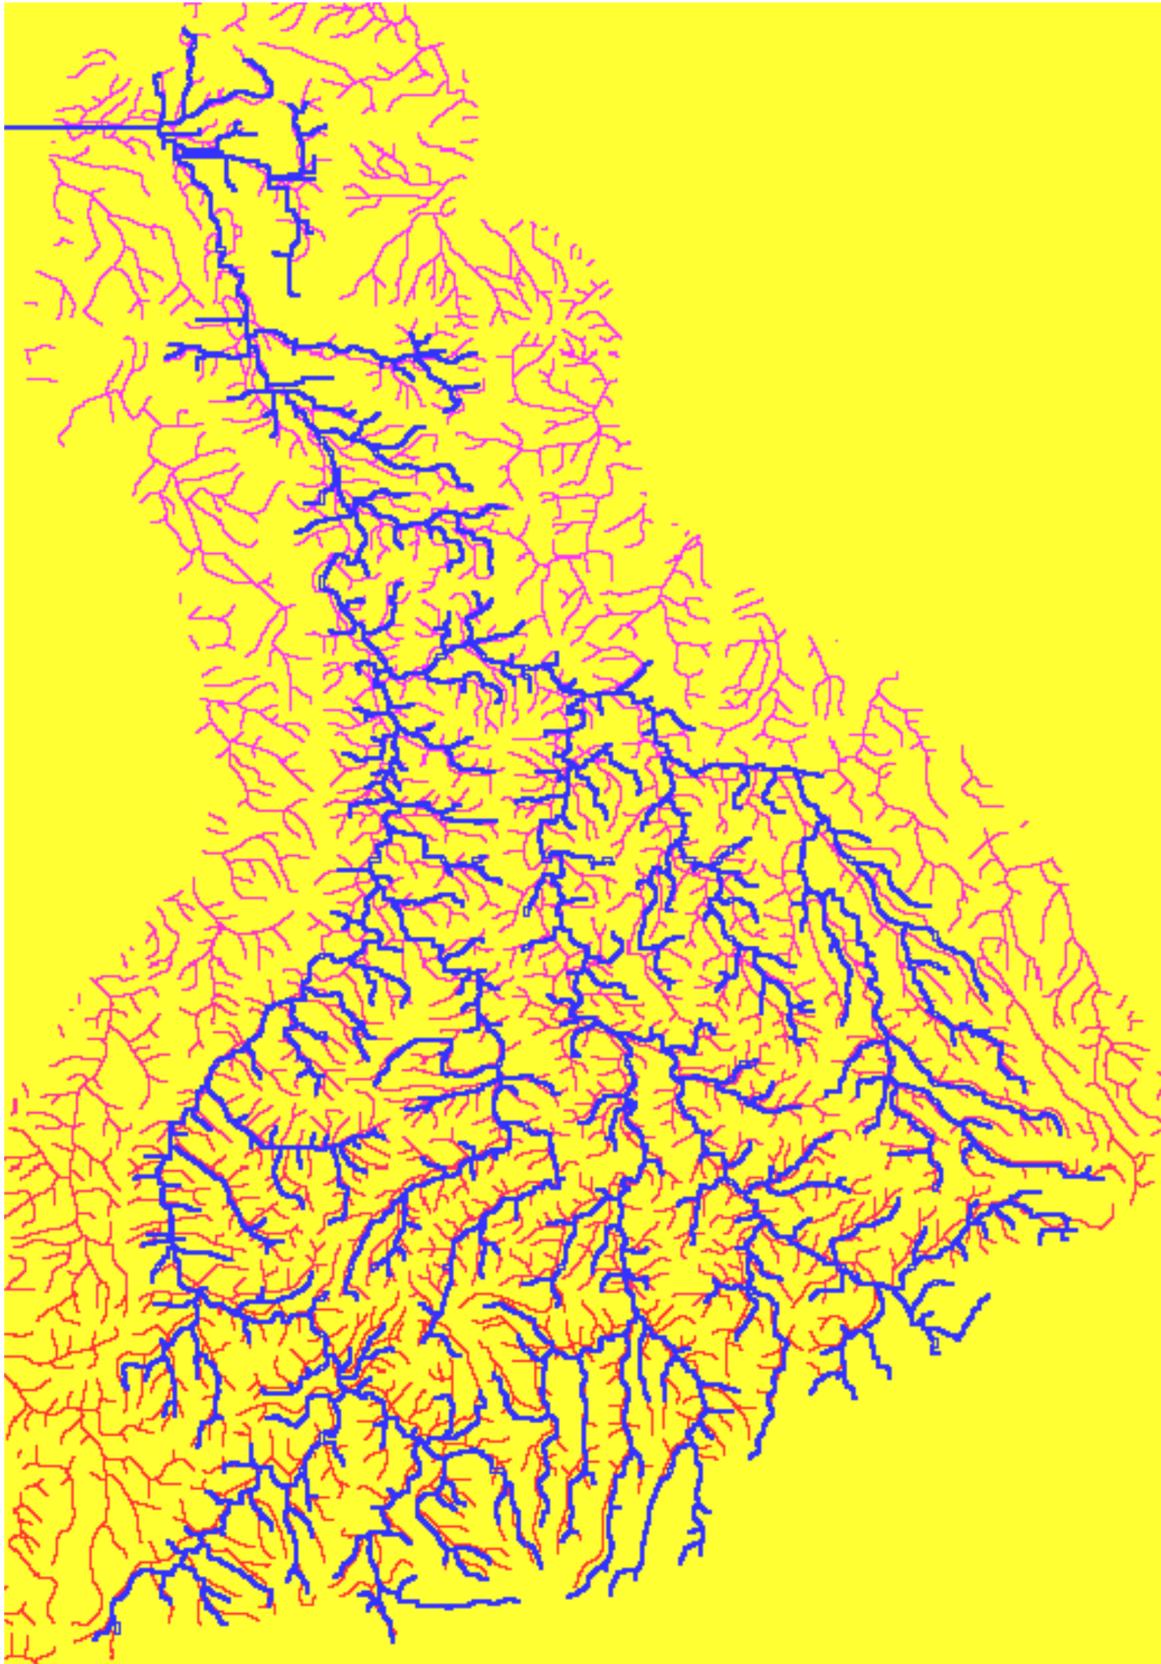


Figure 4.2: Comparison of a virtual river networks produced by GRASS (blue) and a digitized river network (red)

4.1.3 How to Choose the Average Sub-basin Area?

The second question relates to the upper limit of the sub-basin area, below which the effect of the river network can be neglected, and the choice of the average sub-basin area when creating the sub-basin map.

According to BEVEN and Kirkby (n.d.), the effect of the channel network becomes important for basins larger than about 10 km², where the time constant of the network (i.e. travel time through it) becomes as long as for the infiltration phase. This is especially important for lowland, where the time constant may be very large.

On the other hand, in mountainous areas, where the time constant is rather low, the sub-basin area must be restricted due to climate gradients, because, as it was already explained in Chap. 1, the climate input in SWIM is considered to be homogeneous in sub-basins.

It is also known that 5 to 10 km (or 25 to 100 km²) appears to be the minimum scale, above which inhomogeneities in land surface properties can trigger specific mesoscale atmospheric circulation systems, which have a definite impact on interactions between land surface and the atmosphere (Kuchment, n.d.).

So the following pragmatic conclusion might be drawn: an average sub-basin area, where the effect of the river network may be neglected, should be in a range of 10 to 100 km² and definitely not larger than 100 km².

The restrictions on average sub-basin area and time step influence the computing time, and, taken together with the data availability, define the upper limit of the sub-basin area for the model application. An adequate spatial disaggregation should allow the applicability of the model to be extended to larger basins.

4.1.4 GRASS GIS Overview

GRASS (Geographic Resource Analysis Support System) (USACE, n.d.) is a public domain raster GIS originally developed by the Environmental Division of the US Army Construction Engineering Research Laboratory (USA-CERL) as a general-purpose spatial modelling and analysis package. Since then, GRASS has evolved into a powerful tool with a wide range of applications in many different areas of scientific research. The new headquarters for GRASS support, research, and development is at Baylor University, the Department of Geology. Recently GRASS was upgraded to version 4.2, and the version 5.0 is underway.

GRASS is highly interactive and graphically oriented, providing tools for developing, analysing, and displaying spatial information. GRASS runs through the use of standardised command line input or under the X Window system under the UNIX environment. The following data formats are supported by GRASS:

- raster,
- vector,
- sites,
- satellite and air-photo image,
- import from ASCII, DXF, Image, and others,
- export to ASCII, DXF, Image, and others.

Though GRASS is the raster-based GIS, it can handle different data representations:

- raster (or grid cell) data can be analysed, overlaid, recalculated,
- vector data can be combined with raster data for display or analysis,
- point data can be used to represent the locations of significant sites.

New maps can be digitised or scanned. Maps can also be transferred from other GIS systems like ARC/INFO. Data files can be developed for large or small geographic regions at any scale desired within the limits of the source data and the storage capacity of the hardware.

GRASS was successfully coupled with a number of hydrological and water quality models, like ANSWERS, AGNPS, TOPMODEL, SWAT, and SWIM (Srinivasan and Engel, 1991; Rewerts and Engel, 1991; Chairat and Delleur, 1993; Srinivasan and Arnold, 1994; Krysanova et al., 1998a) in order to facilitate input of spatially-distributed information and enhance the use and utility of the models.

First of all, GRASS raster capabilities are very attractive for the use in spatially-distributed hydrological modelling, because spatial data can be easily translated from the GIS to the model in order to initialise it, and the model outputs can be transferred to GIS again for visualisation and analysis purposes. Second, GRASS is a public domain GIS, all program codes are available. This is different from other packages like ARC/INFO, and significantly facilitates further software development. Third, GRASS is written in the C programming language, which is also widely used for modelling. Fourth, GRASS is flexible enough for a variety of applications, as soon as data layers can be transported to and from several other GIS, including ARC/INFO. Last, but not least, GRASS has specific programs for hydrological modelling and interpolation, which can be very useful.

According to our experience the combination of ARC/INFO and GRASS packages can be especially powerful, when ARC/INFO is used mainly for preparation and editing of basic map layers, and afterwards GRASS is used for analysis, reclassification, overlaying, recalculation and application of specific hydrological tools.

4.1.5 Useful GRASS Programs and Functions

GRASS includes special programs and functions for Display (starting with `d.`), General functions (`g.`), Raster functions (`r.`), Vector functions (`v.`), Sites functions (`s.`), Imagery functions (`i.`), as well as some other contributed programs and shell scripts.

Import/Export programs There are a number of transformation programs between GRASS and different other formats: ASCII (`v.in.ascii`, `v.out.ascii`, `r.in.ascii`, `r.out.ascii`), ARC/INFO (`v.in.arc`, `v.out.arc`, `r.in.ascii`, `r.out.ascii`), DXF (`v.in.dxf`, `v.out.dxf`), DLG (`v.import`), DLG-3 (`v.in.dlg`, `v.out.dlg`), MOSS (`v.out.moss`). When a map layer has been converted to a GRASS raster format, all raster support files (`cellhd`, `cell_misc`, `cats`, `colr`, and `hist`) must be checked for accuracy and completeness. The `r.support` program must be run to modify these files if necessary. Transformation routines sometimes do not work smoothly. It can be due to the fact that the requirements and steps are not sufficiently described in the Manual.

Conversion programs A GRASS database can be based upon one of four different coordinate systems: UTM, SPCS (State Plane Coordinate System), latitude/longitude, or Cartesian coordinate (`x/y`) system. The map projection that is most commonly used for maps in a GRASS database is the Transverse Mercator projection which is the basis for the Universal Transverse Mercator (UTM) coordinate system. There are five programs available for conversion purposes:

m.ll2u - converts geographic coordinates to Universal Transverse Mercator (UTM) coordinates for a number of spheroids,

m.u2ll and **m.region.ll** - convert Universal Transverse Mercator (UTM) coordinates falling within the current geographic region to geographic (latitude/longitude) coordinates,

m.gc2ll - converts geocentric to geographic coordinates for a number of possible spheroids,

m.ll2gc - converts geographic coordinates to geocentric.

The use of geographic coordinates in GRASS is still rather restricted.

Display and printout It is not so easy to create the good-quality printed maps in GRASS that look professional. There is no automatic way to create legend with user-specified options, bar scale, north arrow. The `p.map` script file has to be created in advance in order to create a postscript file and then a map can be printed. The other possibility is to use any screendump or grab procedure, which is available in a number of packages, and

then to add additional features using these tools. Some new capabilities in the map printing program are designed now.

Special hydrological support programs There are several programs in GRASS, which provide support for hydrological modelling. The program `r.watershed` is the main tool for delineation of basin and sub-basin boundaries based on DEM, and for calculating the LS (slope length and steepness) and S (slope steepness) factors of the Revised Universal Soil Loss Equation (RUSLE) (see more detailed description in Section 4.1.6). There are some more hydrologically-oriented programs in GRASS, like `r.basins.fill`, `r.cost`, `r.drain` as well as the useful interpolation tools.

The `r.basins.fill` program is similar to `r.watershed` but does not require DEM. It generates a raster map layer depicting sub-basins, based on two maps: 1) the coded stream network (each channel segment is „coded“ with a unique category value) and 2) the ridges within the given watershed (including the ridge which defines the perimeter of the watershed). The resulting output raster map layer codes the sub-basins with category values matching those of the channel segments passing through them.

The `r.cost` program determines the cumulative cost of moving to each cell on a cost surface (the input raster map) from other specified cell(s) whose locations are specified by their coordinates, and the `r.drain` program traces a flow through a least-cost path in an elevation model. The results for cells are similar to those obtained when using the `seg` version of the `r.watershed` program.

Interpolation programs There are two programs in GRASS for the interpolation from point data (`s.surf.idw` and `s.surf.tps`) and two programs for the interpolation from raster data (`r.surf.idw` and `r.surf.idw2`). The `s.surf.idw` fills a raster matrix with interpolated values generated from a set of irregularly spaced data points using numerical approximation (weighted averaging) techniques. The interpolated value of a cell is determined by values of nearby data points and the distance of the cell from those input points. In comparison with other methods, numerical approximation allows representation of more complex surfaces (particularly those with anomalous features), and restricts the spatial influence of any errors.

The `s.surf.tps` interpolates and computes topographic analysis from given site data (digitised contours, climatic stations, drill holes, etc.) to GRASS raster format using spline with tension. As an option, simultaneously with interpolation, topographic parameters like slope, aspect, profile curvature (measured in the direction of the steepest slope), tangential curvature (measured in the direction of a tangent to a contour line) or mean curvature are computed and saved as raster files. Topographic parameters are computed directly from the interpolation functions so that the important relationships between these parameters are preserved. The equations and their interpretation are described in Mitasova et al. (n.d.).

Two programs `r.surf.idw` and `r.surf.idw2` fill a grid cell (raster) matrix with interpolated values generated from a set of input layer data points or irregularly spaced data points. They use a numerical approximation technique based on distance squared weighting of the values

of nearest data points. The number of nearest data points used to determine the interpolated value of a cell can be specified by the user (default: 12 nearest data points). Unlike `r.surf.idw2`, which processes all input data points in each interpolation cycle, `r.surf.idw` attempts to minimise the number of input data for which distances have to be calculated. Execution speed is therefore a function of the search effort and does not increase appreciably with the number of input data points. The `r.surf.idw2` does not work with latitude/longitude data, in such a case the `r.surf.idw` should be used.

There are a number of useful GRASS commands, which are necessary for any SWIM user. They are needed for visualisation, recalculation, and reclassification of map layers. In the Appendix I the most useful GRASS commands are listed, which are needed for spatial data preparation.

4.1.6 Map Export from ARC/INFO to ASCII Format

Raster Data in ARC/INFO A raster data set in ARC/INFO is called a "Grid". All operations on grids are performed in the module with the same name. The resolution (or cell size) of any existing grid can be changed using the `resample` function, which offers different algorithms for categorical and continuous data. Conversion from vector to raster data in ARC/INFO can be either done on the Arc prompt, or within Grid. Both procedures are similar and can be performed with polygon, line or point input data. The user has to define the desired cell size, because one coverage can be gridded using different resolutions. By defining the coordinates of a lower left corner and a desired number of rows and columns, the processing can be focussed on a certain part of the coverage, if necessary. As GRASS version 4.2 does not yet support the NODATA data format, it is recommended to select ARC/INFO's ZERO option using "0" as NODATA (or background) value.

Data Exchange between ARC/INFO and GRASS As neither GRASS 4.2 can import ARC/INFO grids, nor ARC/INFO can read GRASS raster maps directly, the data exchange between both systems should be performed using ASCII format. Both systems can produce and read ASCII files containing the data as a continuous stream of values separated by blanks. The information about how to produce a raster map for the system is stored in a header section containing the coordinates of the corner (or north, south, east west coordinates) and the number of rows and columns. ARC/INFO's header format looks like

```

NCOLS xxx
NROWS xxx
XLLCORNER xxx
YLLCORNER xxx
CELLSIZE xxx
NODATA_VALUE xxx,
```

whereas GRASS uses the following header:

```
north: xxx
south: xxx
east: xxx
west: xxx
rows: xxx
cols: xxx
```

An example of data conversion Let us assume that we want to grid a polygon coverage called "lupoly" containing land use information (item lu-code) with cell size 50 and a line coverage "fgw" containing the stream network of the same region. The necessary commands are listed below (the comments are between **).

```
Step 1: Usage: POLYGRID <in_cover> <out_grid> value_item lookup_table weight_table
Arc: POLYGRID lupoly lugrd lu-code
```

Converting polygons from lupoly to grid lugrd Cell Size (square cell): 50 Convert the Entire Coverage? (Y/N): y Number of Rows = 648 ** the value is calculated by the program** Number of Columns = 604 ** the value is calculated by the program**

```
Step 2: Usage: LINEGRID <in_cover> <out_grid> value_item lookup_table weight_table
Arc: LINEGRID fgw fgwgrd
```

Converting arcs from fgw to grid fgwgrd Cell Size (square cell): 50 Convert the Entire Coverage(Y/N)?: y Enter background value (NODATA | ZERO): zero Number of Rows = 493 ** the value is calculated by the program** Number of Columns = 553 ** the value is calculated by the program**

An example of changing the cellsize of an existing grid Let us assume that we want to change the cell size of lugrd from its original size of 50 cells to 100 cells using the nearest-neighbour assignment as default option. (N.B.: This of course could be done earlier when prompted during POLYGRID).

```
Arc: grid ** starts the grid module**
```

```
Grid: lugrd2 = resample(lugrd,100) Resample ... Grid: quit ** leaves the grid module**
```

An example of export to ASCII file Let us assume that now we want to export lugrd and fgwgrd to ASCII files.

```
Usage: GRIDASCII <in_grid> <out_ascii_file> item Arc: GRIDASCII lugrd lu-
grd.txt Arc: GRIDASCII fgwgrd fgwgrd.txt
```

The header of lugrd.txt is: ncols 604 nrows 648 xllcorner 4492676.68 yllcorner 5884875.398 cellsize 50 NODATA_value -9999

The header of fgwgrd.txt is: ncols 553 nrows 493 xllcorner 4494452.5 yllcorner 5886652
cellsize 50 NODATA_value -9999

It is obvious that although both grids have the same cell size, they do not match, because their llcorners' coordinates' difference is not a multiple of their cell size. In such a case it is recommended to use the coordinates of lugrd as an input to LINEGRID as shown in the following example.

An example of producing matching grids The following commands should be done:

Usage: DESCRIBE <geo_dataset> Arc: DESCRIBE lugrd

Description of Grid LUGRD Cell Size = 50.000 Data Type: Integer Number of Rows = 648 Number of Values = 14 Number of Columns = 604 Attribute Data (bytes) = 8

BOUNDARY STATISTICS Xmin = 4492676.680 Minimum Value = 111.000 Xmax = 4522876.680 Maximum Value = 512.000 Ymin = 5884875.398 Mean = 225.421 Ymax = 5917275.398 Standard Deviation = 42.130

Arc: LINEGRID fgw fgwgrd Converting arcs from fgw to grid fgwgrd Cell Size (square cell): 50 Convert the Entire Coverage(Y/N)?: n **in Example 1 we entered y ** Grid Origin (x, y): 4492676.680,5884875.398 **values taken from lugrd ** Grid Size (nrows, ncolumns): 648,604 **values taken from lugrd **

Enter background value (NODATA | ZERO): zero Number of Rows = 648 Number of Columns = 604 Arc: GRIDASCII fgwgrd fgwgrd.txt

Now fgwgrd.txt's header looks as follows: ncols 604 nrows 648 xllcorner 4492676.68
yllcorner 5884875.398 cellsize 50 NODATA_value -9999

After the header information has been changed, both ASCII files are almost ready to be imported to GRASS running r.in.ascii (after changing the header).

An example of changing the header information The map exported from ARC/INFO in ASCII format has the heading, which consists of six lines, describing coordinates of the lower left corner, number of columns and rows, and the cell size, e.g.:

ncols 349 nrows 542 xllcorner 69367.3 yllcorner 37980.7 cellsize 1000 NODATA_value
-9999

However GRASS requires slightly different format for its r.in.ascii program, describing the coordinates of north, south, east and west, and the number of rows and columns, like:

north:579980.7 south: 37980.7 east: 418367.3 west: 69367.3 rows: 542 cols: 349

The ARC/INFO export file in ASCII format can be transformed to GRASS input ASCII format using the program arc2grass, which is included in the SWIM model package.

4.1.7 Watershed Analysis Program `r.watershed`

Delineation of watersheds from the Digital Elevation Model (DEM) is the first necessary step in many hydrological applications. A procedure that has become a standard one is based on the eight-direction basis in which each grid cell is connected to one of its eight neighbour cells according to the direction of steepest descent. Another possibility is to use the four-direction procedure for watershed delineation.

Based on an elevation grid, a grid of flow direction is built, and then a map of flow accumulation is derived from the flow direction map, counting the number of cells upstream of a given cell. Streams are identified as lines of cells whose flow accumulation exceeds a specified threshold number of cells and thus a specified upstream drainage area. This threshold number must be specified in advance. Watershed is delineated as the set of all cells draining through a given cell.

GRASS program `r.watershed` is the main tool for delineation of basin and sub-basin boundaries and calculating the LS (slope length and steepness) and S (slope steepness) factors of the Revised Universal Soil Loss Equation (RUSLE) in GRASS.

There are two versions of this program available in GRASS: `ram` and `seg`. Which of them is run depends on whether the `-m` flag is set or not. The `ram` version uses virtual memory managed by the operating system to store data and is much faster than the `seg` version. The `seg` version (with the `-m` flag) uses the memory on disk which allows larger maps to be processed but is considerably slower.

The `seg` version uses the AT least-cost search algorithm (Ehlschlaeger, [n.d.](#)) to determine the flow of water over the landscape and is more reliable than `ram`. In addition to the elevation map, maps of depressions in the landscape and blocking terrain can be provided to assure more reliable watershed boundaries.

Due to memory requirements of both `seg` and `ram` versions of the program, it is quite easy to run out of memory. If the resolution of the current region cannot be increased, more memory needs to be added to the computer. GRASS Reference Manual provides recommendations on how to use the coarser resolution. Masking out unimportant areas is another means to reduce processing time significantly if the watershed of interest occupies only a part of the overall area. According to our experience, the `seg` version of the program is much more reliable. Our recommendation is to use only this version for watershed delineation (using the `-m` flag).

After the watersheds are delineated for a certain region, an analysis of output maps has to be done in order to identify the basin under study and its sub-basins. For this purpose the basin, accumulation, and streams output maps are needed, as well as any available digitised maps of the basin boundaries or river network. Comparison of digitised and calculated rivers, digitised and calculated watershed boundaries can be very helpful in order to find

some mistakes or inconsistencies in the DEM. An example of resulted sub-basin map with the river network is given in Figure 4.3.

After correction of the DEM the procedure `r.watershed` can be repeated. It is also quite difficult to find an appropriate threshold value from the very beginning. Usually, it is necessary to repeat the procedure several times with different thresholds. The user has to remember that LS and S factors are multiplied by 100 for the GRASS output map layer, since they are usually small numbers.

4.1.8 DEMO Data Set

Here the DEMO data set for spatial data preparation is described. The maps for the Glonn basin in Bavaria (drainage area 392 km²) were used for that.

Input data in ASCII format The exemplary export files in ASCII format produced in ARC/INFO are located in the directory `/grassdata`. They are: the Digital Elevation Model map in the file

`glonn160-dem.asc`,

and the soil map in the file

`glonn160-soil.asc`.

The program `arc2grass` can be used for converting the ARC/INFO export files to GRASS format. The resulting ASCII files for these two and other maps, which are ready for GRASS import, are located in the same directory

- `glonn160-dem.txt` - DEM map,
- `glonn160-lus.txt` - land use map,
- `glonn160-soil.txt` - soil map,
- `glonn160-fluss.txt` - a river map,
- `glonn160-rivnet.txt` - a more detailed river map,
- `glonn160-pegel.txt` - gage station map,
- `glonn160-clst.txt` - climate stations map,
- `glonn160-prst.txt` - precipitation stations map,
- `glonn160-clst-this.txt` - a map with Thiessen polygons for climate stations,
- `glonn160-prst-this.txt` - a map with Thiessen polygons for precipitation stations.

Geographic location Let us assume that the geographic location with the name `glonn160` is created by the user `usern` in the directory `/usern/databases`. Here 160 indicates the resolution of maps in this location (which was chosen in accordance with the resolution of available DEM map). The directory `/usern/databases` contains at least two subdirectories: `/PERMANENT` and `/usern`. The directory `/PERMANENT` describes the

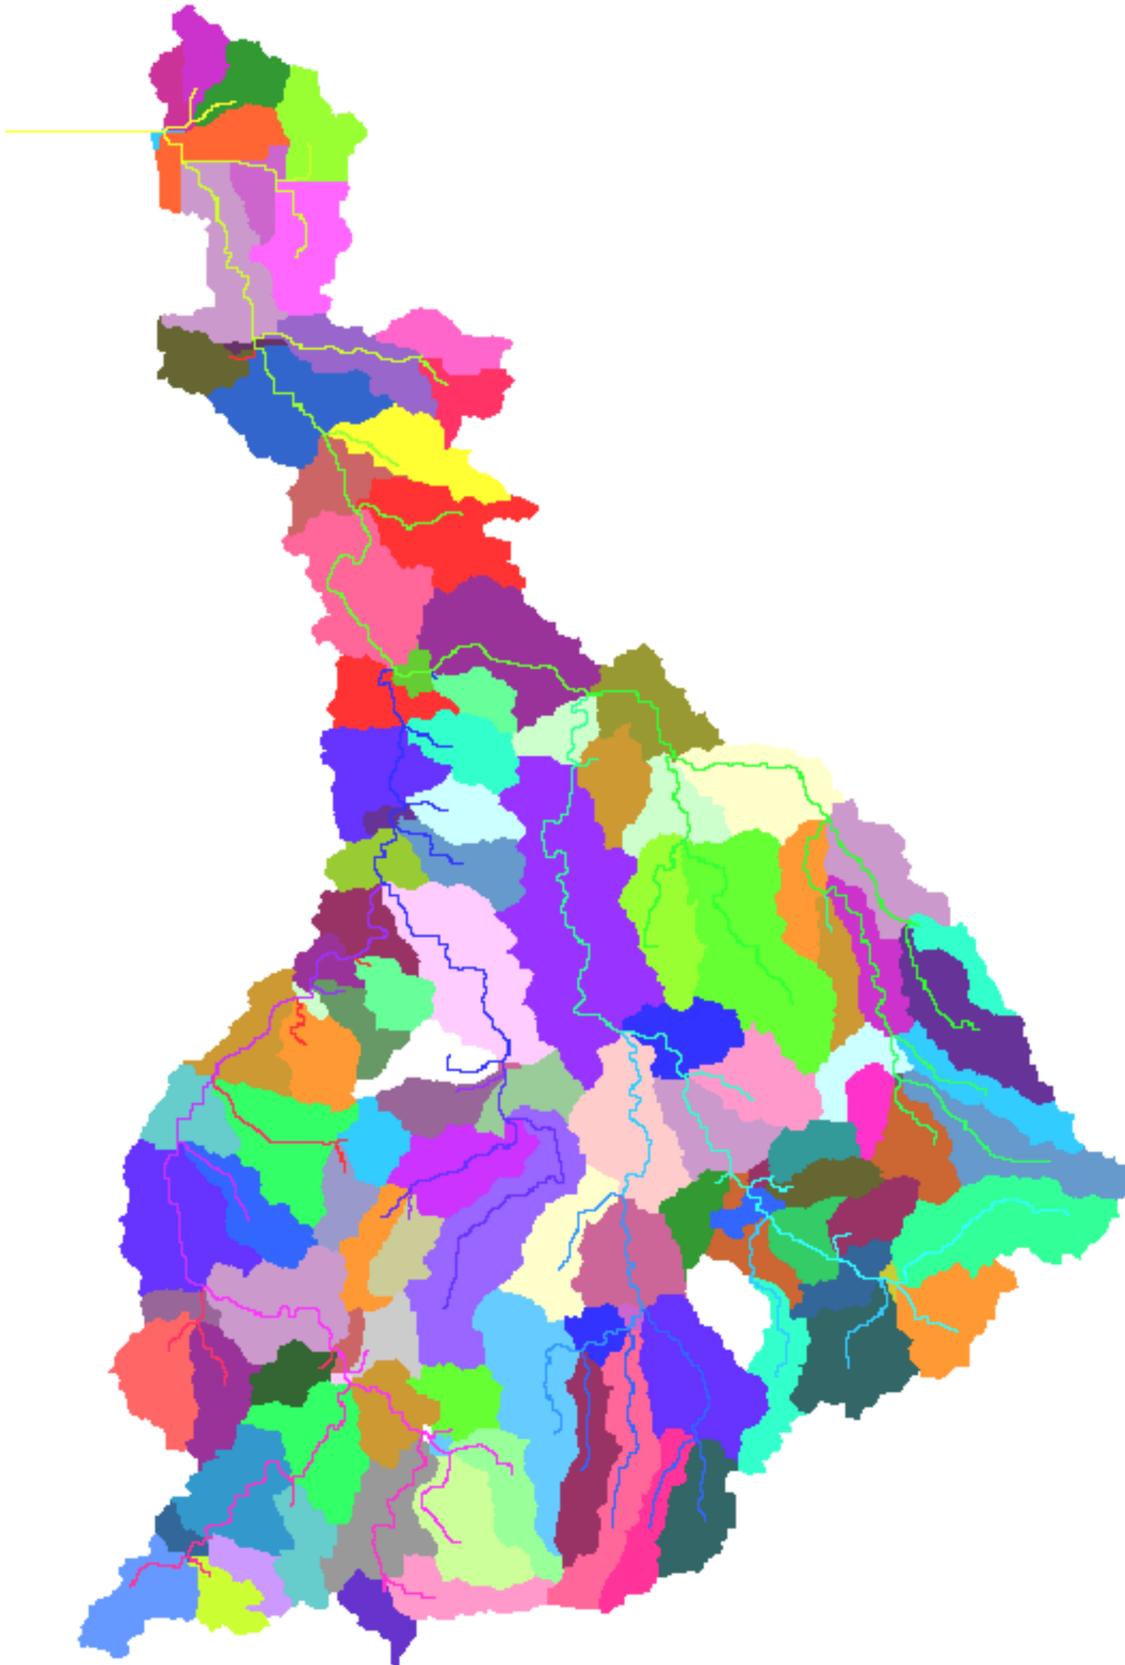


Figure 4.3: Virtual subbasins obtained by applying `r.watershed` function in GRASS for the Mulde river basin

name (file *MYNAME*) and coordinates (file *WIND*) of the geographic location. In our case the file *WIND* looks as following:

proj:	0
zone:	0
north:	6098669
south:	6064429
east:	123951
west:	73871
cols:	313
rows:	214
e-w resol:	160
n-s resol:	160

The directory */usern/databases/glonn160/usern* is designated for all GRASS files in this geographic location, which will be stored under subdirectories: *cats*, *catts_dig*, *cell*, *cell_misc*, *cellhd*, *colr*, *dig*, *dig_ascii*, *dig_att*, *dig_cats*, *hist*. Here the user name *usern* corresponds to the name of MAPSET, which is asked always when starting GRASS session. All files from this directory can be copied by any other user and used independently.

Map input to GRASS As a first step, a number of maps can be created by introducing data in ASCII format to GRASS using *r.in.ascii* command. For example, the following maps listed in Section 4.1.8 can be introduced from available ASCII data:

Table 4.2: List of source ASCII files and the corresponding maps in GRASS

<i>GRASS map</i>	<i>Map description</i>	<i>The corresponding source ASCII file</i>
dem	DEM	glonn160-dem.txt
lus	Land use	glonn160-lus.txt
soil	Soil	glonn160-soil.txt
fluss	River network	glonn160-fluss.txt
flussnet	Detailed river network	glonn160-rivnet.txt
pegel	Gage station	glonn160-pegel.txt
clst	Climate stations	glonn160-clst.txt
prst	Precipitation stations	glonn160-prst.txt

Continued on next page

Table 4.2 – *Continued from previous page*

<i>GRASS map</i>	<i>Map description</i>	<i>The corresponding source ASCII file</i>
clstthis	Thiessen polygons for climate stations	glonn160-clst-this.txt
prstthis	Thiessen polygons for precipitation stations	glonn160-prst-this.txt

Program `r.watershed` After that the program `r.watershed` can be applied to the Digital Elevation Model `dem` in order to create sub-basin maps. Let us assume that we applied this program six times (always with a flag `-m`) with different thresholds. The threshold is defined as a minimum size of the exterior watershed basin. As a result, a number of sub-basin maps (`basN`) and stream network maps (`rivN`) will be created as listed in Section 4.1.8:

Table 4.3: Maps created with `r.watershed` using different thresholds

<i>Threshold (number of cells)</i>	<i>Corresponding area, km²</i>	<i>Created maps</i>
3600	92.16	bas1, riv1
1800	46.08	bas2, riv2
900	23.04	bas3, riv3
200	5.12	bas4, riv4
100	2.56	bas5, riv5
50	1.26	bas6, riv6

We can compare the average, minimum and maximum sub-basin area for three different sub-basin maps `bas3`, `bas4`, and `bas6`, created with different thresholds (see Figure 4.4 and Section 4.1.8).

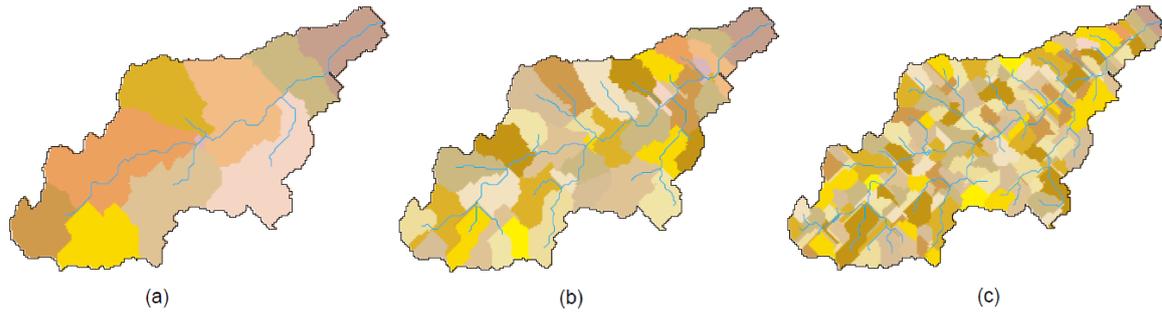


Figure 4.4: A set of sub-basin and river network maps produced with `r.watershed` using different thresholds: 900 (a), 200 (b) and 50 (c)

Table 4.4: Comparison of three sub-basin maps created with different thresholds

<i>Raster map name)</i>	<i>Number of sub-basins</i>	<i>Average sub-basin area, km²</i>	<i>Minimum sub-basin area, km²</i>	<i>Maximum sub-basin area, km²</i>
bas3	10	40.6	1.02	72.2
bas4	42	9.7	0.36	19.1
bas6	162	2.5	0.05	11.2

As we can see, 10 sub-basins with an average area of 40.6 km² were created with threshold 900 cells, or 23.04 km², 42 sub-basins with an average area of 9.7 km² were created with threshold 200 cells, or 5.12 km², and 162 sub-basins with an average area of 2.5 km² were created with threshold 50 cells, or 1.26 km². In other words, the threshold corresponds approximately to $\frac{1}{2}$ of the average area of created sub-basins. This has to be taken into account when estimating the threshold values. Finally, the three sub-basin maps: bas36, bas44 and bas64 were chosen for model application.

Reclassification and analysis The original land use map `lus` has to be reclassified to SWIM land use categories. The latter one, as well as the `dem` and `soil` maps have to be clipped using a mask (e.g. corresponding to the `bas3` map), to get the final maps `dem3`, `lus3`, `soil3`, which can be used by Interface. Finally, the four maps (e.g. `dem3`, `lus3`, `soil3` and `bas3`) are ready for SWIM/GRASS interface.

The programs `r.stats` and `r.report` (see **Appendix I**) are useful for the analysis of obtained maps. For example, using the function `r.report` as


```
r.report -z map=soil3 units=k,p output=gl160-soil.rep
```

we can get the following report about the soil map soil, indicating areal distribution of soil categories (in km² and in percent). For example, Tab. 4.5 includes GRASS report about the soil map soil3, indicating areal distribution of soil types.


Figure 4.5 demonstrates an overlay of sub-basins (bas3), precipitation stations (prst2), and Thiessen polygons for precipitation stations. The report about two of these maps:

```
r.report -z map=bas3,prstthis units=k,p output=glonn-bas36-prstthis.rep
```

is given in Figure 4.7. Such a report can be very helpful in establishing the connection between sub-basins and precipitation stations (weighting coefficients).

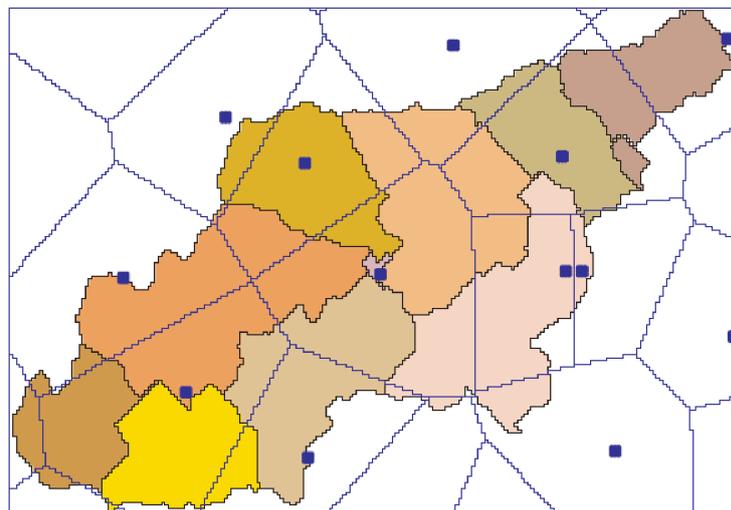

(a)

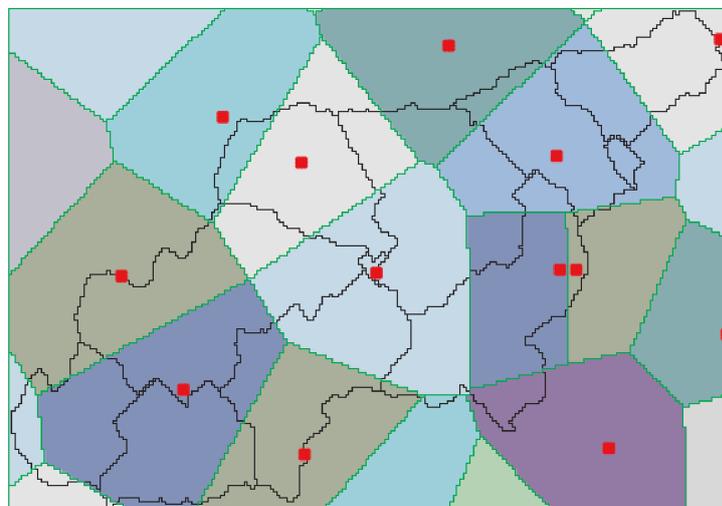

(b)

Figure 4.5: An overlay of the sub-basin map, the precipitation station map and the Thiessen polygon map for the Clonn basin (a, b)

```

+-----+
|                                     RASTER MAP CATEGORY REPORT                                     |
| LOCATION: glonn160                                                         Tue Apr 20 12:09:32 1999 |
+-----+
|           north: 6092269   east: 113711                                     |
| REGION    south: 6067469   west:  78351                                     |
|           res:      160    res:      160                                     |
+-----+
|                                     Category Information                                     |
| #|description                                     | square | % |
|                                     |kilometers| cover|
+-----+
| 33| . . . . . | 49.433600| 12.24|
| 34| . . . . . |  6.809600|  1.69|
| 36| . . . . . |  6.604800|  1.64|
| 39| . . . . . | 31.308800|  7.75|
| 47| . . . . . |  4.940800|  1.22|
| 49| . . . . . | 11.468800|  2.84|
| 56| . . . . . |  1.536000|  0.38|
| 77| . . . . . |  0.307200|  0.08|
| 81| . . . . . |  2.355200|  0.58|
| 82| . . . . . | 11.878400|  2.94|
|105| . . . . . |  1.382400|  0.34|
|115| . . . . . |  4.377600|  1.08|
|116| . . . . . | 47.462400| 11.75|
|117| . . . . . | 27.750400|  6.87|
|124| . . . . . |  0.358400|  0.09|
|133| . . . . . | 87.782400| 21.73|
|134| . . . . . | 23.680000|  5.86|
|135| . . . . . |  2.611200|  0.65|
|159| . . . . . | 14.054400|  3.48|
|161| . . . . . |  3.430400|  0.85|
|167| . . . . . | 43.264000| 10.71|
|168| . . . . . | 11.648000|  2.88|
|207| . . . . . |  6.707200|  1.66|
|209| . . . . . |  0.128000|  0.03|
|210| . . . . . |  2.662400|  0.66|
+-----+
| TOTAL                                     |403.942400|100.00|
+-----+

```

Figure 4.6: GRASS report about the soil map soil3, indicating areal distribution of soil types

4.2 SWIM/GRASS Interface

Throughout SWIM/GRASS, two primary types of interface input are used:

1. Text input that can be completed by hitting the RETURN key. In most cases, if no text was entered, the given question or operation is cancelled. Most often the text input will consist of the name of a new or existing map or project name, in which case entering the word "list" will provide a list of currently used names.
2. Text or menu options that can be completed by hitting the ESC (escape) key. This type of interface is used for menus or for entering tables of parameters. All menus have a default answer of Exit (0), so that by simply hitting ESC one may leave the program's menus.

The following Table 4.5 provides a keystroke guide, which is helpful when using the parameter entry worksheets that use this interface:

Starting GRASS and SWIM_INPUT Before running SWIM/GRASS interface, GRASS has to be started. For that, the user has to start GRASS:

```
grass4.2.1
```

The following information window will appear:

The Location and Database names are the last entered. If you need another ones, please change the names. After entering GRASS, the user can open the monitor with the command `d.mon`. After that SWIM/GRASS interface can be started:

```
cd usern/swiminput swim_input
```

The following window will appear:

Table 4.5: Keystroke guide for using the interface

<i>key</i>	<i>the function</i>
<RETURN>	moves the cursor to next prompt field
<CTRL-K>	moves the cursor to previous prompt field
<CTRL-H>	moves the cursor backward non-destructively within the field
<CTRL-L>	moves the cursor forward non-destructively within the field
<CTRL-A>	copies the screen to a file named "visual_ask" in the users home directory
<CTRL-C>	where indicated (on the bottom line of the screen) can be used to cancel operation

```

GRASS 4.2.1

LOCATION: This is the name of an available geographic location.
         spearfish is the sample data base for which all tutorials
         are written.

MAPSET:  Every GRASS session runs under the name of a MAPSET.
         Associated with each MAPSET is a rectangular COORDINATE
         REGION and a list of any new maps created.

DATABASE: This is the unix directory containing the geographic
          databases

          The REGION defaults to the entire area of the chosen
          LOCATION. You may change it later with the command: g.region
          -----

LOCATION:  glonn160_____ (enter list for a list of locations)
MAPSET:  usern_____ (or mapsets within a location)

DATABASE: usern/databases_____

          AFTER COMPLETING ALL ANSWERS, HIT <ESC> TO CONTINUE
          (OR <Ctrl-C> TO CANCEL)

```

Figure 4.8: GRASS Starting Window

Options of the main menu The user can use option 1 to create a new project, or option 2 to continue working on an existing project. If you want to create a new project, choose the option 1. After that you have to enter the project name. The name should correspond to the basin name, but it has to be not too long (maximum 8 letters), for example, we choose ,gl⁴:

```

SWIM / GRASS Project Manager

This program is designed to help you use information in
GRASS raster layers to create an input file to run on a
standard version of the SWIM basin simulation program.
All steps of this process are recorded in data files
stored under a project name in your GRASS database.

          Choose desired option:

          0. Exit
          1. Create new project
          2. Work on an existing project
          3. Copy an existing project
          4. Remove an existing project

Option: 0_

          AFTER COMPLETING ALL ANSWERS, HIT <ESC> TO CONTINUE
          (OR <Ctrl-C> TO EXIT)

```

Figure 4.9: GRASS Project Manager

Enter project name:

Enter 'list' for a list of existing SWIM / GRASS project files Hit RETURN to cancel request > gl

Then the following Data Extraction Menu will appear:

Data Extraction Steps 3 to 7 have to be run one after another, after that option 0 has to be chosen. Steps 8 and 9 are not up to date, they have to be modified.

When the option 3 is chosen to extract basin attributes, the name of the basin and sub-basin map is asked. Assuming that we use the maps described in the previous section, the name 'bas36' has to be entered:

Basin and Subbasin Map

Enter 'list' for a list of existing raster files

Enter 'list -f' for a list with titles

Hit RETURN to cancel request

> bas36

When the option 4 is chosen to extract the hydrotope structure, the names of three maps: 1) basin and sub-basin, 2) land use and 3) soil are asked:

Basin and Subbasin Map

Enter 'list' for a list of existing raster files

Enter 'list -f' for a list with titles

Hit RETURN to cancel request

> bas36

<bas36>

```

SWIM / GRASS Project Data Extraction Menu
Project Name: gl

          Choose desired option:
0      Quit
1      Extract data from layers
2      Display Raster, Vector and/or Site Maps
run    3      Extract Basin Attributes
run    4      Extract Hydrotop Structure
run    5      Extract Topographic Attributes
run    6      Extract Groundwater Attributes
run    7      Compute Routing Structure and Create .fig file
run    8      Extract Climate Station
run    9      Extract Precipitation Station

Option: 0__
          AFTER COMPLETING ALL ANSWERS, HIT <ESC> TO CONTINUE
          (OR <Ctrl-C> TO EXIT)

```

Figure 4.10: GRASS Data Extraction Menu

Landuse Map

```
Enter 'list' for a list of existing raster files
Enter 'list -f' for a list with titles
Hit RETURN to cancel request
> lus36
<lus36>
```

Soil Map

```
Enter 'list' for a list of existing raster files
Enter 'list -f' for a list with titles
Hit RETURN to cancel request
> soil36
```

When the option 5 is chosen to extract topographic attributes, the name of the elevation map has to be entered:

Elevation Map

```
Enter 'list' for a list of existing raster files
Enter 'list -f' for a list with titles
Hit RETURN to cancel request
> dem36
```

When the option 6 is chosen to extract groundwater attributes, the name of the groundwater alpha map is asked. If the user does not have such a map, an option ,n' has to be chosen:

```
Do you have groundwater alpha parameter map?(y/n) [y]
n
```

The next step is to choose 7 in order to compute routing structure of the basin. If the routing structure is calculated without problems, the user gets a message about the outlet sub-basin, like:

```
outlet subbasin number is 1
```

Please note that the outlet sub-basin has to be numbered with 1, otherwise the user has to recode the output. After that the user has to choose ,0' to quit the SWIM/GRASS interface. The results will be stored in the directory:

```
in usern/databases/glonn160/usern/swim/gl,
```

which corresponds to the DATABASE/LOCATION/MAPSET/swim/projectname. In our case the full list of resulting files is the following:

,where the number n corresponds to the sub-basin number n+1.

Possible problem In some cases, option 7 runs not so smoothly, and the message like

```

file.cio  gl.str gl.fig gl.proj str.cio  gl.cod gl.bsn
gl0.sub  gl0.gw gl0.rte
gl1.sub  gl1.gw gl1.rte  gl2.sub  gl2.gw  gl2.rte
gl3.sub  gl3.gw gl3.rte  gl4.sub  gl4.gw  gl4.rte
gl5.sub  gl5.gw gl5.rte  gl6.sub  gl6.gw  gl6.rte
gl7.sub  gl7.gw gl7.rte  gl8.sub  gl8.gw  gl8.rte
gl9.sub  gl9.gw gl9.rte

```

Figure 4.11: GRASS full list of resulting files

```

Start checking the aspect through each subbasin
More than one outlet from subbasins 1 and 40
More than one outlet found from subbasins 40 1
Do you agree with this?(y/n) [y]

```

can appear. If the user chooses ,y‘, the routing structure file will be created, but without sub-basin 40. In such a situation ,n‘ has to be chosen in order to edit aspect. After choosing ,n‘, the program asks:

```

Would you like to continue?(y/n) [y]

```

When the user answers: ,y‘, the following Sub-basin Aspect Editing menu will appear:

Please choose the option 3, and point on two sub-basins sequentially. For example, if you know that stream in sub-basin 40 flows to sub-basin 38, then point two sub-basins: first sub-basin 40, then sub-basin 38. After that click on non-basin area to finish.

Working on existing project If the user wants to continue working on an existing project, he/she can start from that point, where the project was stopped the former time.

```

Subbasin Aspect Editing/Error Checking Menu
Project Name:  gl

                Choose desired option:
0  Return to Previous Menu
1  Check for Errors in Subbasin Aspect
2  Edit Subbasin Aspect Using Key board
3  Edit Subbasin Aspect Using Graphic Monitor
4  Display Subbasin Number on the Graphic Monitor

```

Figure 4.12: Subbasin Aspect Editing/Error Checking Menu

4.3 Relational Data Preparation

4.3.1 An Overview of Relational Data

The full list of necessary relational data is the following:

1. Climate data: average, minimum and maximum daily air temperature, daily precipitation, and daily solar radiation,
2. soil geophysical and geochemical parameters,
3. crop types, crop rotation and crop management,
4. river discharge at the basin outlet,
5. water quality parameters (N, P, suspended solids) at the basin outlet,
6. river cross-sections or mean river width and depth,
7. rainfall intensity parameters.

The climate and soil data (1-4) are absolutely necessary to run the model.

Information about crop types in the basin, crop rotation and crop management (dates of planting and harvesting, dates and rates of fertilization) (5) is needed to initialise the model. If detailed information about crop management is not available for the studied basin, at least expert knowledge should be used in this case.

Measured river discharge and water quality parameters (6-7) are necessary for model validation.

River cross-sections (8) or mean river width and depth in several points of a basin (approximately one per sub-basin) can facilitate the model verification, especially for lateral processes (water and chemicals routing). The other way is to use the default stream width and depth parameters extracted from DEM by SWIM/GRASS interface.

Rainfall intensity parameters (9), which include

- ten years frequency of I30 - the maximum annual half-an-hour rainfall,
- ten years frequency of I360 - the maximum annual six-hours rainfall, and
- long-term monthly maximum of the half-an-hour rainfall,

are necessary for erosion modelling.

In the following sections specific data requirements for climate, soil, crops, curve numbers are considered with some more detail.

4.3.2 Climate Data

The climate parameters necessary to drive the model are daily precipitation, air temperature (maximum, average, and minimum), and solar radiation. Usually, the climate data must be taken from meteorological and precipitation stations. This is absolutely necessary in the case of model validation for a specific basin. Note that the climate data have to be corrected, no missing values in form of -999 are allowed.

Usually, climate input is considered to be homogeneous at the level of sub-basins. The precipitation data has to be provided for as many stations as possible (approximately 1 station per 100 km² area), while this is less important for the air temperature and solar radiation parameters.

According to our experience, the best is to use data from all available climate stations (parameters 1-3), located inside and close to the basin, in a combination with precipitation data from all available precipitation stations, also located inside the basin and close to it.

The following Section 4.3.2, Section 4.3.2 and Section 4.3.2 demonstrate the format of temperature, precipitation, and radiation data for SWIM. The other possibility is to put all climate data in one file, if the number of stations is not too large.

Table 4.6: Format of temperature data

YYYY	MON	DAY	4116tmx	4116tav	4116tmn
1981	1	1	3.5	0.4	-1.7
1981	1	2	1.0	0.5	-1.3
1981	1	3	5.8	3.9	0.7
1981	1	4	4.0	1.4	0.4
1981	1	5	0.5	-1.6	-3.5
1981	1	6	-1.3	-3.0	-3.6
1981	1	7	-3.4	-6.8	-10.5
1981	1	8	-5.8	-15.5	-21.4
1981	1	9	-4.8	-7.8	-21.8
1981	1	10	-0.2	-2.8	-6.6
1981	1	11	-1.2	-2.6	-4.3
1981	1	12	-2.0	-3.9	-4.6
....

Table 4.7: Format of precipitation data

YYYY	MON	DAY	90625	90661	92141	92160	92161	92162
1981	1	1	12.2	12.4	7.6	10.4	7.6	8.5
1981	1	2	7.7	8	4.2	8.5	4.2	9.1
1981	1	3	7.8	4.5	8.3	5.4	8.3	6.2
1981	1	4	8.8	6.6	6.8	7.1	6.8	8.8
1981	1	5	9	6	6.2	7.8	6.2	5.6
1981	1	6	3.2	3.3	2.4	3.4	2.4	3
1981	1	7	1.7	2.1	1.4	1.4	1.4	1.5
1981	1	8	0.6	0	0.3	0.4	0.3	0.3
1981	1	9	0	1.4	0.4	0	0.4	0.9
1981	1	10	1.2	1.4	0.4	0.2	0.4	0.9
1981	1	11	0	0	0	0	0	0
1981	1	12	0	0	0	0	0	0
....

Table 4.8: Format of radiation data

YYYY	MON	DAY	4117rad
1981	1	1	171.0
1981	1	2	173.0
1981	1	3	186.6
1981	1	4	178.0
1981	1	5	173.0
1981	1	6	174.0
1981	1	7	241.0
1981	1	8	485.8
1981	1	9	170.0
1981	1	10	183.0
1981	1	11	171.0

Continued on next page

Table 4.8 – *Continued from previous page*

1981	1	1	479.0
....

Climate input in the model is not fully automatised at the moment. Therefore, the subroutine `cliread()` has to be recompiled for new applications to take into account specific climate input: number of climate and precipitation stations, and their ‘attachment’ to sub-basins with specific weighting coefficients. Later, this routine has to be rearranged to allow fully automatised climate data input.

The other way is to use weather generator instead of actual climate parameters. The weather generator is attached to the model and can be initialised using monthly statistical data for the station(s) (see, e.g., Section 4.3.2):

- average monthly maximum temperature (e.g., line 3 in Section 4.3.2),
- average monthly minimum temperature (line 4),
- coefficient of variation for monthly temperature (line 5),
- average monthly solar radiation (line 6),
- monthly maximum 0.5 hour rain for period of record (line 7),
- monthly probability of wet day after dry (line 8),
- monthly probability of wet day after wet (line 9),
- monthly days with precipitation in a month (line 10) (can be used instead of monthly probabilities),
- monthly mean event rainfall (line 11),
- monthly standard deviation of rainfall (line 12),
- monthly skew coefficient of daily rainfall (line 13).

Table 4.9: Format of monthly statistics for climate stations

SYTHETIC WEATHER DATA FOR ST41017	TITLE
45.000 66.000 54.000 51.000	I30, I360, Nyr, Lat

Continued on next page

Table 4.9 – *Continued from previous page*

1.80	3.00	8.10	13.40	19.10	22.10	23.70	23.00	19.30	13.30	6.70	2.90	Av Mo Max Temp
-3.30	-2.90	-0.20	3.40	7.90	11.20	13.20	12.70	9.60	5.50	1.30	-1.70	Av Mo Min Temp
0.18	0.14	0.11	0.10	0.09	0.08	0.07	0.07	0.08	0.10	0.13	0.15	Co Var Mo Temp
56.	104.	213.	267.	512.	471.	417.	351.	282.	152.	74.	42.	Av Mo Sol Rad
7.	7.	9.	9.	10.	10.	10.	10.	9.	9.	7.	7.	Mo Max .5h rain
0.37	0.34	0.35	0.33	0.32	0.29	0.35	0.41	0.51	0.55	0.56	0.38	Mo Prob W aft D
0.69	0.67	0.69	0.64	0.64	0.61	0.65	0.70	0.72	0.78	0.79	0.45	Mo Prob W aft W
0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	Mo days of prec
2.7	2.6	2.7	3.2	4.2	5.0	4.9	5.0	3.7	3.2	3.0	3.0	Mo mean ev rain
3.3	3.05	2.54	2.79	2.54	3.30	5.08	5.84	4.57	4.57	3.81	3.05	Mo st dev rain
2.86	4.07	3.49	2.19	1.70	2.02	2.51	1.84	2.00	2.90	2.14	2.04	Mo skew of rain

4.3.3 Soil Data

In addition, data for soils have to be provided. The soil data should include the following parameters for each of a maximum of ten soil layers:

- depth of the layer (mm),
- clay, silt and sand content (%),
- bulk density (g/cm³),
- porosity (Vol. %),
- available water capacity (Vol. %),
- field capacity (Vol. %),
- organic carbon content (%),
- organic N content (%),
- saturated conductivity (mm/hr).

According to the model requirements, the depth of the first soil layer should be always 10 mm. The format of soil parameters presentation in the soil database is shown in Section 4.3.3. Format inside lines is free, the right column with parameter names is not needed. The read and recalculation of soil parameters is fully automatised.

Table 4.10: Format of soil parameters for SWIM

26	5	SoilNum, Layers			
Fahlerde aus sandigen Deckschichten über Geschiebelehm					SoilName
Ap	Ap	Ael	Bt	Cc	Horizon
Sl3	Sl3	Sl2	Ls4	Sl4	Type
10.	240.	400.	800.	1300.	Depth, mm
10.	10.	5.	20.	15.	Clay, %
7.	7.	5.	12.	15.	Silt, %
83.	83.	90.	68.	70.	Sand, %
1.30	1.30	1.45	1.75	1.60	Bulk density,g/cm ³
51.	51.	43.	40.	42.	Porosity, Vol. %
23.	23.	18.	16.	16.	AWC, Vol. %
32.	32.	24.	31.	28.	FC, Vol. %
0.6	0.6	0.	0.	0.	C, %
0.07	0.07	0.	0.	0.	N, %
0.25	Erodibility factor				
83.4	83.4	29.2	4.2	29.2	SC, mm/h

Saturated conductivity can be either read from the file (like Section 4.3.3), or, In case if it is not available (zeros in the soil parameter files), it can be estimated in the model using the method of Rawls and Brakensiek (n.d.) as dependent on soil texture and porosity:

$$\begin{aligned}
 SC &= 24. * exp(x_1 + x_2 + x_3 + x_4), \\
 x_1 &= 19.52348 * PV - 8.96847 - 0.028212 * CL \\
 x_2 &= 0.00018107 * SN^2 - 0.0094125 * CL^2 * PV + 0.001434 * \\
 &SN^2 * pv + 0.077718 * SN + PV \\
 x_3 &= 0.0000173 * SN^2 * CL + 0.02733 * CL^2 * PV + 0.001434 * \\
 &SN^2 * PV - 0.0000035 * CL^2 * SN \\
 x_4 &= -0.00298 * SN^2 * PV^2 - 0.019492 * CL^2 * PV^2
 \end{aligned} \tag{4.1}$$

where PV is porosity in m^3/m^3 , CL – clay content in %, and SN – sand content in %. In principle, also the methods of Cosby et al. (n.d.)

$$SC = 60.96 * 10^a \tag{4.2}$$

$$a = -0.6 + 0.0126 * SN - 0.0064 * CL$$

and Vereecken et al. (n.d.)

$$SC = exp \left[20.62 - 0.96 * ln(CL) - 0.66 * ln(SN) - 0.46 * ln(OM) - 8.43 * BD \right] \tag{4.3}$$

where OM – organic matter content, and BD – bulk density in g/cm^3 , can be used.

The results produced by three methods may be quite different. The comparison of estimates of saturated conductivity by three methods is given in Figure 4.13. As we can see, usually they produce quite different values of saturated conductivity.

For German soils (BÜK 1000), the estimation of saturated conductivity SC in mm/h can be done using the following Section 4.3.3 or Section 4.3.3.

Table 4.11: Estimation of saturated conductivity based on soil texture class and bulk density

Bulk density	Tex-	1.3	1.4	1.5- 1.6	1.7- 1.75	1.8- 1.9	2.0- 2.1	2.3- 2.4
mS		200	125	125	83.4	83.4	42	
fS		83.4	42	29	16.7	10	4.2	
Su,Slu		29	16.7	10.4	4.2	2.3	0.4	
Sl2		83.4	42	29.2	16.7	10.4	4.2	
Sl3,Sl4,St2		83.4	42	29.2	16.7	10.4	2.3	
St3		29.2	16.7	10.4	4.2	2.3	0.4	
U,Us,Uls,Ul2, Ul3,Ut2,Ut3		29.2	16.7	10.4	4.2	2.3	0.2	
Ul4,Ut4		42	16.7	10.4	4.2	2.3	0.2	
Ls2,Ls3,Ls4		83.4	41.7	16.7	4.2	2.3	0.2	
Lu		29.2	16.7	10.4	4.2	2.3	0.2	

Continued on next page

Table 4.11 – *Continued from previous page*

Bulk density texture class	Tex- 1.3	1.4	1.5- 1.6	1.7- 1.75	1.8- 1.9	2.0- 2.1	2.3- 2.4
Ltu	83.4	42	16.7	4.2	2.3	0.2	
Lts,Lt2,Lt3	42	16.7	10.4	4.2	2.3	0.2	
Tu3,Tu4,T1,Tu2,T	42	16.7	10.4	4.2	2.3	0.2	0.1
Hh	83.4	16.7	10.4	4.2	2.3	0.2	
Hn	125	42	29.2	16.7	10.4	4.2	

Table 4.12: Estimation of saturated conductivity based on soil texture class and bulk density (based on Bodenkundliche Kartieranleitung, 4.)

Soil texture class	Bulk density <1.6 SC [mm/h]	Bulk density = 1.6- 1.8 SC [mm/h]	Bulk density >1.8 SC [mm/h]
Ss	145.4	95.4	52.5
Sl2	45.4	20.4	15
Sl3	19.6	13.8	6.3
Sl4	17.9	8.8	5
Slu	17.1	4.6	3.3
St2	37.9	32.9	15.4
St3	11.6	7.1	2.9
Su2	65.4	36.7	15
Su3	31.3	13.3	7.1
Su4	17.1	10	8.3
Ls2	17.1	8.3	5.4
Ls3	5.4	2.9	2.5
Ls4	8.3	5.8	2.5
Lt2	5.4	3.8	1.7

Continued on next page

Table 4.12 – *Continued from previous page*

Soil texture class	Bulk density <1.6 SC [mm/h]	Bulk density = 1.6- 1.8 SC [mm/h]	Bulk density >1.8 SC [mm/h]
Lt3	4.2	4.2	2.9
Lts	5	2.5	1.3
Lu	10.8	7.5	2.5
Uu	6.7	2.9	1.2
Uls	14.6	5.8	2.1
Us	9.2	4.2	1.6
Ut2	12.5	2.9	1.7
Ut3	15.8	3.3	1.3
Ut4	12.9	3.8	1.7
Tt	2.9	0.8	0.4
Tl	4.2	1.3	0.4
Tu2	8.3	2.1	0.4
Tu3	11.3	5.4	2.5
Tu4	14.2	11.7	3.3
gSfs	153.8	54.2	20.8
mS	272.1	177.9	79.1
mSgs	242.1	117.1	29.1
mSfs	129.6	92.1	54.1
fS	71.7	44.2	16.6
fSms	101.7	70.4	25
Hhz1	83.3	10.4	2.1
Hhz2	83.3	10.4	2.1
Hhz3	10.4	2.1	0.2
Hhz4	2.1	0.2	0
Hhz5	2.1	0.2	0
nHv	83.7	10.8	2.5
nHm	83.7	10.8	2.5

Continued on next page

Table 4.12 – *Continued from previous page*

Soil texture class	Bulk density <1.6 SC [mm/h]	Bulk density = 1.6- 1.8 SC [mm/h]	Bulk density >1.8 SC [mm/h]
nHa	83.7	10.8	2.5
nHt	83.7	10.8	2.5
nHr	83.7	10.8	2.5

4.3.4 Crop Parameters and Crop Management Data

Crop parameters file **crop.dat** has to be included in the model input. It is a standard input file for SWIM. The full description of this data is given in Section 3.3.6.

Crop management data include description of agricultural activities:

- day of operation,
- operation code (planting, harvesting),
- crop number (from the available crop data base, which also include some aggregated categories),
- days of fertilisation,
- amount of N and P in kg applied per hectare.

Crop management input in the model is not fully automatized at the moment. Therefore, the subroutine `initcrop()` has to be recompiled for new applications to take into account crop rotation and crop management. Three options are available for crop rotation now:

- one crop in cropland,
- 10-11 years rotation scheme, including six crop types and set aside,
- three different rotation schemes for three soil groups (poor, intermediate and high quality soils) with a stochastic crop distributor, so that crop rotation is the same within the soil group, but it is not synchronized for different ‘fields’ (starting year is chosen stochastically for the ‘fields’).

Later, this routine has to be rearranged to allow fully automatized climate data input.

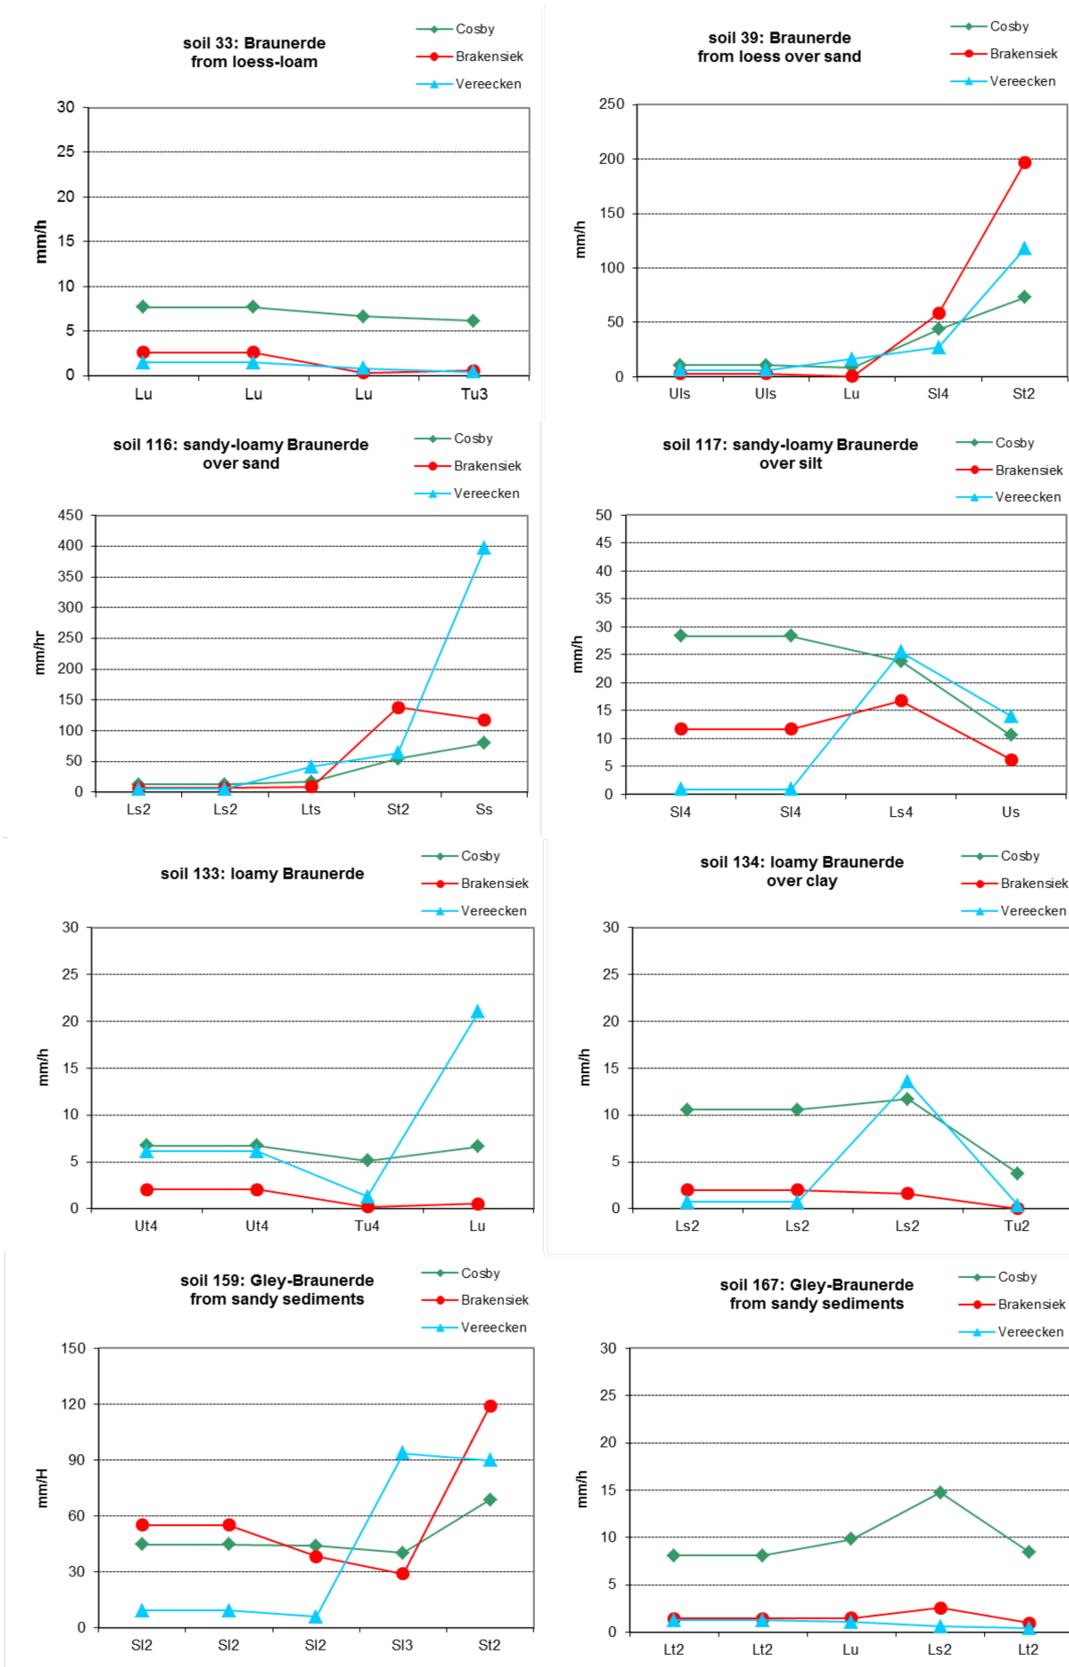


Figure 4.13: Fig. 4.6 Estimation of saturated conductivity using three different methods for dominant soils in the Glonn basin

4.3.5 Hydrological and water quality data

Additionally, river discharge and concentrations of nitrogen, phosphorus and suspended solids in the basin outlet are needed for model validation. River discharge has to be included in the model input (see format in Section 4.3.5), while the measured water quality data can be compared with the model output outside the model.

Table 4.13: Format of water discharge data for SWIM

YYYY	MON	DAY	Q,m3/s
1981	1	1	3.10
1981	1	2	3.45
1981	1	3	7.92
1981	1	4	13.80
1981	1	5	6.81
1981	1	6	5.39
1981	1	7	4.86
1981	1	8	4.53
1981	1	9	4.13
1981	1	10	4.09
1981	1	11	3.97
1981	1	12	4.06
....

4.3.6 DEMO data set

DEMO data set is located in `swim99/inpdata/clim` – climate input data, `swim99/inpdata/soil` – soil input data, `swim99/inpdata/crop` – crop input data, `swim99/inpdata/qwq` – hydrological and water quality input data.

4.4 Model Run

4.4.1 Collect all input data

All input files necessary for the model application were listed in Section 3.3 and described in Section 3.3.15. Their preparation is described in Section 4.1 – Section 4.3. Here a summary is given on how to collect all prepared data before running SWIM.

The working directory (later called ‘main working directory’) is usually named by the basin name, It must have the following subdirectories:

- /Code – for the model code
- /Sub – for subbasin parameter files
- /Soil – for soil data files,
- /Struc – for subbasin structure files,
- /Res – for general model results,
- /Flo – for specific results on water and nutrient flows,
- /GIS – for specific results in GRASS GIS format,
- /Clim – for climate and hydrological data files.

After that all prepared files have to be copied in appropriate subdirectories as described below.

Step1. Files created by SWIM/GRASS interface The four files created by SWIM/GRASS interface in the user GRASS directory DATABASE/LOCATION/MAPSET/swim/projectname
file.cio,
str.cio,
xxx.fig ,
xxx.str
have to be copied to the main working directory.

The subbasin files created by SWIM/GRASS interface in the user GRASS directory DATABASE/LOCATION/MAPSET/swim/projectname
xxxNN.sub – M files, where M is the number of subbasins,
xxxNN.gw – M files, where M is the number of subbasins,
xxxNN.rte – M files, where M is the number of subbasins
have to be copied in the directory **/Sub**.

Step 2. Climate and hydrological data Climate and hydrological data have to be copied to the main working directory: either one file
clim.dat,
which includes all climate and hydrological data (see Section 4.3.2 and Section 4.3.5), or four files

prec.dat,
temp.dat,
radi.dat,
runoff.dat,

which include separately precipitation, temperature, radiation, and runoff data, respectively. The directory /Clim may be used for original climate data sets and for climate data modification (e.g. to prepare two separate climate data sets for the calibration and validation periods).

In the case of large number of subbasins and direct correspondence ‘1 subbasin – 1 precipitation station’, the file

sub2prst.dat

may be prepared, which indicates the correspondence between subbasins and precipitation stations. If necessary, this file may contain weighting coefficients for precipitation stations. This file has to be placed in the main working directory.

Usually the climate read part is organised specifically for the basin under study by user (file cliread.f in the directory /Code), who can specify whether the data are read from one file clim.dat, or from several files, and how the correspondence between subbasins and precipitation/climate stations is established.

Step. 3 Soil data The user has either use available soil database BÜK-1000 supplied with the model or to prepare all soil data in the same format as described in Section 4.3.3. Soil data

soil04.dat,
soil05.dat, etc

Have to be copied in the directory /Soil. In addition, the file

soil.cio,

which includes a list of all soil data file names, has to be copied to the main working directory or prepared.

Step 4. Crop data The standard crop database contained in the file **crop.dat,**

which is supplied with the model, has to be copied to the main working directory.

Step 5. Files .cod and .bsn An example program codes file **xxx.cod,**

which includes program codes for printing, is supplied with the model. The user has to specify the desired period of simulation (parameters nbyr, iyr, idaf, idal), which has to be in correspondence with climate and hydrological data, and the number of subbasins (parameter lu). The print codes have to be established by user, if the hydrotope printout, subbasin printout, process printout, or special printout are necessary. This file has to be placed in the main working directory.

An example basin parameters file

xxx.bsn,

which includes a set of basin parameters and a set of calibration parameters, is supplied with the model. The user has to introduce the correct basin area (parameter da), which can be taken from .bsn file produced by SWIM/GRASS interface. This file has to be placed in the main working directory.

Step 6. File wstor.dat An example file

wstor.dat,

which includes initial water storages for the reaches is supplied with the model. Here all initial storages may be put to 0, then initial period (1-2 weeks) of simulation has to be ignored. The other option is to take water storage at the end of the first year from the test model run. This file has to be placed in the main working directory.

Step 7. File wgen.dat An example file with monthly statistical climate data

wgen.dat,

is used to run weather generator. Besides this file is needed to establish rain intensity parameters (tp5, tp6, tp24), latitude (parameter ylt), and average monthly maximum and minimum temperature (vectors obmx, obmn). It is assumed that these parameters are basin-specific. The vectors obmx, obmn can be calculated using an additional program wgenpar from the available climate data, taking as long time series of climate for the basin as possible. Then the calculated average monthly maximum and minimum temperatures have to be substituted into the example wgen.dat file. The file wgen.dat has to be placed in the main working directory.

4.4.2 Modification of the code to adjust for specific input data

When all input data are ready, the user has to copy the source code files

clicon.f	gwat.f	readcrp.f
cliread.f	hydrotop.f	readsol.f
common.f	init.f	readsub.f
compar.f	initcrop.f	readwet.f
crop.f	main.f	route.f
copyld.f	ncycle.f	routfun.f
curn.f	open.f	solt.f
eros.f	pcycle.f	stat.f
evap.f	perc.f	subbasin.f
flohyd.f	readbas.f	veget.f
genres.f	readcod.f	vegfun.f

and the Makefile from the supplied model package. Some files, which provide initialization of the model, may be corrected. The correction may be needed in

- climate data read part (files **open.f**, and **cliread.f**),
- crop initialization part (file **initcrop.f**),
- soil parameter read part (file **readsol.f**),
- global model parameter part (file **modpar.f**).

As soon as a certain flexibility is allowed regarding the climate data input, the corresponding changes may be necessary in files

open.f, and
cliread.f

Different options are possible: from the simplest variant, when all climate and hydrological data are put in one file **clim.dat**, to another variant, when precipitation, temperature, radiation, and water discharge are put in four different files

prec.dat,
temp.dat,
radi.dat,
runoff.dat.

Correspondingly, the assignment of precipitation stations to subbasins may be done differently. Examples are given in **cliread.f.variants** file located in **/Codevar** directory (supplied with the model).

Crop management is initialized in the file
initcrop.f.

Different options are possible in initialization of crop management:

- single crop on the total cropland area,
- different crop rotations and fertilization schemes,
- crop generator.

The first two options may be used by including desired version of **initcrop()** subroutine. Examples are given in **initcrop.f.rotNferN** and **initcrop.f.single** files located in **/Codevar** directory (supplied with the model). They can be used directly by opening the desired variant of **initcrop()** and closing the others. The user has to keep in mind that winter crops may start only from the second year of simulation (planting in autumn). That is why the single crop variants with winter crops include summer barley for the first year of simulation.

The third option (crop generator) is usually applied only for regional studies. It requires more changes in the code, and is supplied as a separate model version.

The user may either use the available soil database BÜK-1000, or another soil parameters. In principle, the format should be the same, then no changes are needed in the **readsol.f** file. In case if a new format is used, the corresponding changes have to be made in the file **readsol.f**

Two examples: **readsol.f.elbe** and **readsol.f.glonn** are given in the /Codevar directory for the Elbe and Glonn basins, respectively.

Besides, the user may changes global model parameters, like maximum number of sub-basins, mb, and maximum number of hydrotopes, meap, in the file

compar.f

This is necessary if the maximum number of subbasins/hydrotopes for the case study basin is larger than in the code, and it is also useful if the maximum number of subbasins/hydrotopes for the case study basin is significantly smaller than in the code (saves compilation time!).

4.4.3 Sensitivity of the simulated river discharge to model parameters

Sensitivity of the simulated river discharge to model parameters is one of the most important sensitivity studies with SWIM as an ecohydrological model. The results of sensitivity analysis are partly basin-specific, because they depend on the basin structure (land use, soil, tc.). The sensitivity study like one described in this chapter can be recommended for an unexperienced user in order to gain understanding of the model performance.

In this Section the results of sensitivity analysis made for the Stepenitz basin are presented. They are summarized in the following Table and Figures 4.7 – 4.25.

Method to define saturated conductivity sc	Reference: sc calculated (Brackensiek method)	sc read from database
Model parameter used	isc = 1	isc = 0
Change in water balance		6.0%
Change in peaks		Peaks ↑ ↑
Change in level		Level ↓ ↓

Correction of saturated conductivity sc, if sc is read (isc = 0)		Reference:	
Model parameter used	sccor = 1.2	sccor = 1.	sccor = 0.8
Change in water balance	-1.3%		1.6%
Change in peaks	Peaks ↓		Peaks ↑
Change in level			

Correction of saturated conductivity sc, if sc is calculated (isc = 1)		Reference:	
Model parameter used	sccor = 1.2	sccor = 1.	sccor = 0.8
Change in total water discharge	-1.0%		1.2%
Change in peaks	Peaks ↓		Peaks ↑
Change in level	Level ↑		Level ↓

Soil depth	Reference: Soil depth is established according to maximum root depth	Soil depth is established according to maximum root depth + 50%
Change in total water discharge		-10.1%
Change in peaks		Peaks ↓ ↓
Change in level		Level ↓ ↓

Hydrological soil groups	Reference: soil groups A, B, C, D	A → B, B → C, C → D, D = D	A → C, B → C, C → D, D = D
Model parameter used	nsolgr = 1, 2, 3, 4	nsolgr = 2, 3, 4, 4	nsolgr = 3, 3, 4, 4
Change in total water discharge		0.30%	0.90%
Change in peaks		Peaks ↑	Peaks ↑ ↑
Change in level		Level ↓	Level ↓

4.4 Model Run

Curve number method: differentiate on land use and soil or not	Reference: CN different, icn = 0	icn = 1						
Model parameter used: cnum1, cnum3		30, 70	40, 80	50, 90	30, 80	40, 90	40, 70	50, 80
Change in total water discharge		-5.5%	-5.5%	-5.0%	-5.5%	-5.1%	-5.5%	-5.5%
Change in peaks		Peaks ↓ no small peaks	Peaks ↓ no small peaks	Peaks ↑ no small peaks	Peaks ↓ no small peaks	Peaks ↑ no small peaks	Peaks ↓ no small peaks	Peaks ↓ no small peaks
Change in level		no						

Baseflow factor for return flow travel time	Reference					
Model parameter used: bff	bff = 1.	bff = 1.5	bff = 2.	bff = 3.	bff = 0.5	bff = 0.2
Change in total water discharge		1%	1.6%	2.3%	-1.5%	-3.4%
Change in peaks				Peaks ↑		Peaks ↓
Change in level				Level ↓		Level ↑

Alpha factor for groundwater	Reference				
Model parameter used: abf0	abf0 = 0.048	abf0 = 0.1	abf0 = 0.3	abf0 = 0.024	abf0 = 0.012
Change in total water discharge		1%	1.7%	-1.4%	-3.5%
Change in peaks			Peaks ↑ in winter- spring		Peaks ↓ in winter- spring
Change in level			Level ↑ in winter- spring		Level ↓ in winter- spring

Initial groundwater contribution to flow	Reference		
Model parameter used: gwq0	gwq0 = 0.5	gwq0 = 0.2	gwq0 = 1.
Change in total water discharge		-5.1%	8.4%
Change in peaks & level		Initial peaks and level ↓	Initial peaks and level ↑

Initial soil water storage	Reference		
Model parameter used: stinco	stinco = 0.7	stinco = 0.4	stinco = 1.0
Change in total water discharge		-3.4%	3.1%
Change in peaks & level		Initial peaks and level ↓	Initial peaks and level ↑

Routing coefficients							
Model parameter used: roc2, roc4	3, 3	6, 6	12, 12	24, 24	48, 48	6, 48	96, 96
Change in total water discharge		0%	-0.2%	-0.6%	-1.2%	-1%	-2.2%
Change in peaks		Peaks ↓, dynam- ics - smoother					

Crop type (in the case if only one crop type on cropland)	Reference: winter rye	winter wheat	winter barley	summer barley	maize	potatoes
Model parameter used: ncrp	ncrp =iwr	ncrp =iww	ncrp =iwb	ncrp =isba	ncrp =imai	ncrp =ipo
Change in total water discharge		-3.0%	-2.2%	0.4%	-0.9%	1.2%
Change in peaks		some peaks - different				

4.4.4 Overview of SWIM applications

Model validation SWIM was tested and validated sequentially for hydrological processes, for nitrogen dynamics, crop growth and erosion. First validation for hydrological processes performed for several mesoscale river basins is described in Krysanova, Müller-Wohlfeil, and Becker (n.d.). Preliminary validation of the model for nitrogen dynamics and crop growth is described in Krysanova, Müller-Wohlfeil, and Becker (n.d.). First test for erosion processes was performed for the Mulde basin (area 6171 km²), and it is described in Krysanova, Becker, and Klöcking (n.d.). More detailed validation of the model for hydrological processes and nitrogen dynamics in the lowland and mountainous sub-regions of the Elbe was done for the Stepenitz and the Zschopau basins (Krysanova et al., n.d.[b]; Krysanova et al., n.d.[c]). These two papers include also the analysis of factors affecting nitrogen export from diffuse agricultural sources of pollution. More elaborate validation of the erosion processes in SWIM was done for the Glonn basin in Bavaria (392 km², Krysanova et al. (n.d.[a])), where more detailed data than for the Mulde basin were available. Results of the model validation are quite satisfactory. Further development is foreseen for some processes, like nutrient retention in river basins. Besides the validation studies, the model was applied for the land use change and climate change impact studies, which are described below.

Land use change impact study was performed for the state of Brandenburg, Germany. Besides general vulnerability against water stress due to natural conditions, water resources in Brandenburg are strongly affected by brown coal mining, which took place in the south-east of the federal state in the last decades. Now the mining activities are significantly shortened. This results in decreasing river discharge, in particular in the Spree river, and may lead to general shortages in water availability. Land use change is one possible option to counteract this development.

As regards land use change trends, a tendency towards deintensification in the use of agricultural land is observed in Brandenburg during the last decade. The increase in a temporary set-aside within crop rotations was the main measure used to decrease the intensification level on arable land. Another effective way to deintensify crop production and, at the same time, to protect environmentally sensitive areas, is to create buffer zones along river courses (river corridors) by converting the arable land there into grassland or forest (permanent “set-aside”). Besides, the latter is an efficient way to reduce nitrate pollution and sediment load in rivers and to improve water quality.

Therefore, the primary objective of our study was to analyse the effects of these two alternatives of deintensification in the use of arable land on water resources in Brandenburg. Three types of land use change scenarios were developed and applied: - modification of the basic rotation scheme by increasing the portion of temporary “set-aside”; - introducing river corridors (150 and 500m width) in the original land use map and converting cropland within them into meadows (permanent “set-aside”); - combinations of temporary and permanent set-aside schemes described above.

Two opposite tendencies were established in our simulation study. The temporary “set-aside” within a crop rotation scheme would result in decreasing evapotranspiration and increasing runoff and groundwater recharge in the region, whereas the permanent set-aside within river corridors would reduce runoff and increase evapotranspiration.

Therefore, land use changes in terms of deintensification may compensate for the expected decrease of discharge in the river Spree over the coming period, only if these changes assume increases in the portion of temporary set-aside areas, and do not include conversion of arable land into meadows (or forests). Runoff increases might be even greater with a decreasing production intensity on the remaining area for arable crops, due to reduction in regional transpiration as consequence of the lowered leaf area index. The land use change impact study is described in Krysanova et al. (n.d.[d]), and Wechsung et al. (n.d.).

Climate change impact The analysis of climate change impacts on hydrology and crop yield was performed also for the state of Brandenburg, applying two transient 1.5 K scenarios of climate change. In advance, hydrological validation was performed in three representative mesoscale river basins in the area, and the crop module was validated regionally for Brandenburg, using crop yield data for districts. The CO₂ fertilization effect was studied in two options, considering: a) adjustment of the potential growth rate per unit of

intercepted PAR by a temperature dependent correction factor alpha based on experimental data for C3 and C4 crops; b) assuming a CO₂ influence on transpiration at the regional scale as the beta factor, which is coupled to the factor alpha.

Two transient 1.5 K scenarios of climate change for Brandenburg were developed in PIK: wet scenario W15 and dry scenario D15. Three periods were compared: 1981 - 1992 (control period A), 2022 - 2030 (period B), and 2042 - 2050 (period C). The atmospheric CO₂ concentration for the reference period and two scenario periods were set to 346, 406 and 436 ppm, respectively. According to the scenario W15, precipitation is expected to increase in Brandenburg: +5.2% and +11.7% on average in periods B and C, respectively. According to the scenario D15, precipitation is expected to decrease slightly in the period B (-1.7%) and quite significantly in the period C (-11.3%).

Evapotranspiration is expected to increase quite significantly under changing climate for the scenario W15, and moderately for the scenario D15. Groundwater recharge is practically the same as that in the control period for scenario W15. On the opposite, the decrease of groundwater recharge is notable for scenario D15, down to -31.5% in the period C. According to scenario W15, runoff is increasing (up to +17.2% in the period C). However it decreases significantly in the period C for scenario D15 (-22.6%).

The crop yield was only slightly altered under the "climate change only" variant of the W15 scenario for barley and maize, and it was reduced for wheat. The D15 scenario lead to the reduced crop yield for all the crops.

The impact of higher atmospheric CO₂ (alpha factor) compensated fully or partly for climate-related crop yield losses, and resulted in an increased yield both for barley and maize in scenario W15 compared to the reference scenario. The negative changes were still preserved in scenario D15 for wheat and maize.

The assumption that in addition stomatal control of transpiration is taking place at the regional scale (beta factor coupled to alpha factor) lead to further increase in crop yield, which was larger for maize than for barley and wheat. A full description of the climate change impact study with scenario W15 is given in Krysanova and Becker (n.d.[b]).

Conclusions One of the major challenges for BAHC (Biospheric Aspects of Hydrological Cycle) research in the frame of the International Geosphere and Biosphere Program (IGBP) is the adequate description and modelling of the complex interactions between climate, hydrological and ecological processes at different scales. SWIM has been developed as a tool to serve this purpose at the mesoscale and regional scale.

Model applications in a number of river basins in the range of about 100 to 24000 km₂ drainage area have shown that the model is capable to describe realistically the basic ecohydrological processes under different environmental conditions, including a) the spatial and temporal variability of main water balance components (evapotranspiration, groundwater recharge, runoff generation), b) the cycling of nutrients in soil and their transport with

water considering the dynamics of the controlling climate and hydrological conditions, c) vegetation/crop growth and related phenomena, d) the dynamical features of soil erosion and sediment transport, and e) the effect of changes in climate and land use on all these interrelated processes and characteristics.



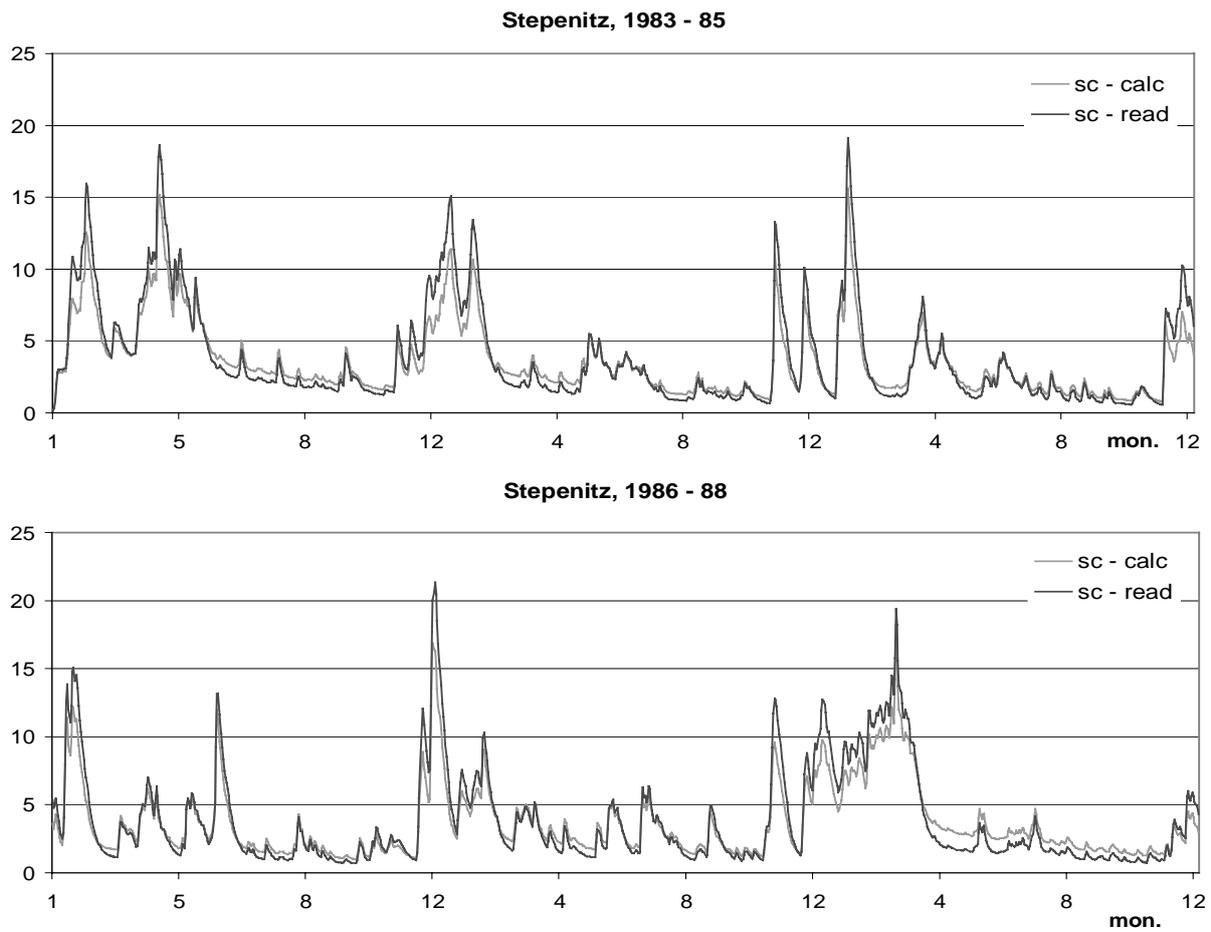


Fig. 4.7 Sensitivity to the method of estimation of saturated conductivity


Stepenitz, 1983 - 85

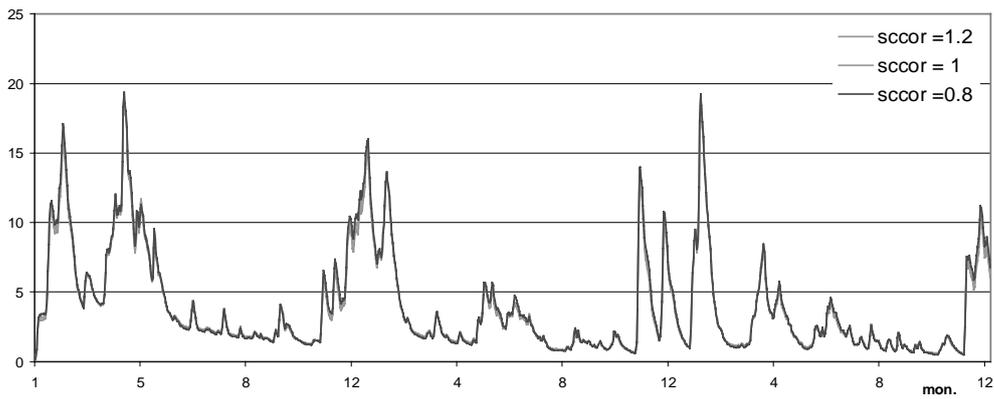

Nov. 1983 - Jan 1984

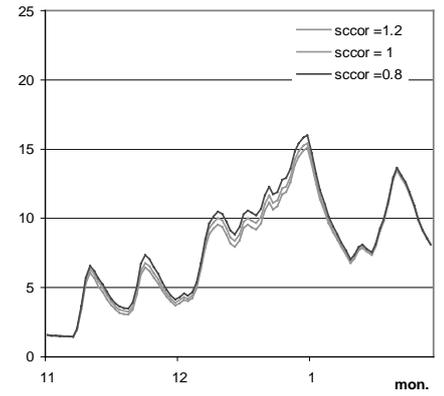

Stepenitz, 1986 - 88

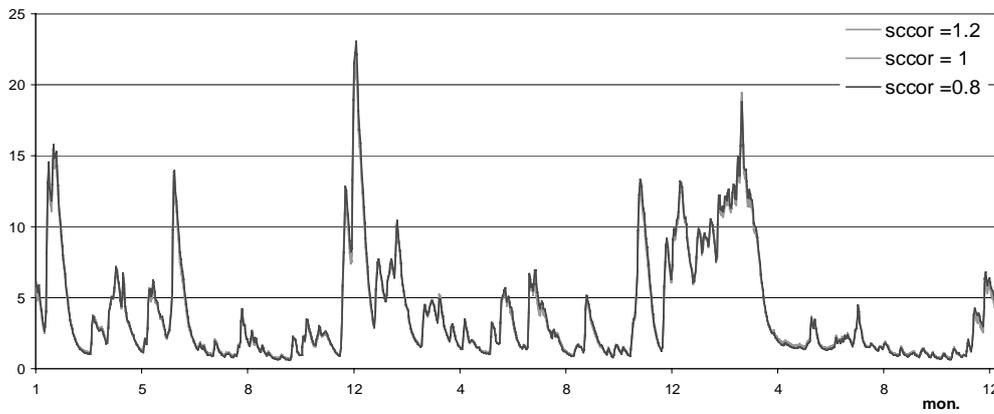

Feb - Apr 1988



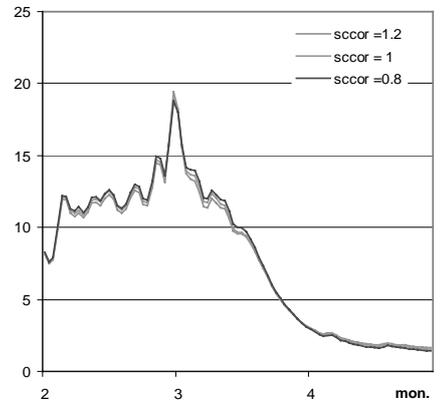


Fig. 4.8 Sensitivity to saturated conductivity (sc read)


Stepenitz, 1983 - 85

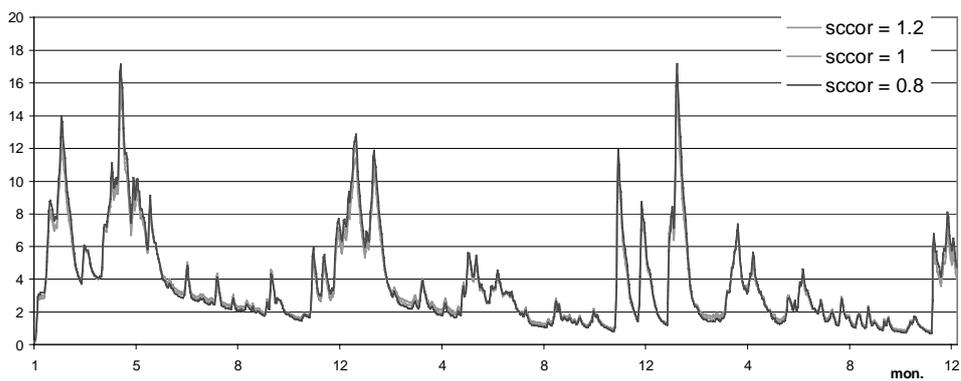

Nov. 1983 - Jan 1984

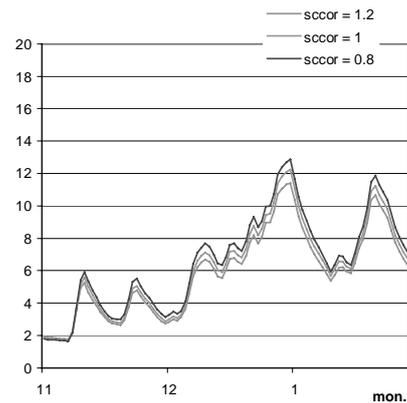

Stepenitz, 1986 - 88

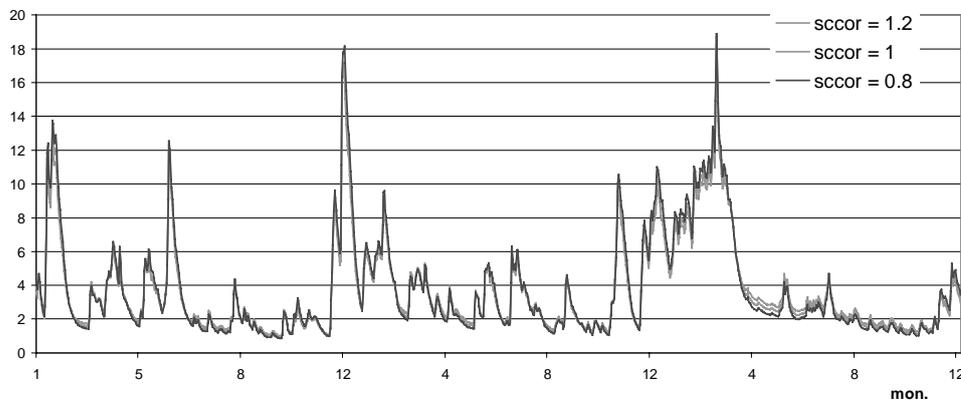

Feb - Apr 1988

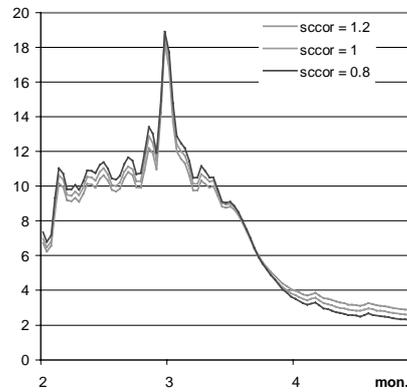


Fig. 4.9 Sensitivity to saturated conductivity (sc calculated)

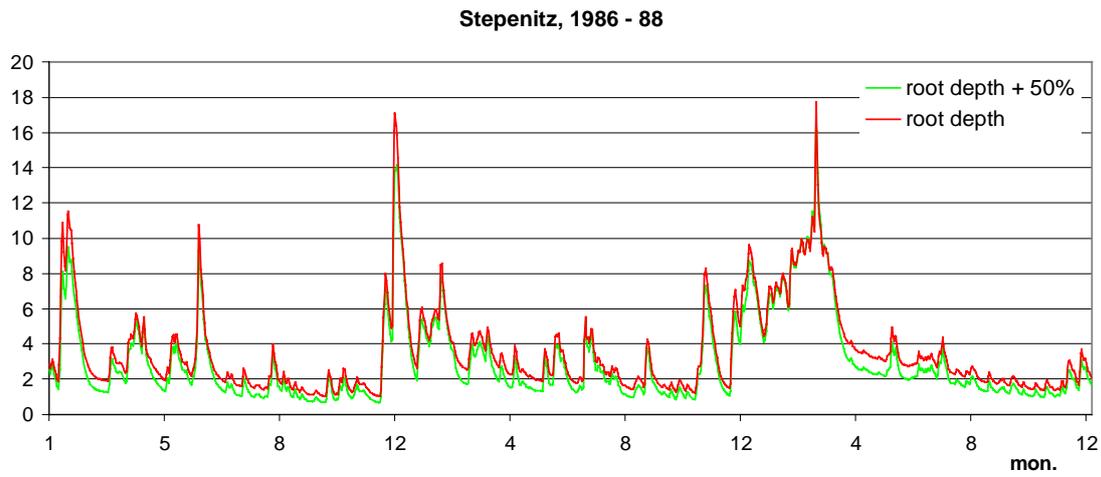
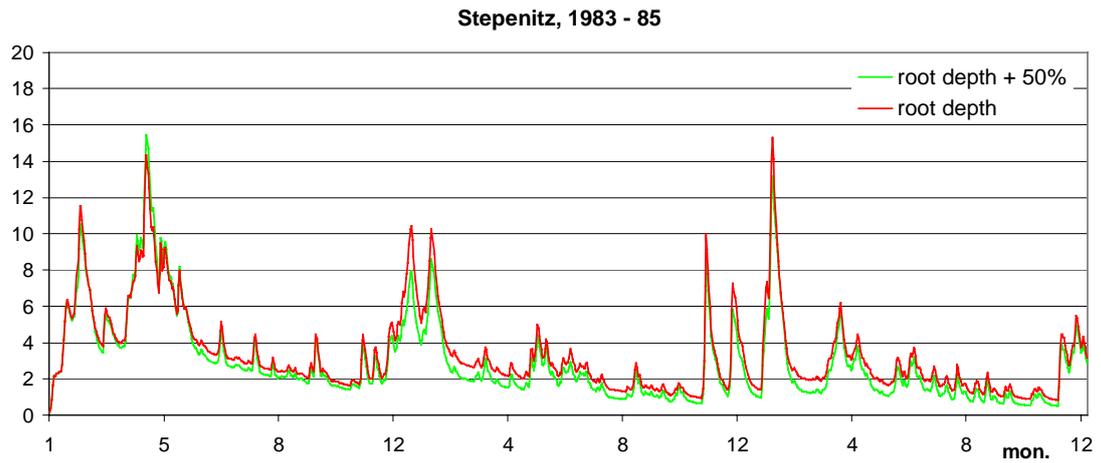


Fig. 4.10 Sensitivity to soil depth

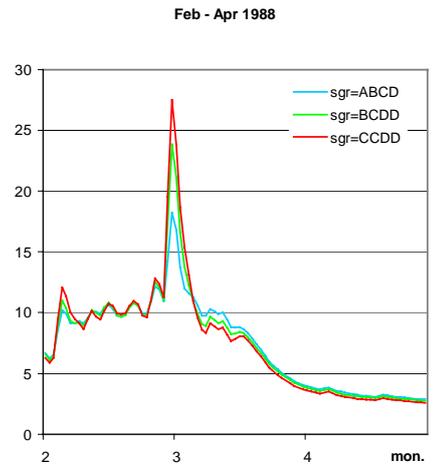
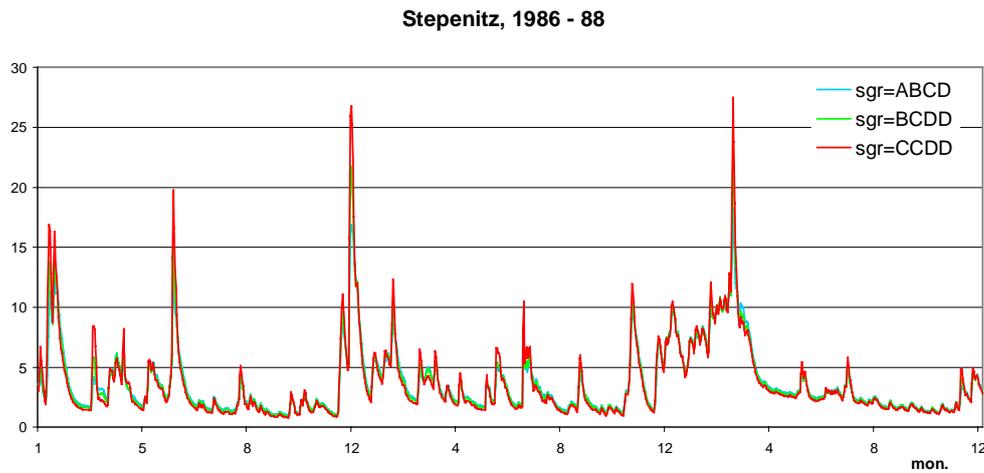
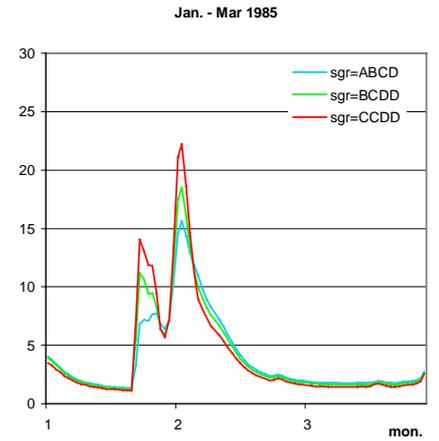
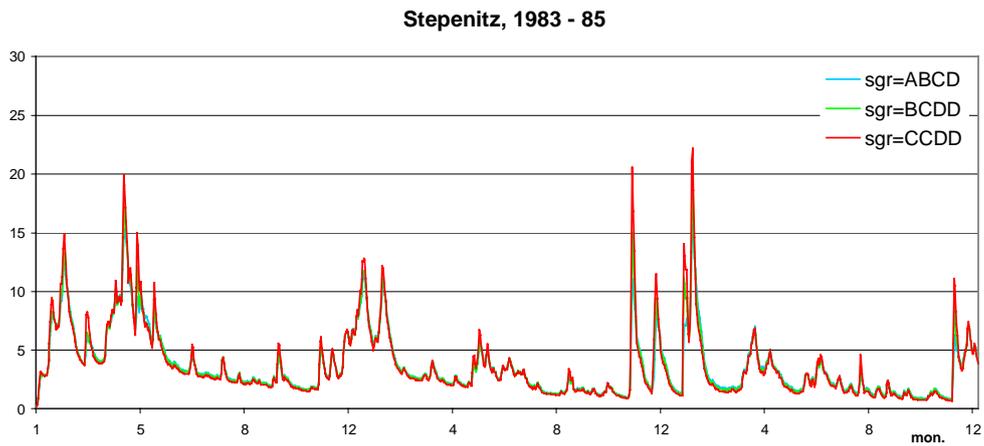


Fig. 4.11 Sensitivity to the soil group assignment

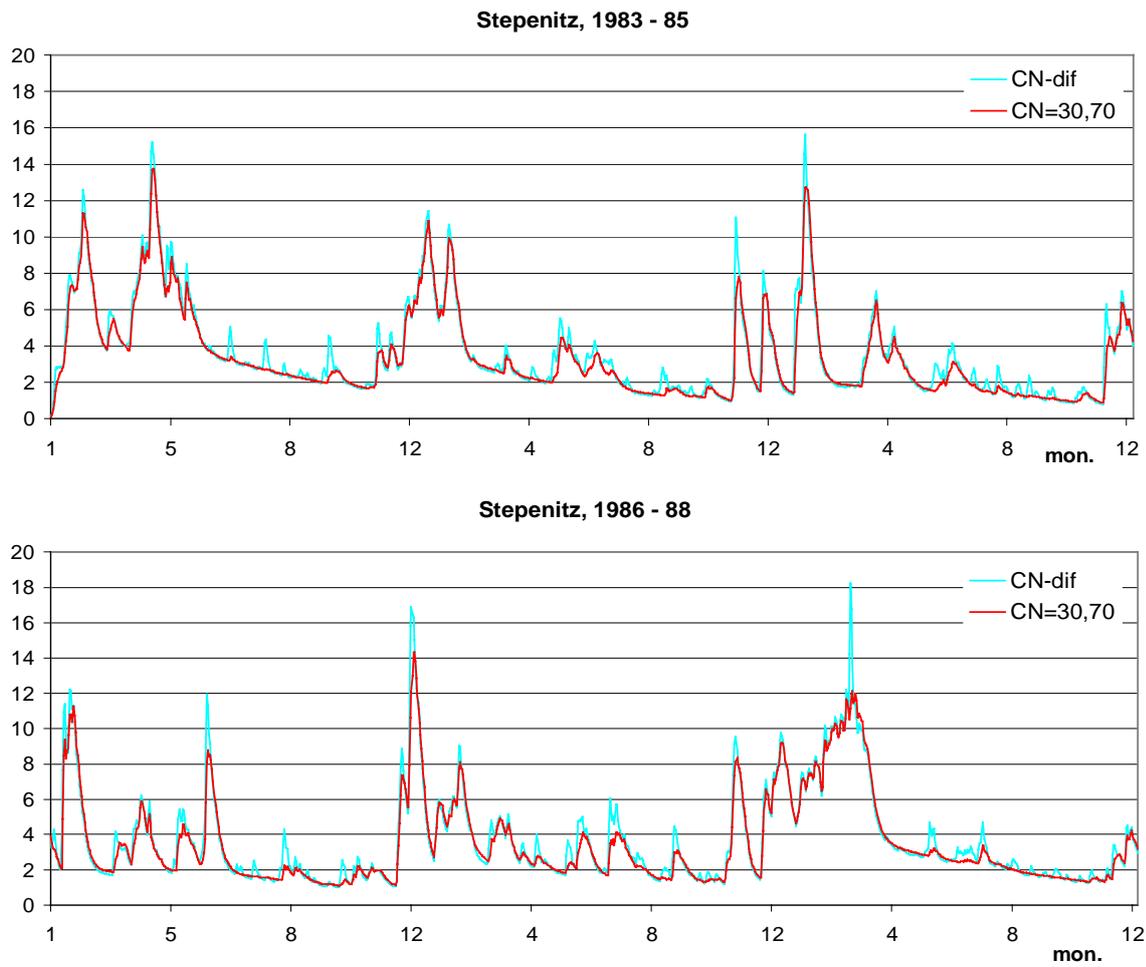


Fig. 4.12 Sensitivity to the Curve Number method: CN different in comparison to CN= 30, 70

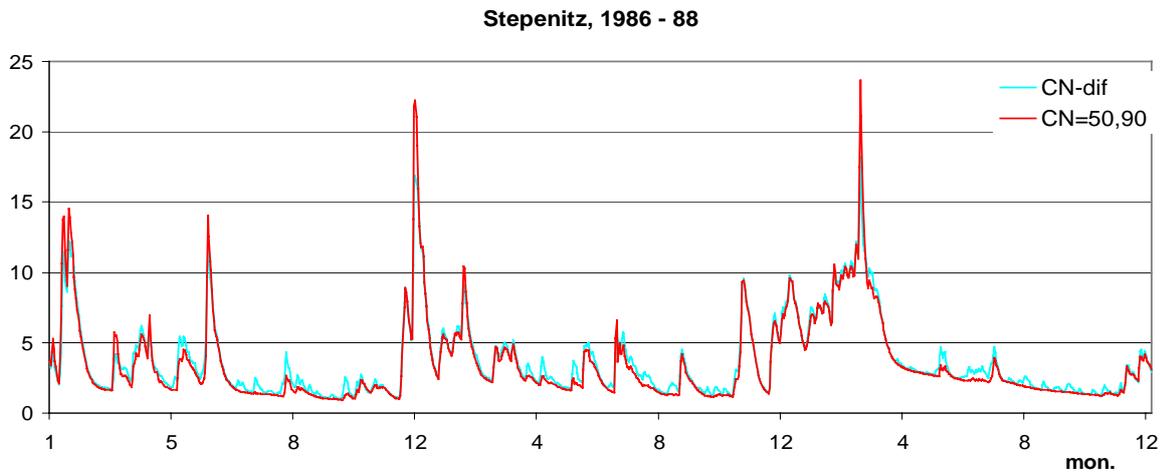
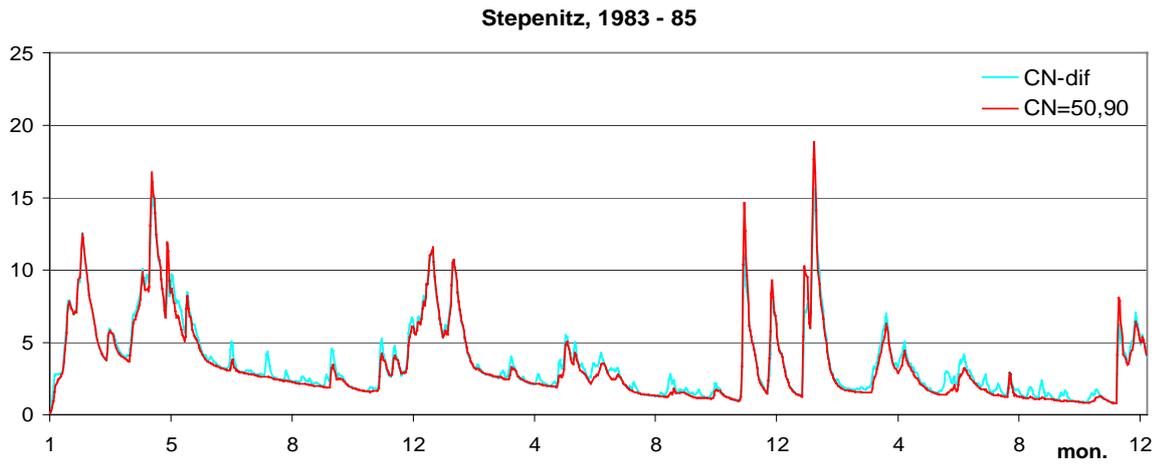


Fig. 4.13 Sensitivity to the Curve Number method: CN different in comparison to CN= 50,90




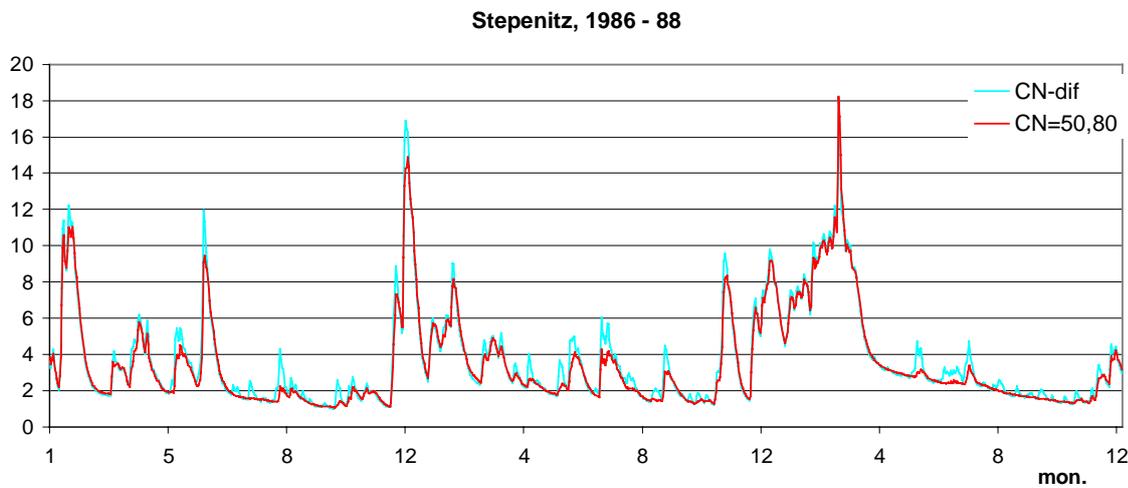


Fig. 4.14 Sensitivity to the Curve Number method: CN different in comparison to CN = 50,80


Stepenitz, 1983 - 85

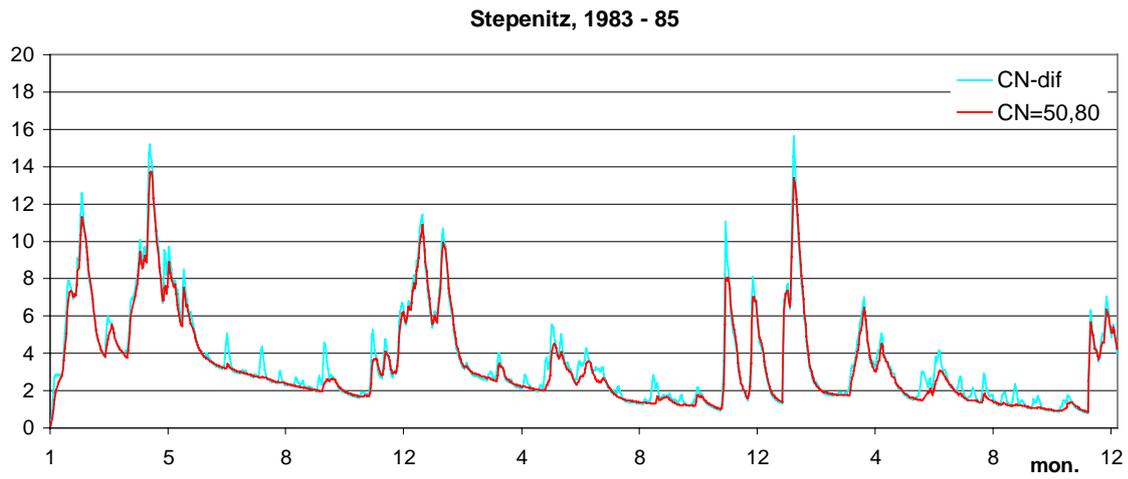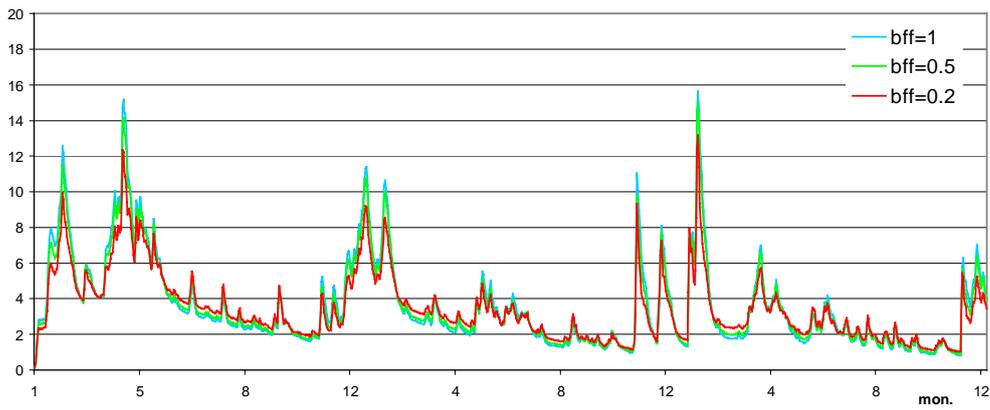

Nov. 1983 - Jan 1984

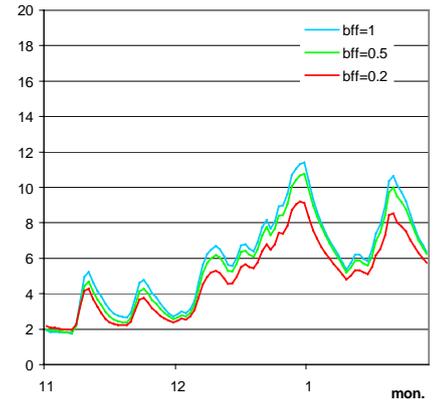

Stepenitz, 1986 - 88

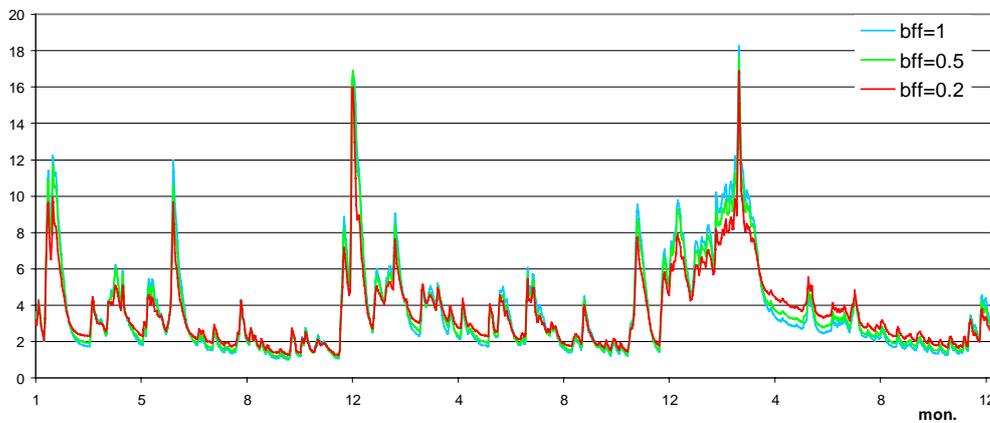

Feb - Apr 1988

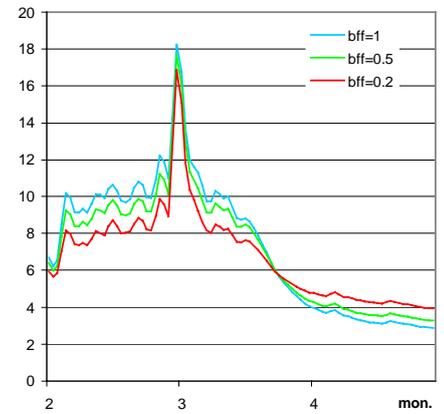


Fig. 4.15 Sensitivity to the baseflow factor (bff = 1; 0.5; 0.2)

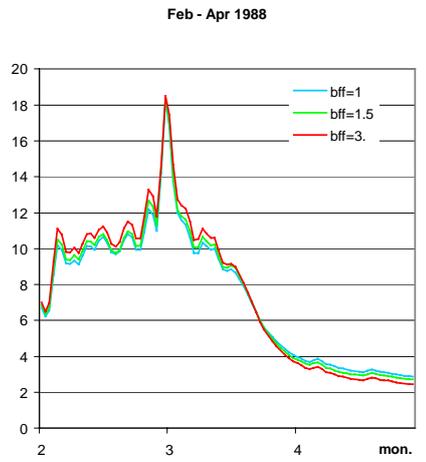
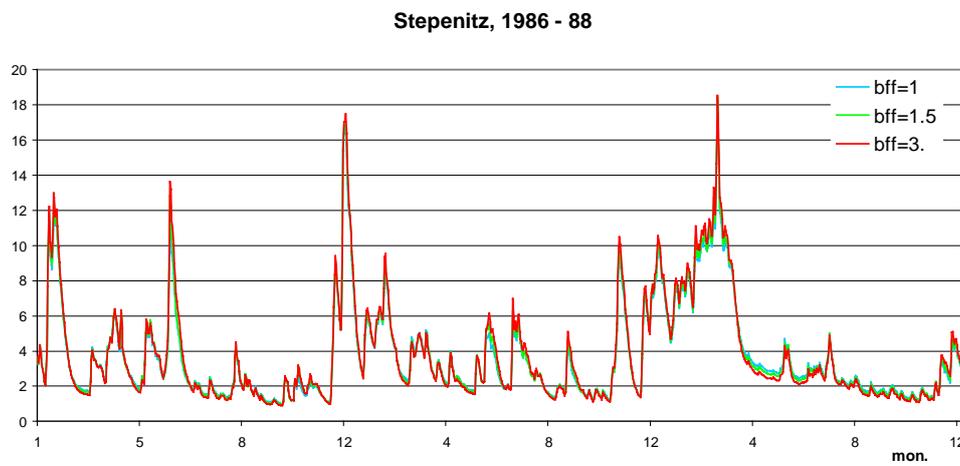
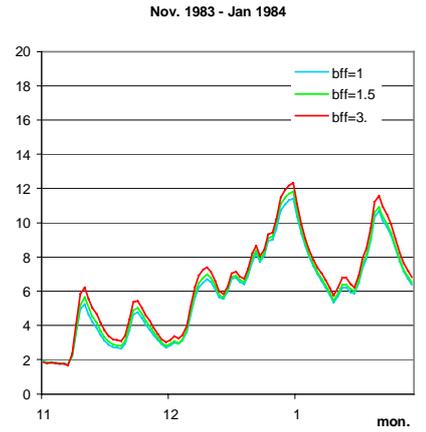
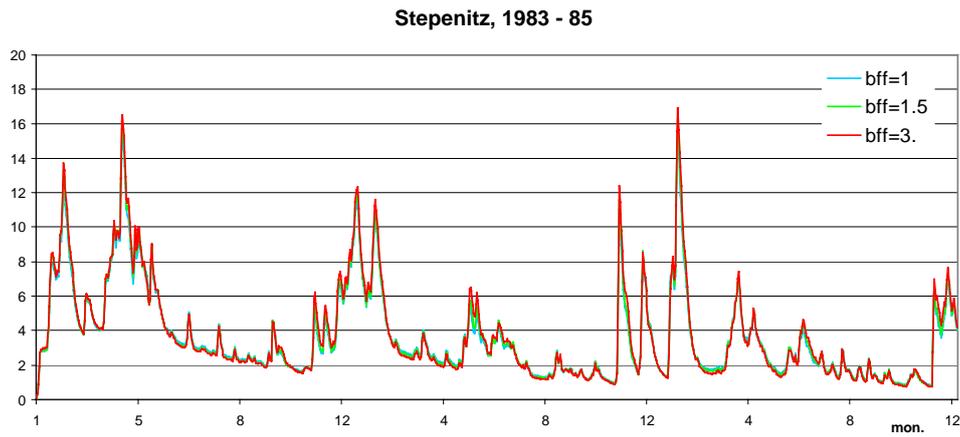


Fig. 4.16 Sensitivity to the baseflow factor (bff = 1; 1.5; 3.)






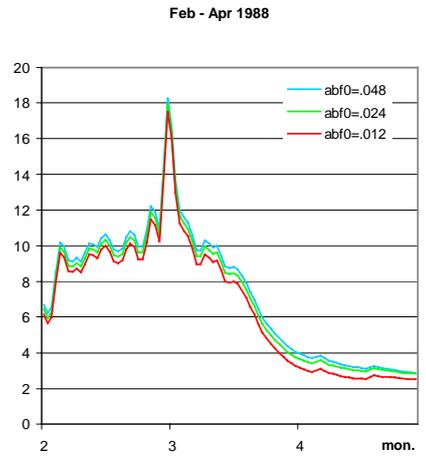


Fig. 4.17 Sensitivity to the alpha factor for groundwater ($abf0 = .048, .024, .012$)


Stepenitz, 1983 - 85

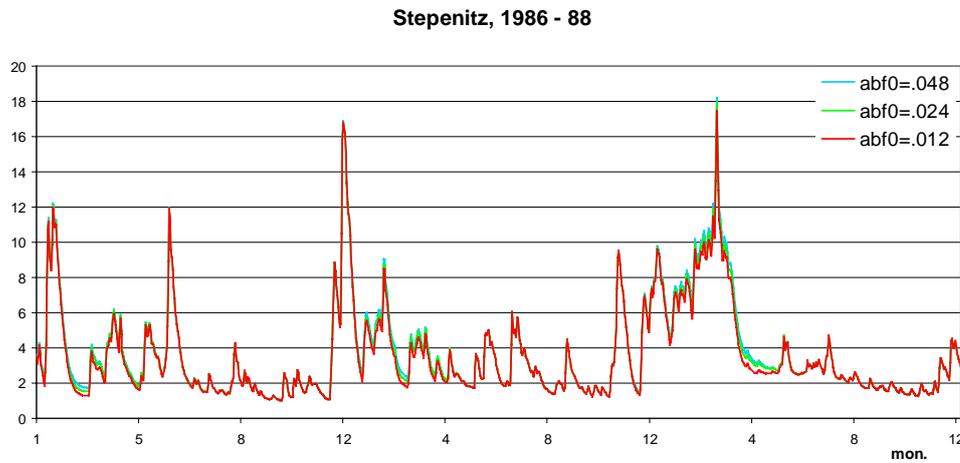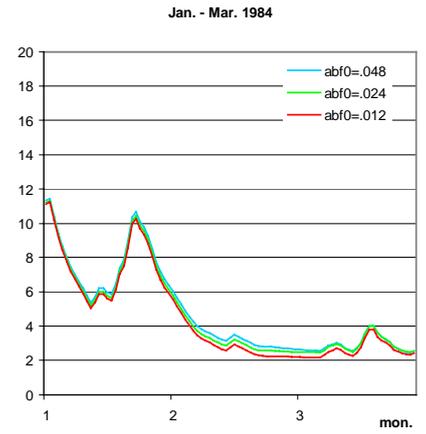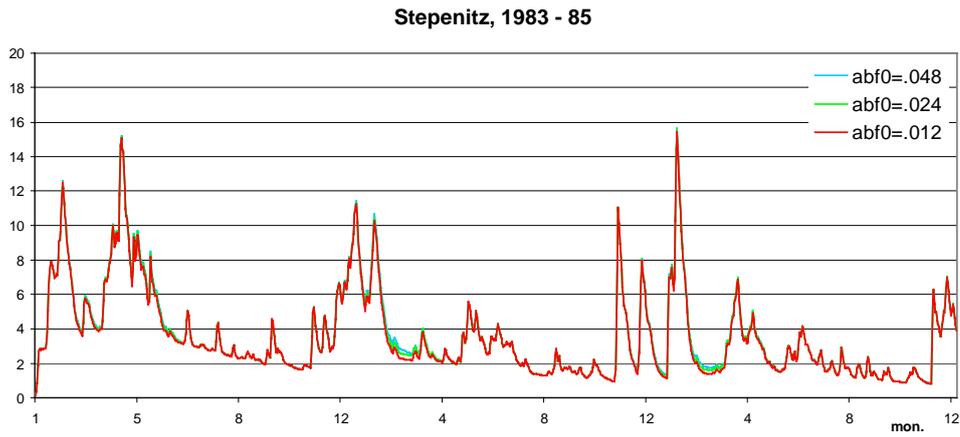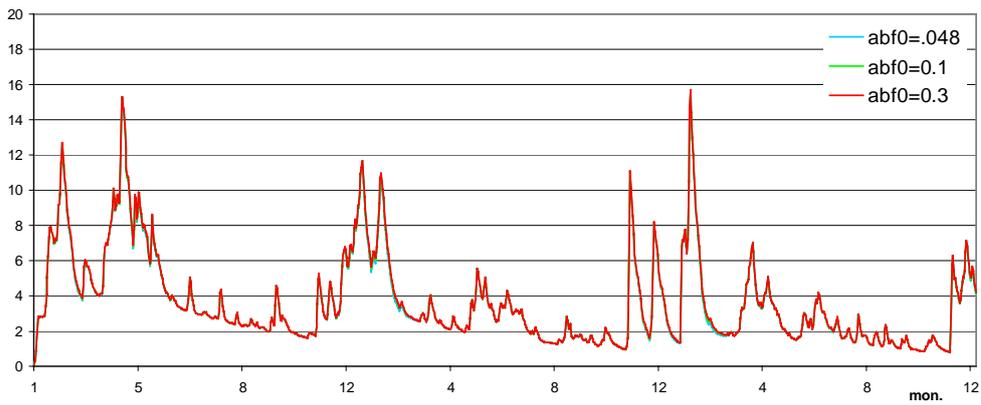

Jan. - Mar. 1984

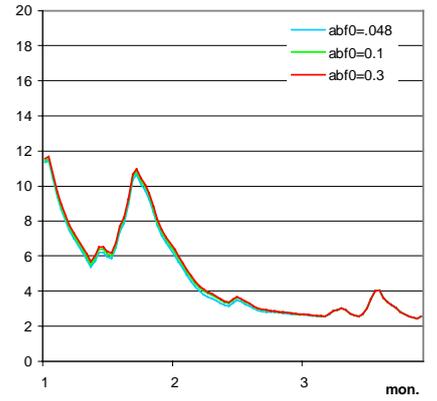

Stepenitz, 1986 - 88

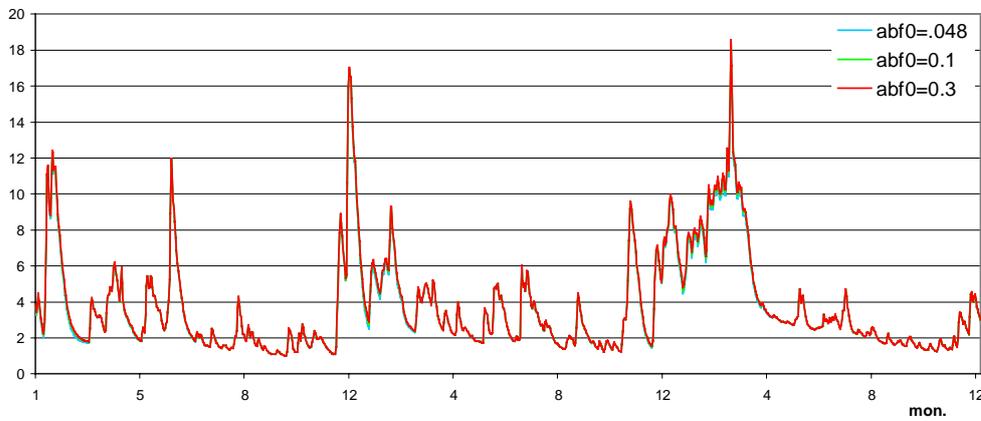

Feb - Apr 1988

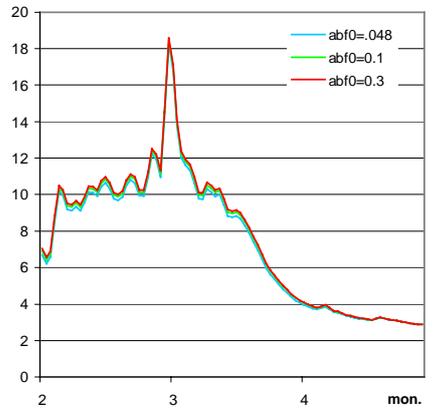


Fig. 4.18 Sensitivity to the alpha factor for groundwater ($abf_0 = .048, 0.1, 0.3$)

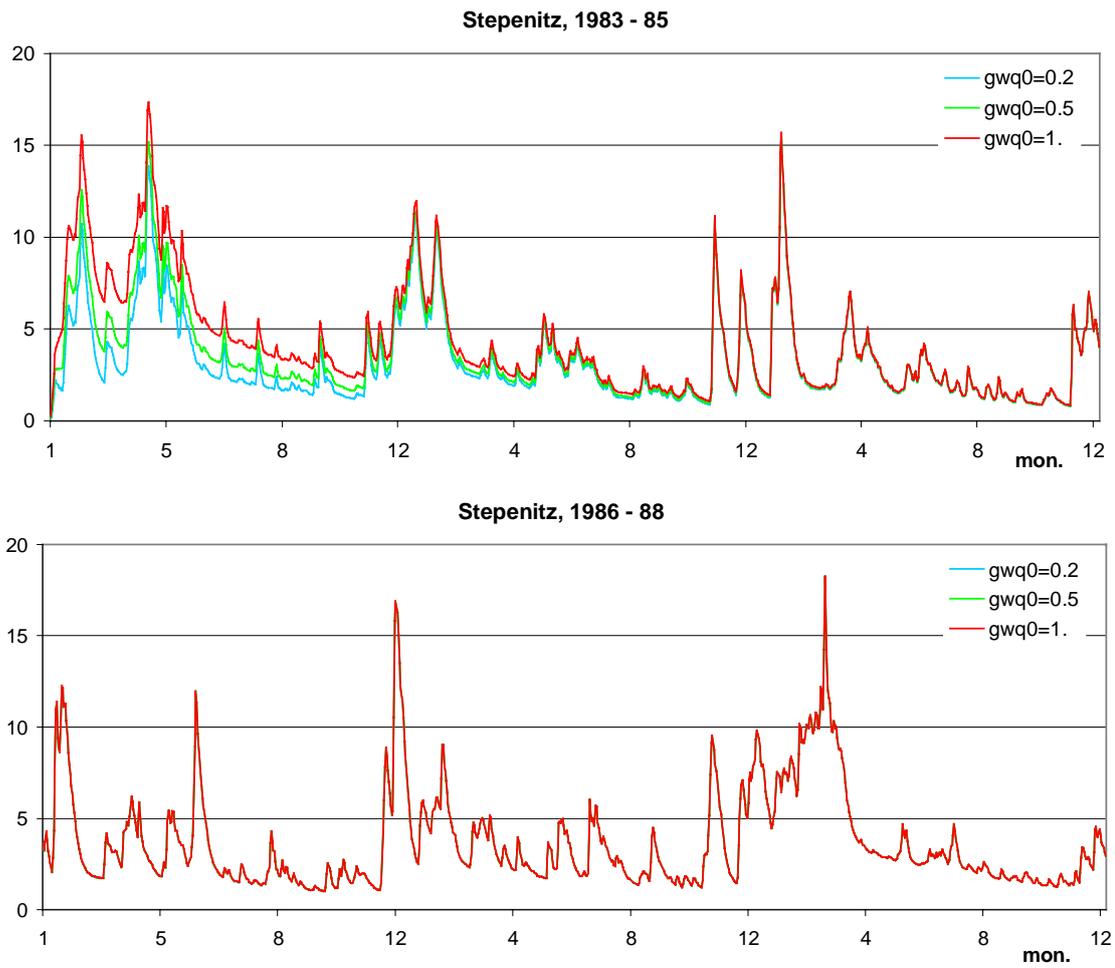


Fig. 4.19 Sensitivity to initial groundwater contribution to flow

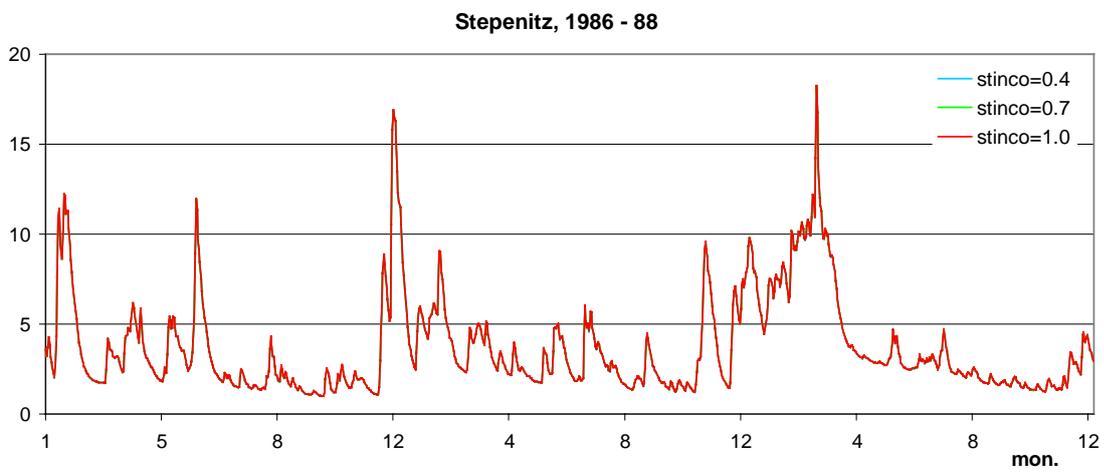
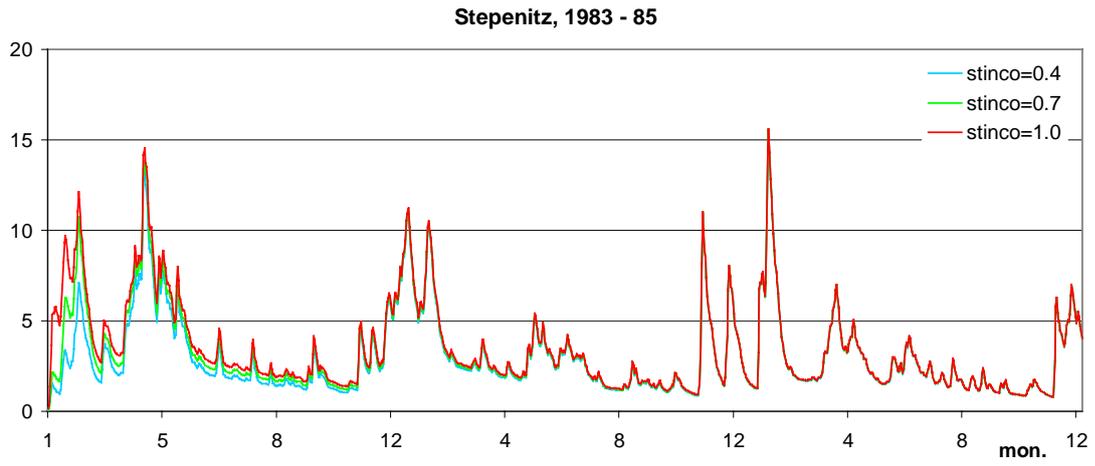


Fig. 4.20 Sensitivity to initial water storage

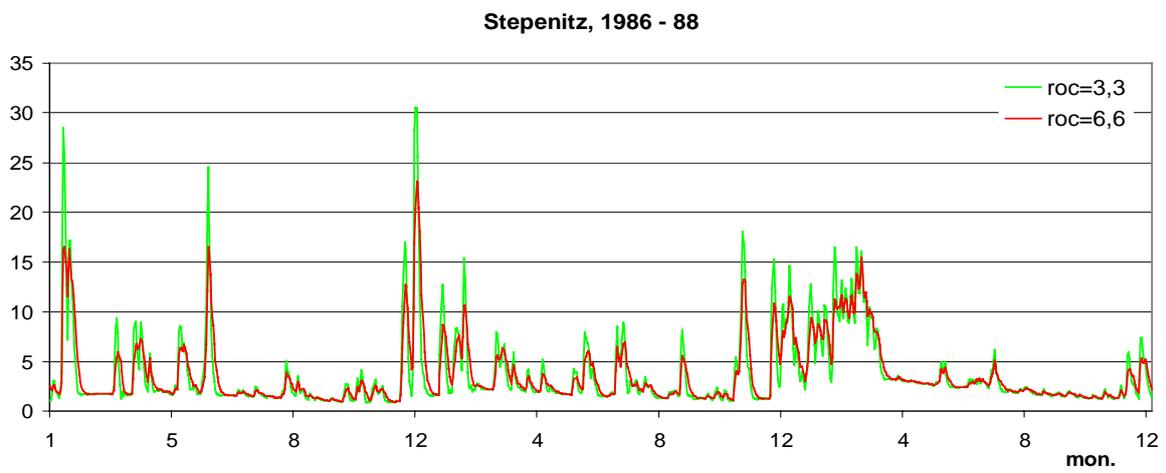
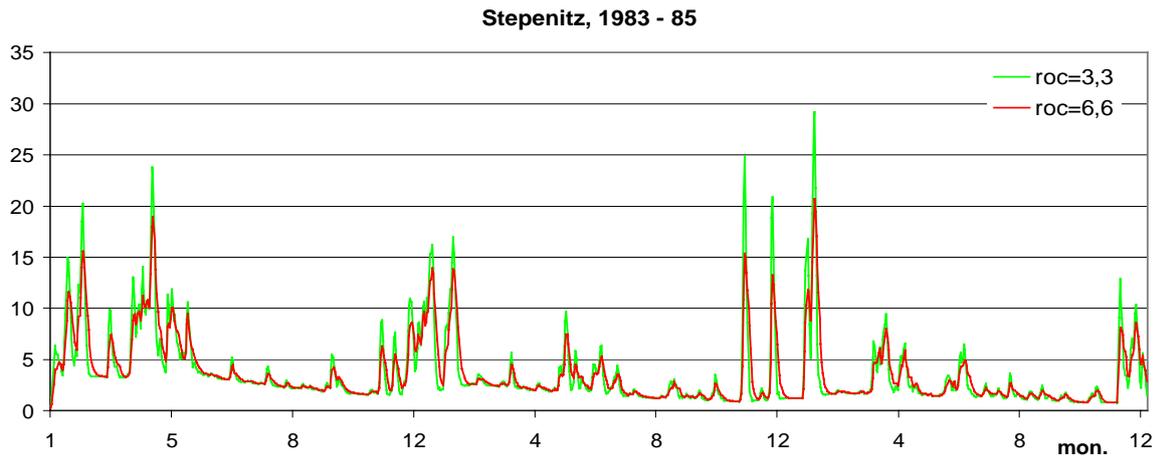


Fig. 4.21 Sensitivity to the routing coefficients

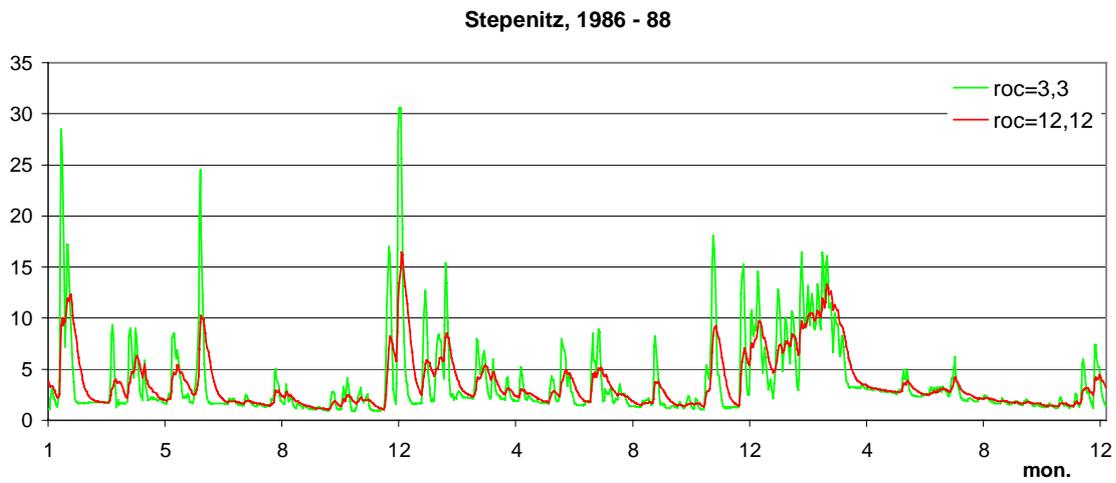
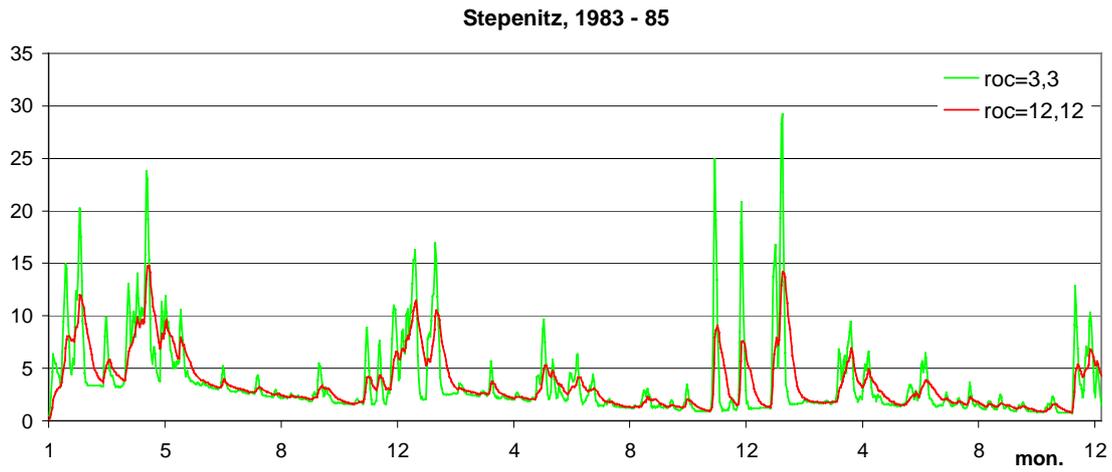


Fig. 4.22 Sensitivity to the routing coefficients

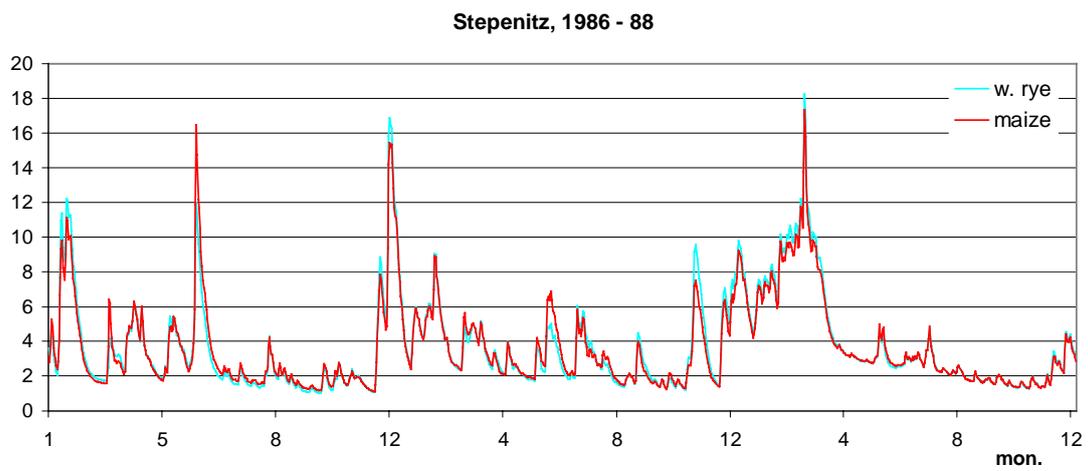
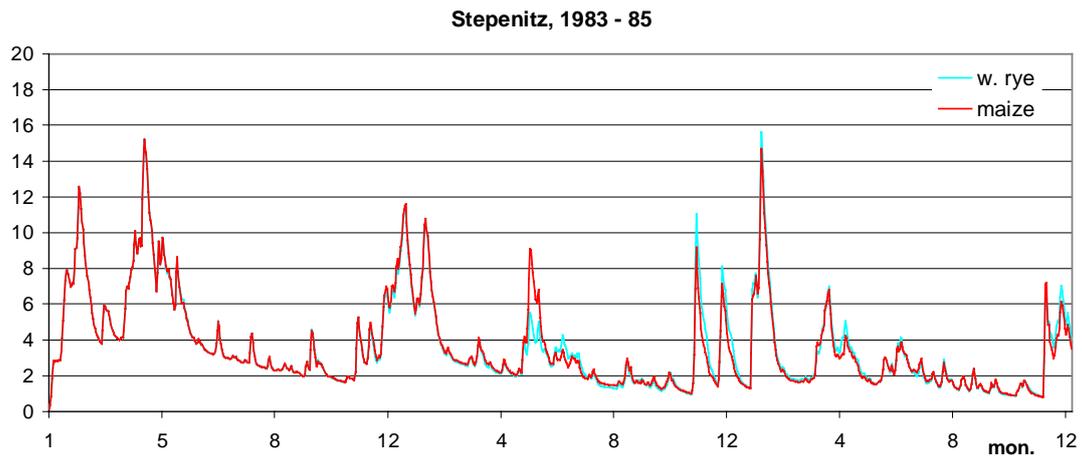


Fig. 4.23 Sensitivity to the crop type: winter rye and maize

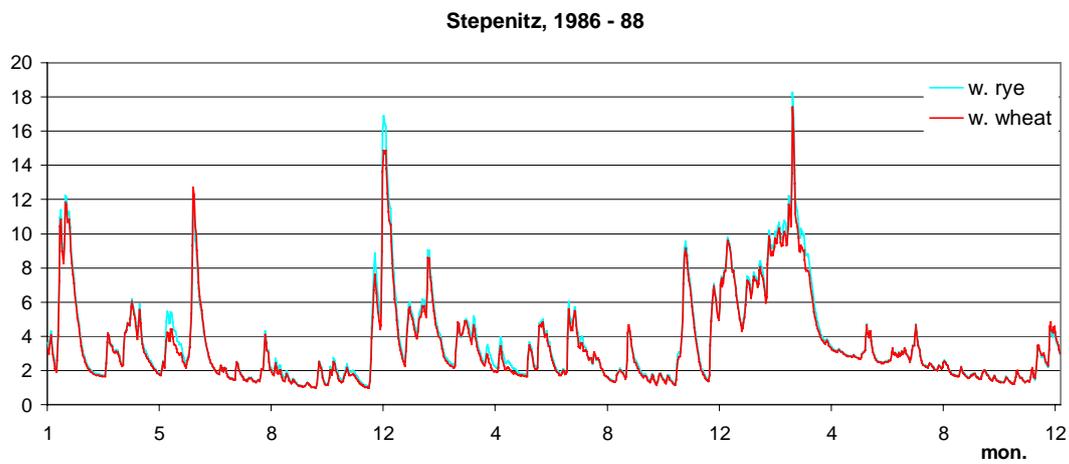
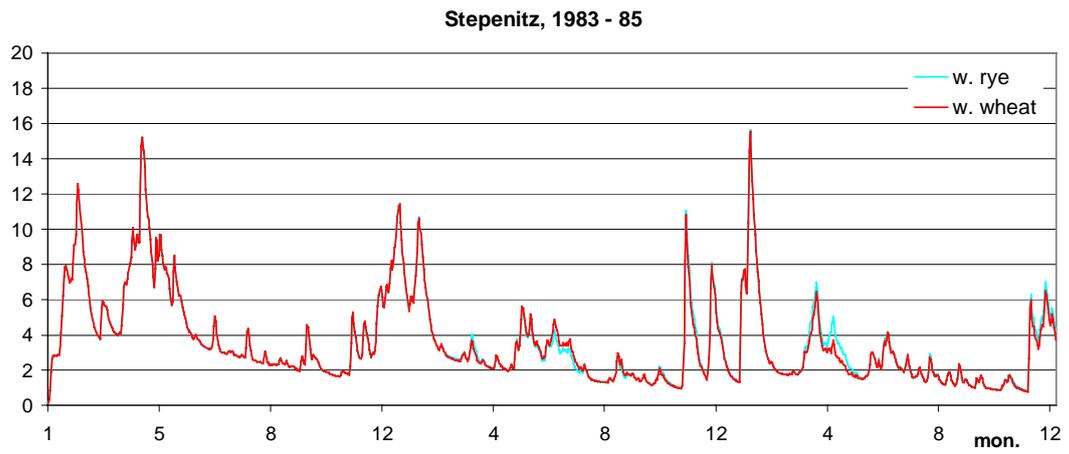


Fig. 4.24 Sensitivity to the crop type:winter rye and winter wheat

4.5 Output variables

name	description	unit
baseflow		mm
biomass_total		
crop_yield		
discharge		m^3s^{-1}
eta		mm
etp		mm
glacier_weq		m
groundwater_recharge		mm
heat_unit_fraction		
leaf_area_index		
percolation		mm
precipitation		mm
river_runoff		mm
root_depth		
snow_depth_weq		
snowfall_weq		mm
soil_evaporation		mm
soil_water_content		mm
soil_water_index		
subsurface_runoff		mm
surface_runoff		mm
tmax		
tmean		
tmin		
transpiration		mm
vegetation_temperature_stress		
vegetation_water_stress		
water_yield		

Chapter 5

APPENDIX I GRASS commands useful for the spatial data preparation for SWIM

Table 5.1: GRASS commands

Command format	Flags and Parameters	Command description
d.colors [map=name]	Parameters: map raster map name	To interactively change the color table of a raster map layer
d.display		A menu-driven display program for viewing maps
d.erase [color=name]	Parameters: color color to erase with	Erases the contents of the active display frame on the user's monitor

Continued on next page

Table 5.1 – *Continued from previous page*

Command format	Flags and Parameters	Command description
d.frame [-cepsD] [frame=name] [at=bottom,top,left,right]	Flags: -c Create a new frame -e Remove all frames and erase the screen -p Print name of current frame -s Select a frame -D Debugging output Parameters: frame frame to be created/selected at where to place the frame	Manages display frames on the user's monitor
d.histogram [-zq] map=name [color=name] [style=name]	Flags: -z Display zero-data information -q Gather the histogram quietly Parameters: map raster map for which histogram will be displayed color color for legend and title options: red, orange, yellow, green, blue, indigo, white, black, brown, magenta, aqua, gray, grey style indicate if a pie or bar chart is desired	Displays a histogram in the form of a pie or bar chart for a user-specified raster file
d.legend map=name [color=name] [lines=value]	Parameters: map name of raster map color sets the legend's text color llines number of text lines (useful for truncating long legends)	Displays a legend for a raster map layer in the active frame on the graphics monitor

Continued on next page

Table 5.1 – Continued from previous page

Command format	Flags and Parameters	Command description
<p>d.mon [-lLprs] [start=name] [stop=name] [select=name] [unlock=name]</p>	<p>Flags: -l List all monitors -L List all monitors (with current status) -p Print name of currently selected monitor -r Release currently selected monitor -s Do not automatically select when starting start name of graphic monitor to start Parameters: stop name of graphic monitor to stop select name of graphic monitor to select unlock name of graphic monitor to unlock</p>	<p>To establish and control the use of a graphics display monitor</p>
<p>d.rast [-o] map=name</p>	<p>Flags: -o Overlay (non-zero values only) Parameters: map name of raster map to be displayed</p>	<p>Displays and overlays raster map layers in the active display frame on the graphics monitor</p>
<p>d.vect [-m] map=name [color=name]</p>	<p>Flags: -m Use less memory Parameters: map name of vector map to be displayed color color desired for drawing map</p>	<p>Displays vector data in the active frame on the graphics monitor</p>
<p>d.what.rast [-1t] [map=name[,name,...]] [fs=name]</p>	<p>Flags: -1 Identify just one location -t Terse output. For parsing by programs. Parameters: map name of raster map(s) fs field separator (terse mode only), default: :</p>	<p>Allows the user to interactively query the category contents of multiple raster map layers at user-specified locations within the current geographic region</p>

Continued on next page

Table 5.1 – *Continued from previous page*

Command format	Flags and Parameters	Command description
d.what.vect [-1] map=name	Flags: -1 Identify just one location Parameters: map name of existing vector map	Allows the user to interactively query the category contents of a (binary) vector map layer at user-specified locations within the current geographic region
d.where [-1] [spheroid=name]	Flags: -1 one mouse click only Parameters: sspheroid name of a spheroid for lat/lon coordinate conversion, options: australian, bessel, clark66, everest, international, wgs72, wgs84	Identifies the geographic coordinates associated with point locations in the active frame on the graphics monitor
d.zoom [-q] [action=name]	Flags: -q Quiet Parameters: action type of zoom (for latitude/longitude databases only) options: zoom, rotate	Allows the user to change the current geographic region settings interactively, with a mouse
r.average [-c] base=name cover=name output=name	Flags: -c cover values extracted from the category labels of the cover map Parameters: base base raster map cover cover raster map output resultant raster map	Finds the average of values in a cover map within areas assigned the same category values in a user-specified base map
r.buffer [-q] input=name output=name distances=value[,value,...] [units=name]	Flags: -q Quiet Parameters: input name of input map output name of output map distances distance zone(s) units units of distance, options: meters, kilometers, feet, miles, default: meters	Creates a raster map layer showing buffer zones surrounding cells that contain non-zero category values

Continued on next page

Table 5.1 – *Continued from previous page*

Command format	Flags and Parameters	Command description
<p>r.cats map=name [cats=range[,range,...]] [fs=character space tab]</p>	<p>Parameters: map name of a raster map cats category list: e.g. 1,3-8,14 fs output separator character, default: tab</p>	<p>Prints category values and labels associated with user-specified raster map layer</p>
<p>r.coin [-qw] map1=name map2=name units=name</p>	<p>Flags: -q Quiet -w Wide report, 132 columns (default: 80) Parameters: map1 name of first raster map map2 name of second raster map units unit of measure, options: c,p,x,y,a,h,k,m</p>	<p>Tabulates the mutual occurrence (coincidence) of categories for two raster map layers</p>

Continued on next page

Table 5.1 – Continued from previous page

Command format	Flags and Parameters	Command description
<p>r.colors [-wq] map=name color=type</p>	<p>Flags: -w Don't overwrite existing color table -q Quietly</p> <p>Parameters: map raster map name color type of color table options: aspect, grey, grey.eq, gyr, rainbow, ramp, random, ryg, wave, rules Where color type is one of: aspect (aspect oriented grey colors) grey (linear grey scale) grey.eq (histogram equalized grey scale) gyr (green through yellow to red) rainbow (rainbow color table) ramp (color ramp) ryg (red through yellow to green) random (random color table) wave (color wave) rules (create color table by rules) Valid colors are: white black red green blue yellow magenta cyan aqua grey gray orange brown purple violet indigo</p>	<p>Creates/modifies the color table associated with a raster map layer</p>
<p>r.combine [-s]</p>	<p>Flags: -s Use symbols (instead of graphics)</p>	<p>Allows category values from several raster map layers to be combined</p>
<p>r.cross [-qz] input=name[,name,...] output=name</p>	<p>Flags: -q Quiet -z Non-zero data only</p> <p>Parameters: input names of 2-10 input raster maps output name of the resulting map</p>	<p>Creates a cross product of the category values from multiple raster map layers</p>

Continued on next page

Table 5.1 – *Continued from previous page*

Command format	Flags and Parameters	Command description
r.describe [-lrqd] map=name	Flags: -1 Print the output one value per line -r Only print the range of the data -q Quiet -d Use the current region Parameters: map name of raster map	Prints terse list of category values found in a raster map layer
r.in.ascii input=name output=name [title="phrase"] [mult=value]	Parameters: input ascii raster file to be imported output name of resultant raster map title title for resultant raster map mult multiplier for ascii data, default: 1.	Convert an ASCII raster text file (e.g., from ARC/INFO) into a binary raster map layer
r.info map=name	Parameters: map name of raster map	Outputs basic information about a user-specified raster map layer
r.mapcalc [result=expression]		Raster map layer data calculator, performs arithmetic operations on several raster map layers
r.neighbors [-aq] input=name output=name method=name size=value [title="phrase"]	Flags: -q Run quietly -a Do not align output with the input Parameters: input name of existing raster file output name of the new raster file method neighborhood operation, options: average, median, mode, minimum, maximum, astdev., variance, diversity, interspersion size neighborhood size, options: 1,3,5,7,9,11,13,15,17,19,21,23,25 title title of the output raster file	Makes each cell category value a function of the category values assigned to the cells around it, and stores new cell values in an output raster map layer

Continued on next page

Table 5.1 – Continued from previous page

Command format	Flags and Parameters	Command description
r.out.ascii [-h] map=name [digits=value]	Flags: -l Smooth Corners	Converts a raster map layer into an ASCII text suitable for other computer systems (e.g., for ARC/INFO)
r.poly [-l] input=name output=name	Flags: -h Suppress printing of header information Parameters: map name of existing raster map digits the minimum number of digits per cell to be printed	Extracts area edges from a raster map layer and converts data to GRASS vector format
r.reclass input=name output=name [title=name]	Parameters: input raster map to be reclassified output name for the resulting raster map title title for the resulting raster map	Creates a new map layer whose category values are based upon the user's reclassification of categories in an existing map
r.report [-hmfqez] map=name[,name,...] [units=name[,name,...]] [pl=value] [pw=value] [output=name]	Flags: -h suppress page headers -m report zero values due to mask -f use form feeds between pages -q quiet -e scientific format -z filter out zero category data Parameters: map raster map(s) to report on units mi(les), me(tres), k(ilometers), a(cres), h(ectares), c(cells), p(ercent) pl,pw page length, page width output name of an output file	Reports statistics for raster map layers

Continued on next page

Table 5.1 – *Continued from previous page*

Command format	Flags and Parameters	Command description
<p>r.stats [-l a c l m q z g x] input=name[,name,...] [fs=character space] [output=name]</p>	<p>Flags: -1 One cell per line -a Print area totals -c Print cell counts -l Print category labels -m Report zero values due to mask -q Quiet -z Non-zero data only will be output -g Print grid coordinates (east and north) (requires -1 flag) -x Print x and y (column and row) (requires -1 flag)</p> <p>Parameters: input raster maps(s) fs output field separator, default: space output output file name</p>	<p>Generates area statistics for raster map layers</p>

Continued on next page

Table 5.1 – *Continued from previous page*

Command format	Flags and Parameters	Command description
<p>r.watershed [-m4] elevation=name [depression=name] [flow=name] [disturbed.land=name] [blocking=name] [threshold=value] [max.slope.length=value] [accumulation=name] [drainage=name] [basin=name] [stream=name] [half.basin=name] [visual=name] [length.slope=name] [slope.steepness=name]</p>	<p>Flags: -m Enable extend memory option: Operation is slow -4 Allow only horizontal and vertical flow of water</p> <p>Parameters: Input maps: elevation Input map: elevation on which entire analysis is based depression Input map: locations of real depressions flow Input map: amount of overland flow per cell disturbed.land Input map or value: percent of disturbed land, for RUSLE blocking Input map: terrain blocking overland surface flow, for RUSLE threshold Input value: minimum size of exterior watershed basin max.slope.length Input value: maximum length of surface flow, for RUSLE</p> <p>Output maps: accumulation Output map: number of cells that drain through each cell drainage Output map: drainage direction basin Output map: unique label for each watershed basin stream Output map: stream segments half.basin Output map: each half-basin is given a unique value visual Output map: useful for visual display of results length.slope Output map: slope length and steepness (LS) factor for RUSLE slope.steepness Output map: slope steepness (S) factor for RUSLE</p>	<p>Watershed basin analysis program. It generates a set of maps indicating the location of sub-basins and streams, and the LS and S factors of the Revised Universal Soil Loss Equation (RUSLE)</p>

Continued on next page

Table 5.1 – Continued from previous page

Command format	Flags and Parameters	Command description
<p>g.remove [rast=name[,name,...]] [vect=name[,name,...]] [icon=name[,name,...]] [labels=name[,name,...]] [sites=name[,name,...]] [region=name[,name,...]] [group=name[,name,...]] [3dview=name[,name,...]]</p>	<p>Parameters: rast rast file(s) to be removed vect vect file(s) to be removed icon icon file(s) to be removed labels labels file(s) to be removed sites sites file(s) to be removed region region file(s) to be removed group group file(s) to be removed 3dview 3dview file(s) to be removed</p>	<p>Removes data base element files from the user's current mapset</p>
<p>g.rename [rast=old,new] [vect=old,new] [icon=old,new] [labels=old,new] [sites=old,new] [region=old,new] [group=old,new] [3dview=old,new]</p>	<p>Parameters: rast rast file(s) to be renamed vect vect file(s) to be renamed icon icon file(s) to be renamed labels labels file(s) to be renamed sites sites file(s) to be renamed region region file(s) to be renamed group group file(s) to be renamed 3dview 3dview file(s) to be renamed</p>	<p>To rename data base element files in the user's current mapset</p>
<p>p.map [input=name] [scale=mapscale]</p>	<p>Parameters: input file containing mapping instructions (or use input=- to enter from keyboard) scale scale of the output map, e.g. 1:25000 (default: 1panel)</p>	<p>Hardcopy color map output utility</p>

Chapter 6

New developments until 2015

Stefan Liersch

6.1 Introduction

In the last couple of years the eco-hydrological model SWIM (Soil and Water Integrated Model) was applied to many different river basins worldwide in order to study the impacts of changes in climate, land use, and water management. Challenged by new and sometimes rather specific requirements, the SWIM community developed approaches to answer these research questions. For example, to tackle land and water management issues, the reservoir, water allocation and irrigation, and crop rotation modules were developed. Moreover, climatic conditions in regions differing from Central Europe or the application to large river basins (up to 2.2 million km²) required adaptation of existing or the development of new functionalities, such as the snow and glacier module or the possibility to calibrate SWIM at the subcatchment scale.

These modules were implemented in different versions or *branches* of the SWIM model by different persons. Now, it was time to implement all those developments in the SWIM *trunk* or *master* version, giving the user the opportunity to use or not to use these new functionalities by switching modules on or off.

The purpose of this manual is to introduce the user briefly to the functionality of the different modules and to describe the required input files in detail.

Some output files have changed in their formatting and number of columns.

The asterisk (*) is a placeholder for the project name.

6.2 git SWIM repository

The SWIM code, documentation, and the control files are centrally stored in the *swim.git* repository on the PIK GitLab:

```
https://gitlab.pik-potsdam.de/swim/swim
```

6.2.1 Clone repository from cluster to your local machine

In order to create a copy (clone) of the repository on your local machine, navigate to a directory (on the local machine) where you want the repository to be located. Execute:

```
git clone username@cluster.pik-potsdam.de:/data/swim/swim.git
```

replace *username* by your PIK account name. This will create the entire repository (including the SWIM code, the documentation, and the example control files) in the given directory.

6.2.2 Create a new branch or use the master (trunk version)?

If you intend to develop new and specific functionalities in SWIM **that are not supposed to be implemented in the master branch (trunk version)**, you should definitely create a new branch. This might be the case, if you have to adapt the SWIM model to very specific requirements of your catchment. If you are going to work on the master branch (trunk version), e.g. to implement a new module into the SWIM trunk version or to fix a bug, you need to switch to the master branch (see Section Section 6.2.2).

Creating a new branch

```
git checkout -b branchname
```

This will create a new branch *branchname* of the SWIM repository on your local machine. The original files are base on the master branch.

Delete a branch

```
git branch -d branchname
```

This will delete the branch *branchname* on your local machine.

Commit all your changes locally

To commit your changes on your local machine (without pushing them to the branch on the cluster), type the following:

```
git commit -a -m"your comment briefly describing the changes you made"
```

This works similarly for committing changes to your branch or the master (trunk version), depending on the branch you are currently logged in.

Switch between branches

You can switch between the master branch and any other branch with the *checkout* command. If you made changes in the current branch without committing them, you cannot switch branches. So, commit your changes first, otherwise they may get lost!

```
git checkout master  
git checkout branchname
```

The first line would switch to the master branch (trunk version) and the second to the branch *branchname*.

Commit your local changes to your branch or the master branch on the cluster

```
git push -u origin branchname
```

In case you are committing your changes to the master branch (trunk version), the *branch-name* is *master*.

6.2.3 Some other useful git commands

To show in which branch you are currently in and the files that have been changed but not yet committed:

```
git status
```

To open the graphical git repository browser:

```
gitk (only current branch)  
gitk --all (shows all branches)
```

You may have to install *gitk* first. On Ubuntu Linux it is as simple as:

```
sudo apt-get install gitk
```

6.2.4 Working on the SWIM documentation

If you are modifying the SWIM documentation (Latex file), you must always work in the master branch before you commit and/or push your changes! See Section Section 6.2.2 how to switch to the master branch.

6.3 Input Files

6.3.1 swim.conf

6.3.2 Basin input file (*.bsn)

The *.bsn file (the asterisk stands for the project name) consists of basically two sections. The first section (lines 2-12) contains switch parameters used to switch specific modules or functions ON or OFF. The second section (lines 14-48) comprises global parameter settings, such as correction factors for calibration parameters. Note that not all of these values are always used by the model because some of them may be overwritten if the subcatch switch (subcatchment calibration) is used.

```
SWITCH PARAMETERS
0   isc          =0/1 SC: read/calc
0   icn          =0/1 CN: dif for soils/cnum1,cnum3 for all
0   idlef        =0/1 day length effect in crop: without/with
1   intercep     =0/1 INTERCEPTION: WITHOUT/WITH
2   iemeth       =0/1,2 EVAPORATION: Priestley-Taylor/Turc-Ivanov / Turc-Ivanov no monthly correction
0   idvdk        =0/1 EVAPORATION CALCULUS: DVNK-Merkblatt 238
1   subcatch     =0/1, all subs same parameters/individual parameterization (requires input files subcatch.def and subcatch.bsn)
0   bResModule   =0/1, reservoir module off / reservoir module on
0   bSnowModule  =0/1, snow module off / snow module on 1 NOTE: This module is also extremely useful for mountainous catchments not af
1   radiation    =0/1, 0 = read radiation data from clim1; 1 = calculate radiation after Hargreaves (latitude in degrees in file stat-
1   bDormancy    =0/1, day length threshold for dormancy of natural vegetation: 0 = do not limit or extent; 1 = calculate from subbasin
0   bRunoffDat   =0/1, 0 = do not read runoff.dat; 1 = read runoff.dat (required only to calculate performance criteria during runtime
1   b3SubFiles   =0/1, 0 = read single .sub, .rte, .gw files from 'Sub' directory; 1 = read only three files from directory 'Sub'

-----
BASIN, INITIALIZATION & CALIBRATION PARAMETERS
da
1012.00
cnum1  cnum2  cnum3          BASIN PARAMETERS
2          1          2          Curve number, if icn=1
ecal   thc   epco   ec1          EVAPORATION PARAMETERS
1.2    1.0   1.0   0.135
gwq0   abf0   bff          Groundwater parameters
0.200  0.500  1.0
ekc0   prf   spcon   spexp   Erosion parameters
1.000  1.000  0.0000  1.000
snow1  storc1  stinco          Initial water storage
0.000  0.500  0.900
chwc0  chxkc0  chcc0   chnc0   Channel parameters
1.0    1.0   1.000  1.0
roc1   roc2   roc3   roc4          Routing coefficients
1.000  9.000  1.000  9.000
sccor  prcor  rdcor          Correction factors
1.500  1.000  1.000
retNsur  retNsub  retNgrw  retPsur  N & P RETENTION TIME
5.000  365.000  15000.000  20.000
degNsur  degNsub  degNgrw  degPsur  N & P DECOMPOSITION RATE
0.020  0.300  0.300  0.020
tsnfall  tmelt   smrate  gmrate          SNOW FALL&MELT PARAMETERS
0.000  0.000  1.000  1.0
xgrad1  tgrad1  ulmax0  rnew          ELEVATION-BASED CORRECTION FOR PRECIP AND TEMPERATURE
0.0000  -0.00  1.0   0.08
tlrch   evrch   tlgw          TRANSMISSION LOSSES (TL) OF CHANNELS
1.0    1.0   1          # tlgw: 0 = TL to shallow aquifer, 1 = TL to deep gw, 2 = to both in equal terms
maxup          Riparian zone parameters
7.00000

-----
CO2 EFFECT ON NET PHOTOSYNTHESIS (alpha) & TRANSPIRATION (beta)
(ialpha,ibeta) = (1,0) OR (1,1) ONLY FOR SCENARIO PERIODS!
ialpha  ibeta  C3C4crop  CO2-ref  CO2-scen
0/1     0/1     0/4       346      406-436  OPTIONS & RANGES
0       0       0         0        0
```

Figure 6.1: Example of a *.bsn file

SWITCH parameters (*.bsn)

Table 6.1: SWITCH parameters *.bsn

Parameter	Description
isc	Soil saturated conductivity (read or calculate) 0 = read saturated conductivity values from soil parameter files (recommended) 1 = calculate from clay content, sand content and porosity using the method of Brakensiek
icn	Curve number values 0 = read curve number values from *.lut (recommended) 1 = use curve number values cnum1, cnum2, cnum3 provided in the parameter section of the *.bsn file for all soils and land use categories
idlef	Day length effect in crops. 0 = with day length effect 1 = without day length effect
intercep	Interception of vegetation canopy 0 = no interception storage 1 = use interception storage (recommended)
iemeth	Method to calculate potential evapotranspiration 0 = Priestley-Taylor 1 = Turc-Ivanov (in this case, you may specify monthly correction factors for your catchment. The hardcoded values in evap.f are adapted to the Elbe catchment in Germany) 2 = Turc-Ivanov, but monthly correction deactivated! Monthly correction factor = 1.0
idvwk	Potential evaporation calculation according to DVWK-Merkblatt 238 0 = standard 1 = use DVWK method
subcatch	Calibration of some global basin and ground water parameters at the entire basin scale (parameters valid for all subbasins) or at the subcatchment scale (individual settings for grouped subbasins), see Section Section 6.4.1 for more detailed description and requirements.

...Table SWITCH parameters continued

Parameter	Description
	0 = using the same setting for all subbasins 1 = using different settings for grouped subbasins (subcatchments)
landmgt	Crop management and rotations (initcrp.f) 0 = using hardcoded crop rotations for all crop lands (land use ID = 5) 1 = using crop rotation scenarios defined in the external file landmgt.csv, see Section Section 6.4.2 for a more detailed description and requirements.
bResModule	Reservoir module, see Section Section 6.4.3 for a more detailed description and its requirements. 0 = not used 1 = used
bSnowModule	Snow module, see Section Section 6.4.4 for a more detailed description and its requirements. 0 = not used 1 = used
radiation	Read or calculate radiation data at subbasin scale, see Section Section 6.4.5 for a more detailed description and its requirements. 0 = reading radiation data from clim1.dat 1 = calculate radiation data after Hargreaves (1985), subroutine <i>hargreaves_rad</i> in readcli.f
bDormancy	Determine dormancy period of natural vegetation 0 = standard method for day length threshold 1 = modifying day length threshold based on subbasins' latitude
bRunoffDat	Input file <i>runoff.dat</i> is “only” used to calculate performance criteria during runtime and is most of the time not required. 0 = do not read runoff.dat (file not required) 1 = read runoff.dat

Global parameters (*.bsn)

Table 6.2: Global parameters *.bsn

Parameter	Description
da	Basin area, km^2 . This is of course not a calibration parameter and should be calculated in GIS or from the *.str file as the sum of HRU areas.
Curve number	
cnum1, cnum2, cnum3	Curve number values (only considered if icn = 1). It is recommended to use the land use-specific curve number values provided in *.lut file (see Section 256) by setting icn = 0.
Evaporation and radiation	
ecal ²⁾	Correction factor for potential evapotranspiration. Recommended range (0.7 - 1.3).
thc ²⁾	Correction factor for potential evapotranspiration on sky emissivity, range (0-1). 0 = without sky emissivity factor.
epco	Factor to limit plant water demand compensation from lower layers. If epco = 1.0, the compensation is not limited.
ec1	Empirical constant in the Hargreaves & Samani (1985) equation used to calculate radiation. The parameter has only an effect, if radiation is calculated based on T_{min} and T_{max} (radiation switch = 1). NOTE: This parameter is very sensitive! And should probably be in the range of 0.1 and 0.2
Ground water	
gwq0 ¹⁾	Initial ground water flow contribution to streamflow, mm/day.
abf0 ¹⁾	Alpha factor for groundwater. This parameter characterizes the ground water recession (the rate at which ground water flow is returned to the stream).
bff ¹⁾	Base flow factor, used to calculate return flow travel time.
Erosion	
ekc0	Soil erodibility correction factor. This parameter is used to correct all values ek() of soil erodibility obtained from soil database.
prf	Coefficient to estimate peak runoff in stream, used in calculation of sediment routing.
spcon	Rate parameter for estimating sediment transport (between 0.0001 and 0.01).
spexp	exponent for estimation of sediment transport (between 1. and 1.5).
Initial water storage	
snow1	Initial snow content in the basin (mm).
storc1	Initial water storage in streams correction coefficient.

...continued

Parameter	Description
stinco1	Initial water content in the basin as a fraction of field capacity.
Channel parameters	
chwc0	Coefficient to correct the channel width for all reaches. The channel width is estimated by GRASS interface.
chxkc0	Correction coefficient for channel USLE K factor
chcc0	Correction coefficient for channel USLE C factor
chnnc0	Correction coefficient for channel Manning's N factor

¹⁾ Can be assigned at the subcatchment level (subcatch.gw).

²⁾ Can be assigned at the subcatchment level (subcatch.bsn).

6.3.3 *.cod

6.3.4 file.cio

6.3.5 Structure file (*.str)

HRU definition.

Created by GIS during the pre-processing.

Some specific modules require a column in the structure file (*.str), regardless whether they are used in the simulation or not. The structure of the *.str file is always the same.

Column 1 is the subbasin number, column 2 the land use ID, column 3 the soil ID, column 4 the land management ID, column 5 the wetland ID, the HRU elevation, column 6 the initial glacier depth, column 7 the HRU area, column 8 the number of cells and column 9 the irrigation ID.

6.3.6 *.lut (formerly cntab.dat)

The input file **.lut* contains land use type-specific parameters. Four curve number values for the four soil hydrological groups, the maximum canopy storage for interception (mm) and the vegetation type (icnum) in the crop.dat (see Figure Figure 6.2).

6.3.7 stat-outdat.csv

This new input file provides the latitude and elevation for each subbasin. The latitude is required to calculate the day length for each subbasin individually instead of using the

LU_ID	name	icnum	type	canmx	cn2a	cn2b	cn2c	cn2d	lu_ETcor
1	WATR	0	3	0.0	100.0	100.0	100.0	100.0	1.3
2	SETT	0	0	0.0	72.0	79.0	85.0	88.0	1.0
3	INDU	0	0	0.0	81.0	88.0	91.0	93.0	1.0
4	ROAD	0	0	0.0	98.0	98.0	98.0	98.0	1.0
5	CROP	0	1	2.0	65.0	75.0	82.0	86.0	0.9
6	SETA	51	2	2.0	66.0	77.0	85.0	89.0	0.9
7	GREX	46	2	2.0	30.0	58.0	71.0	78.0	1.0
8	GRIN	47	2	2.0	49.0	69.0	79.0	84.0	1.0
9	FRST	61	4	2.5	36.0	60.0	73.0	79.0	1.14
10	FRSE	60	4	2.0	36.0	60.0	73.0	79.0	1.19
11	FRSD	59	4	3.0	36.0	60.0	73.0	79.0	1.1
12	WETN	55	2	2.0	85.0	85.0	85.0	85.0	1.3
13	WETF	63	4	2.5	85.0	85.0	85.0	85.0	1.3
14	HETH	50	2	2.0	35.0	56.0	70.0	77.0	1.0
15	BARE	0	0	0.0	77.0	86.0	91.0	94.0	0.9

Figure 6.2: Example of a *.lut file

catchments' average latitude from *wgen.dat*. This is particularly important for large river basin stretching from South to North, like the Nile basin, for instance.

The file consists of four columns (Subbasin ID, Longitude, Latitude, Elevation). This file is usually generated for interpolating the climate data to the subbasin centroids. But note that the coordinates used for interpolation are always in a metric geographic coordinate system like UTM or LAEA. **The unit for longitude and latitude in this file have to be in decimal degree and the elevation in m.a.s.l.**

6.3.8 runoff.dat

The *runoff.dat* can either be used to evaluate discharge simulations during runtime and/or to substitute simulated discharges in headwater subbasins with discharge observations. This is actually extremely useful for calibration. The *runoff.dat* has a header column (YEAR MONTH DAY *obs₁...obs_n*). The first column in the second row indicates the number of observation columns provided in this file. The values in the second and third column are only dummies (placeholder for columns MONTH and DAY) and can contain any integer number. The following columns indicate the subbasin numbers corresponding to the discharge gauges. Time series data of daily observed discharges start in the third row (see Table Table 6.3).

Table 6.3: runoff.dat example

YEAR	MONTH	DAY	obs1	obs2
2	0	0	110	120
1979	1	1	230.4	523.5
1979	1	2	233.5	526.3
...				

6.4 Modules

6.4.1 Subcatchment calibration

6.4.2 Crop management and rotations

6.4.3 Reservoir Module

6.4.4 Snow Module

6.4.5 Calculation of radiation data

New parameter *ec1* in *.bsn file. *ec1* represents an empirical constant in the Hargreaves (1985) equation. Appropriate values are probably between 0.1 and 0.2. But this needs to be varified from the publication.

6.4.6 Transmission losses

The calibration parameters *tlrch* and *evrch* in the *.bsn file can be used to account for transmission losses in the river bed (channel losses) and from the river surface area (evaporative losses), respectively. A value of 0.0 means no losses.

The parameter *tlgw* is used to determine to which ground water component the channel losses are attributed to. They can either be added fully to the shallow ground water storage (*tlgw* = 0, in this case the increasing shallow ground water storage can lead to increasing ground water contribution), fully to the deep ground water storage (*tlgw* = 1, in this case the water is lost from the system but appears in the water balance), or to both components in equal terms (*tlgw* = 2).

Due to the fact that the transmission losses are computed in the routing process (after the subbasin cycle), the losses are abstracted from the routed discharge. Hence, the possibly increasing actual evapotranspiration from the river water surface in the respective subbasin cannot be attributed to the subbasins' actual evapotranspiration but it is accounted for in the water balance output files (*bad.prn*, *bam.prn*, *bay.prn*, and *bay_sc.csv*).

6.5 The SWIM Code under Subversion

We are using Subversion as a version control system to maintain the SWIM code. To “download” the recent SWIM repository, you can use the following command in the terminal:

```
svn checkout http://subversion.pik-potsdam.de/svn/Swim/trunk/Code
```

The WebSVN page for SWIM is: <http://subversion.pik-potsdam.de/websvn/listing.php?repname=Swim&path=%2F&sc=0>

6.6 Miscellaneous changes

6.6.1 Subbasin fractional area

The subbasin area as a fraction of the total catchment area (*flu*) was read from the *.sub files in subroutine *readsub.f*. Hence, the corresponding value was calculated by the GIS in the pre-processing. In order to use consistent area values in SWIM, the fractional subbasin area is calculated from HRU areas provided in the *str*-file. Therefore, reading of *flu* in *readsub.f* is omitted and included in *readsub.f90*.

```
flu(j) = sbar(j) / (da*10**6)
```

6.6.2 Conversion to double precision

All real variables (single precision) were converted to double precision *real(8)*. In this course, some intrinsic functions had to be adapted *alog* → *dlog*; *alog10* → *LOG10*

References

- Arnold, J. G., P. M. Allen, and G. Bernhardt (n.d.). “A Comprehensive Surface-Groundwater Flow Model”. In: 142.1-4 (), pp. 47–69. ISSN: 0022-1694. DOI: [10.1016/0022-1694\(93\)90004-S](https://doi.org/10.1016/0022-1694(93)90004-S).
- Arnold, JG et al. (n.d.[a]). “SWAT-Soil & Water Assessment Tool. USDA”. In: ().
- Arnold, J.G. et al. (n.d.[b]). *SWRRB: A Basin Scale Simulation Model for Soil and Water Resources Management*. Texas A & M University Press College Station, TX. ISBN: 0-89096-337-1.
- BEVEN, Keith J and Michael J Kirkby (n.d.). “A Physically Based, Variable Contributing Area Model of Basin Hydrology/Un Modèle à Base Physique de Zone d’appel Variable de l’hydrologie Du Bassin Versant”. In: 24.1 (), pp. 43–69. ISSN: 0303-6936.
- Cosby, B. J. et al. (n.d.). “A Statistical Exploration of the Relationships of Soil Moisture Characteristics to the Physical Properties of Soils”. In: 20.6 (), pp. 682–690. ISSN: 1944-7973. DOI: [10.1029/WR020i006p00682](https://doi.org/10.1029/WR020i006p00682).
- Doorenbos, J and AH Kassam (n.d.). “Yield Response to Water”. In: 33 (), p. 257.
- Eamus, D (n.d.). “The Interaction of Rising CO₂ and Temperatures with Water Use Efficiency”. In: 14.8 (), pp. 843–852. ISSN: 0140-7791.
- Ehlschlaeger, Charles R (n.d.). “Using the AT Search Algorithm to Develop Hydrologic Models from Digital Elevation Data”. In: pp. 275–281.
- Goudriaan, J and P Ketner (n.d.). “A Simulation Study for the Global Carbon Cycle, Including Man’s Impact on the Biosphere”. In: 6.2 (), pp. 167–192. ISSN: 0165-0009.
- Grossman, S et al. (n.d.). “Simulated Responses of Energy and Water Fluxes to Ambient Atmosphere and Free-Air Carbon Dioxide Enrichment in Wheat”. In: (), pp. 601–609. ISSN: 0305-0270.
- Harley, PC et al. (n.d.). “Modelling Photosynthesis of Cotton Grown in Elevated CO₂”. In: 15.3 (), pp. 271–282. ISSN: 0140-7791.
- Hooghoudt, SB (1940). *Bijdragen Tot de Kennis van Eenige Natuurkundige Grootheden van Den Grond: Algemeene Beschouwing van Het Probleem van de Detailontwatering En de Infiltratie Door Middel van Parallel Loopende Drains, Greppels, Sloten En Kanalen*. Algemeene Landsdrukkerij.
- Jarvis, Paul Gordon and KG McNaughton (n.d.). “Stomatal Control of Transpiration: Scaling up from Leaf to Region”. In: *Advances in Ecological Research*. Vol. 15. Elsevier, pp. 1–49. ISBN: 0065-2504.
- Jones, CA (n.d.). *C-4 Grasses and Cereals*. John Wiley & Sons, Inc.

- Jones, CA et al. (n.d.). “A Simplified Soil and Plant Phosphorus Model: I. Documentation 1”. In: 48.4 (), pp. 800–805. ISSN: 0361-5995.
- Kimball, BA et al. (n.d.[a]). “Free-air CO₂ Enrichment and Soil Nitrogen Effects on Energy Balance and Evapotranspiration of Wheat”. In: 35.4 (), pp. 1179–1190. ISSN: 0043-1397.
- Kimball, Bruce A et al. (n.d.[b]). “Productivity and Water Use of Wheat under Free-air CO₂ Enrichment”. In: 1.6 (), pp. 429–442. ISSN: 1354-1013.
- Knisel, Walter G (n.d.). “CREAMS: A Field Scale Model for Chemicals, Runoff, and Erosion from Agricultural Management Systems [USA]”. In: ().
- Krysanova, V, A Becker, and B Klöcking (n.d.). “The Linkage between Hydrological Processes and Sediment Transport at River Basin Scale”. In: (), pp. 13–20. ISSN: 0144-7815.
- Krysanova, V and H Luik (n.d.[a]). “Simulation Modeling of a System Watershed-River-Sea Bay”. In: ().
- (n.d.[b]). “Simulation Modeling of a System Watershed-River-Sea Bay”. In: ().
- Krysanova, V et al. (n.d.[a]). “The Linkage between Hydrological Processes and Sediment Transport at the River Basin Scale—a Modelling Study”. In: 147 ().
- Krysanova, Valentina and Alfred Becker (n.d.[a]). “Integrated Modelling of Hydrological Processes and Nutrient Dynamics at the River Basin Scale”. In: 410 (), pp. 131–138. ISSN: 0018-8158. DOI: [10.1023/A:1003728419934](https://doi.org/10.1023/A:1003728419934).
- (n.d.[b]). “Integrated Modelling of Hydrological Processes and Nutrient Dynamics at the River Basin Scale”. In: 410 (), pp. 131–138. ISSN: 0018-8158.
- Krysanova, Valentina, Dirk-Ingmar Müller-Wohlfeil, and Alfred Becker (n.d.). “Development and Test of a Spatially Distributed Hydrological/Water Quality Model for Mesoscale Watersheds”. In: 106.2-3 (), pp. 261–289. ISSN: 0304-3800.
- Krysanova, VALENTINA et al. (n.d.[b]). “Factors Affecting Nitrogen Export from Diffuse Sources: A Modelling Study in the Elbe Basin”. In: (), pp. 201–212. ISSN: 0144-7815.
- Krysanova, Valentina et al. (n.d.[c]). “Mesoscale Ecohydrological Modelling to Analyse Regional Effects of Climate Change”. In: 4.4 (), pp. 259–271. ISSN: 1420-2026. DOI: [10.1023/A:1019020518977](https://doi.org/10.1023/A:1019020518977).
- (n.d.[d]). “Mesoscale Ecohydrological Modelling to Analyse Regional Effects of Climate Change”. In: 4.4 (), pp. 259–271. ISSN: 1420-2026.
- Kuchment, LS (n.d.). “The Construction of Continental Scale Models of the Terrestrial Hydrological Cycle: An Analysis of the State-of-the-Art and Future Prospects”. In: *Advances in Theoretical Hydrology*. Elsevier, pp. 113–127.
- Lane, Leonard J (n.d.). “Distributed Model for Small Semi-Arid Watersheds”. In: 108.10 (), pp. 1114–1131. ISSN: 0733-9429.
- Leonard, RA, WG Knisel, and DA Still (n.d.). “GLEAMS: Groundwater Loading Effects of Agricultural Management Systems”. In: 30.5 (), pp. 1403–1418.
- Maidment, David R (n.d.[a]). “GIS and Hydrologic Modeling-an Assessment of Progress”. In: .
- Maidment, D.R. (n.d.[b]). *Handbook of Hydrology*. McGraw-Hill.
- McElroy, AD (n.d.). *Loading Functions for Assessment of Water Pollution from Nonpoint Sources*. Vol. 1. US Environmental Protection Agency, Office of Research and Development ...

- Menzel, RG (n.d.). “Enrichment Ratios for Water Quality Modeling”. In: ().
- Mitasova, Helena et al. (n.d.). “Modelling Topographic Potential for Erosion and Deposition Using GIS”. In: 10.5 (), pp. 629–641. ISSN: 0269-3798.
- Monsi, Masami (n.d.). “Über Den Lichtfaktor in Den Pflanzen-Gesellschaften Und Seine Bedeutung Fur Die Stoffproduktion”. In: 14 (), pp. 22–52.
- Monteith, John L (n.d.[a]). “Evaporation and Environment”. In: vol. 19. Cambridge University Press (CUP) Cambridge, pp. 205–234.
- Monteith, John Lennox (n.d.[b]). “Climate and the Efficiency of Crop Production in Britain”. In: 281.980 (), pp. 277–294. ISSN: 0080-4622.
- Morrison, JIL (n.d.). “Response of Plants to CO₂ under Water Limited Conditions.” In: 104/105 (), pp. 193–209.
- Peart, RM et al. (n.d.). “Impact of Climate Change on Crop Yield in the South-Eastern USA”. In: *The Potential Effects of Global Climate Change on the United States*. US Environmental Protection Agency.
- Rawls, W Jo and DL Brakensiek (n.d.). “Prediction of Soil Water Properties for Hydrologic Modeling”. In: ASCE, pp. 293–299.
- Richardson, Clarence W and Joe T Ritchie (n.d.). “Soil Water Balance for Small Watersheds”. In: 16.1 (), pp. 72–0077.
- Ritchie, Joe T (n.d.). “Model for Predicting Evaporation from a Row Crop with Incomplete Cover”. In: 8.5 (), pp. 1204–1213. ISSN: 0043-1397.
- Rotmans, J and MGJ Den Elzen (n.d.). “Modelling Feedback Mechanisms in the Carbon Cycle: Balancing the Carbon Budget”. In: 45.4 (), pp. 301–320. ISSN: 0280-6509.
- Sangrey, D., K. Harrop-Williams, and J. Klaiber (n.d.). “Predicting Groundwater Response to Precipitation”. In: 110.7 (), pp. 957–975. ISSN: 0733-9410. DOI: [10.1061/\(ASCE\)0733-9410\(1984\)110:7\(957\)](https://doi.org/10.1061/(ASCE)0733-9410(1984)110:7(957)).
- Schulze, RE (n.d.). *Hydrology and Agrohydrology*. University of Natal, Pietermaritzburg, South Africa.
- Seligman, NG and HV Keulen (n.d.). “4.10 PAPRAN: A Simulation Model of Annual Pasture Production Limited by Rainfall and Nitrogen”. In: 192 ().
- Sloan, Patrick G et al. (n.d.). “Modeling Surface and Subsurface Stormflow on Steeply-Sloping Forested Watersheds”. In: ().
- Smedema, LK and DW Rycroft (n.d.). *Land Drainage - Planning and Design of Agricultural Drainage Systems*. Cornell University Press.
- Smith, RE (1992). *Opus: An Integrated Simulation Model for Transport of Nonpoint-Source Pollutants at the Field Scale. Volume 1, Documentation. Research Report*. Agricultural Research Service, Albany, CA (United States). Western ...
- Srinivasan, R. and J. G Arnold (n.d.). “INTEGRATION OF A BASIN-SCALE WATER QUALITY MODEL WITH GIS1”. In: 30.3 (), pp. 453–462. ISSN: 1752-1688. DOI: [10.1111/j.1752-1688.1994.tb03304.x](https://doi.org/10.1111/j.1752-1688.1994.tb03304.x).
- Srinivasan, Raghavan et al. (n.d.[a]). “Hydrologic Unit Model for the United States (HUMUS)”. In: (), pp. 451–456.
- (n.d.[b]). “Hydrologic Unit Model for the United States (HUMUS)”. In: (), pp. 451–456.
- USACE, US Army Corps of Engineers (n.d.). “GRASS. 4.1 Reference Manual”. In: ().

- USDA, SCS (n.d.[a]). "National Engineering Handbook, Hydrology, Section 4". In: ().
- (n.d.[b]). "National Engineering Handbook, Hydrology, Section 4". In: ().
- Venetis, C (n.d.). "A Study of the Recession of Unconfirmed Aquifers". In: 14.4 (), pp. 119–125.
- Vereecken, H et al. (n.d.). "Deriving Pedotransfer Functions of Soil Hydraulic Properties, in Land Qualities in Space and Time". In: *Proceedings of Symposium of the Int. Soc. Of Soil Science (ISSS), Wageningen, the Netherlands 22-26 August*. Ed. by J Bouma and AK Bregt. Pudoc. P., pp. 121–124.
- Wechsung, Frank et al. (n.d.). "May Land Use Change Reduce the Water Deficiency Problem Caused by Reduced Brown Coal Mining in the State of Brandenburg?" In: 51.2-4 (), pp. 177–189. ISSN: 0169-2046.
- Williams, JR (n.d.[a]). "Sediment Routing for Agricultural Watersheds 1". In: 11.5 (), pp. 965–974. ISSN: 1093-474X.
- (n.d.[b]). "Spnm, a Model for Predicting Sediment, Phosphorus, and Nitrogen Yields from Agricultural Basins 1". In: 16.5 (), pp. 843–848. ISSN: 1093-474X.
- Williams, JR and HD Berndt (n.d.). "Sediment Yield Prediction Based on Watershed Hydrology". In: 20.6 (), pp. 1100–1104.
- Williams, JR and RW Hann (1978). *Optimal Operation of Large Agricultural Watersheds with Water Quality Restraints*. Texas Water Resources Institute.
- Williams, JR and KG Renard (n.d.). "Assessments of Soil Erosion and Crop Productivity with Process Models (EPIC)". In: (), pp. 67–103. ISSN: 0891182519.
- Williams, JR, KG Renard, and PT Dyke (n.d.). "EPIC: A New Method for Assessing Erosion's Effect on Soil Productivity". In: 38.5 (), pp. 381–383. ISSN: 0022-4561.
- Wischmeier, Walter H and Dwight David Smith (n.d.). "Predicting Rainfall Erosion Losses—a Guide to Conservation Planning." In: ().
- Young, RA et al. (n.d.). "AGNPS: A Nonpoint-Source Pollution Model for Evaluating Agricultural Watersheds". In: 44.2 (), pp. 168–173. ISSN: 0022-4561.

Acknowledgements

The authors are grateful to the German Ministry for Education and Research (BMBF) for financial support during the model development and validation (project „Elbe Ecology“), and to all Institutions, which provided necessary data. Many thanks to Sybill Schaphoff and Marcus Erhard for spatial data preparation in ARC/INFO, to Reinhard Weng for designing Figures 2.14, 2.23 and 2.24, and Fred Hattermann for his review of the manuscript.